


Panasonic®

Operating Instructions
(Household) Facial Ionic Steamer
Model No. EH-SA97

English.....3

中文25

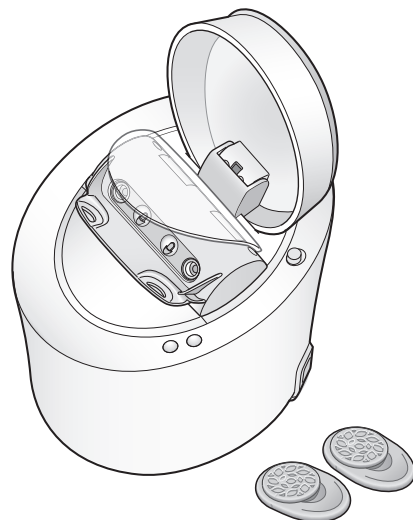

Operating Instructions (Household) Facial Ionic Steamer Model No. EH-SA97

Contents

Safety precautions.....	4	Cleaning	16
Parts identification	8	How to attach each part.....	18
Course description.....	9	FAQ	18
Before Use.....	10	Problem notification function of the lamps	20
Preparation.....	12	Troubleshooting	21
How to use the steamer	13	Specifications	24
After use	15		

Thank you for purchasing this Panasonic product.

Before operating this unit, please read these instructions completely and save them for future use.

Safety precautions

To reduce the risk of injury, loss of life, electric shock, fire, and damage to property, always observe the following safety precautions.

Explanation of symbols

The following symbols are used to classify and describe the level of hazard, injury, and property damage caused when the denotation is disregarded and improper use is performed.



WARNING

Denotes a potential hazard that could result in serious injury or death.



CAUTION

Denotes a hazard that could result in minor injury or property damage.

The following symbols are used to classify and describe the type of instructions to be observed.



This symbol is used to alert users to a specific operating procedure that must not be performed.



This symbol is used to alert users to a specific operating procedure that must be followed in order to operate the unit safely.



WARNING

► To prevent skin or health problems

Pregnant women should not use this appliance.



- Doing so may cause problems with skin due to hormone imbalance.



Do not use the appliance by persons who are unable to feel heat.

- Doing so may cause burns or scalding.

The following persons should not use this appliance.

- Persons who have allergies or sensitive skin
- Persons with skin diseases or atopic dermatitis
- Persons with epilepsy or blood pressure abnormalities



Do not use the appliance in following cases:

- When your skin is damaged or you have eczema or a swelling
 - When there are abnormalities on the skin such as dermatitis or extreme sunburns
- Doing so may cause problems with skin or body.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

- Failure to do so may cause accidents or injury.



WARNING



Immediately stop using if you experience any pain or abnormalities on your skin or throughout your body.

- Failure to do so may cause problems with skin or body.

► This product

Do not store within the reach of children or infants. Do not let them use it.



- Doing so may cause burns or scalding, electric shock, or injury.

Also, putting aroma tablets, etc. in the mouth may cause accidents and problems.



Do not allow a child to lick the appliance plug.

- Doing so may cause burns, electric shock, or injury.



Do not use in proximity of flammable materials (such as alcohol, benzene, thinner, spray, hair care product, nail polish remover).

- Doing so may cause an explosion or fire.



Do not drop or subject to shock.

- Doing so may cause electric shock or ignition.



Use the water supply tank to supply water to the appliance, and make sure that the appliance and the operation display panel do not get wet when filling the water tank.

- Doing so may cause electric shock, burns, or fire due to a short circuit.



Do not use the appliance with a wet hand.

- Doing so may cause electric shock or fire due to a short circuit.



Do not use or store the appliance in bathroom or in other rooms with high humidity. Do not place the appliance where it may get wet (such as next to wash basin).

- Doing so may cause electric shock or fire.



Do not insert metal objects such as pins, wires, or any other foreign object in the various outlets or the filter, and do not block them.

- Doing so may cause electric shock.



Never modify, disassemble, or repair.

- Doing so may cause ignition or injury due to abnormal operation.

Contact an authorized service center for repair.



After use, the appliance should be cleaned to avoid the accumulation of grease and other residues.

- Failure to do so may cause skin and body discomfort.

► In case of an abnormality or malfunction

Immediately stop using and remove the power plug if there is an abnormality or malfunction.

- Failure to do so may cause fire, electric shock, or injury.



<Abnormality or malfunction cases>

• The cord is damaged

• The main unit is deformed or smells of burning.

- Immediately request inspection or repair at an authorized service center.

► Power cord

Do not damage or modify, or forcefully bend, pull, or twist the power cord.



Also, do not place anything heavy on or pinch the cord. Do not allow pins or trash to adhere to the power plug the appliance plug.

- Doing so may cause electric shock or fire due to a short circuit.



WARNING



Do not use when the power cord is damaged or hot. Never use the appliance if the power plug fits loosely in a household outlet.

- Doing so may cause burns, electric shock, or fire due to a short circuit.



Do not use anything other than the supplied power cord. Also, do not use any other product with the supplied power cord.

- Doing so may cause burns or fire due to a short circuit.



Do not use in a way exceeding the rating of the household outlet or the wiring.

- Exceeding the rating by connecting too many plugs to one household outlet may cause fire due to overheating.



Do not plug or unplug the power plug and appliance plug into power outlets and the main unit with wet hands.

- Doing so may cause electric shock or injury.



When storing, do not wrap the power cord around the main unit.

- Doing so may cause the wire in the power cord to break with the load, and may cause electric shock or fire due to a short circuit.



Always ensure the appliance is operated on an electric power source matched to the rated voltage indicated on the appliance.

Fully insert the power plug or the appliance plug.

- Failure to do so may cause fire, or electric shock.



Periodically clean to ensure dust does not accumulate on the power plug or the appliance plug.

- Failure to do so may cause fire due to insulation failure caused by humidity.

Disconnect the power plug and wipe with a dry cloth.



If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.

- Failure to do so may cause accidents or injury.



CAUTION

► **To prevent skin or health problems**



Do not use this appliance for purposes other than care of the face and décolleté (chest).

- Doing so may cause burns or scalding.

► **Power cord**



Disconnect the power plug or the appliance plug by holding onto it instead of pulling on the cord.

- Failure to do so could place an excessive load on the power cord, damaging it and leading to burns, electric shock, or fire due to short circuit, etc.



Disconnect the power plug from the household outlet when not using.

- Failure to do so may cause electric shock or fire due to electrical leakage resulting from insulation deterioration.


CAUTION

► Note the following precautions

Do not put anything other than distilled water or purified water into the water supply tank.

Keep your face at least 20 cm from the edge of the nozzle guard.

When using steam, do not wipe off the water droplets that may get on the aroma tablet or aroma holder.


 **Steam continues to be emitted (for about 1 minute) after the power has been cut off. Stay away from the warm steam outlet immediately after use.**

Do not touch the steam in following cases:

- When adjusting the angle of the steam outlets
- When operating the switches
- When opening and closing the lid
- Doing so may cause burns or scalding.

 **Do not close the lid when using steam.**


- The hot steam is emitted from around the lid and may cause burns or scalding.

 **Do not tilt, shake, or move the appliance or do not attach or remove the water supply tank during use or within 10 minutes after use.**

- A large volume of steam is emitted and hot water is spilt out from the steam outlet and cause burns or scalding.

 **Use on a flat surface. Not for handheld use.**

- Doing so may cause burns, scalding or injury.

 **Except when cleaning, do not shake the main unit when it contains water.**

- Hot water may splatter from the warm steam outlet and cause burns or scalding.

When disposing of the water after use, hold the appliance so that your hands are not exposed to the hot water.



Exercise caution with the hot temperature of the water supply tank after use.

- Failure to do so may cause burns or scalding.

Aroma tablets



WARNING


 **Do not store within the reach of children or infants. Do not let them use it.**

- Putting in the mouth may cause accidents and problems.

 **Do not use aroma tablets near flames.**

- Doing so may cause fire.

Never disassemble.

 **Do not drip aromatic oil, etc. onto the aroma tablets from above.**

- Doing so may cause accidents or problems.



Always use the specified aroma tablets.

- Failure to do so may cause skin or health problems.



CAUTION



Do not attach or remove aroma tablets during use.

- Doing so may cause burns or scalding.



Do not use aroma tablets in the room where small animals are present.

- They may adversely affect the animals.


CAUTION



When using aroma tablets, be sure to set them in the aroma holder correctly.


- Failure to do so may cause burns or scalding.

Parts identification

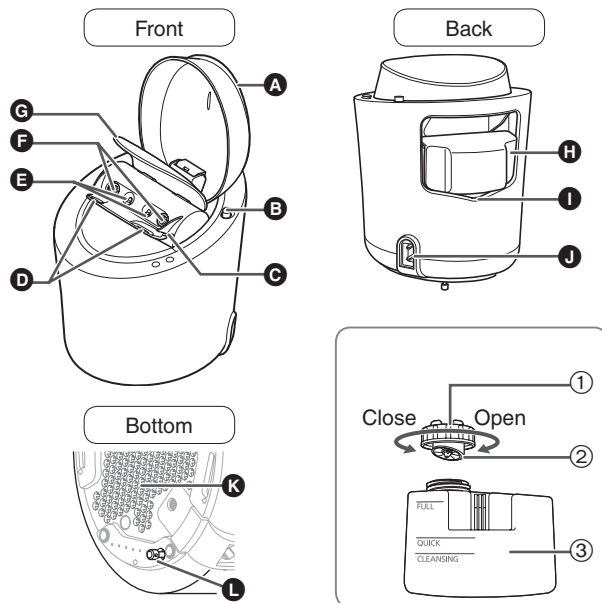

- A** Lid
- B** Power switch [0/1]
- C** Nozzle adjustment knob (x2)
- D** Aroma holder (x2)
- E** Cool mist outlet (x2)
- F** Warm steam outlet (x2)
- G** Nozzle guard

- H** Water supply tank
 - ① Water supply cap
 - ② Water supply cap seal
 - ③ Tank
- I** Water outlet
- J** Appliance socket
- K** Filter
- L** Inclination switch

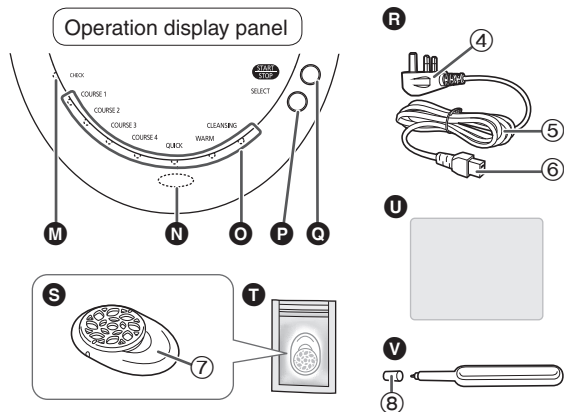**M CHECK lamp****N Warm steam/cool mist lamp**

Glowes red: warm steam

Glowes blue: cool mist

Blinks blue: mild mist

O Course indication lamps

COURSE1: Clear skin

COURSE2: Skin fitness/
Elasticity

COURSE3: Sebum care

COURSE4: Soft skin

QUICK: Quick heating &
cooling

WARM: Warm steam

CLEANSING: Cleansing

P SELECT switch**Q STOP/START switch****R Power cord**

④ Power plug

⑤ Cord

⑥ Appliance plug

Accessories**S Aroma tablet (sample for trial)**

Lavender 2 pcs.

[Lasts for approximately
15 applications (using steam
for 12 minutes)]

⑦ Grip

T Storage pouch**U Waterproof sheet****V Cleaning needle**

⑧ Cleaning needle cap

Notes

- Place the main unit on a flat and hard surface such as a desk etc. The inclination switch may activate and disable the main unit when the main unit is placed on a mat or carpet.
- When the appliance is used for the first time, some water may remain around the water supply tank. This is residual water used for inspection in the factory, and does not cause any sanitation problems.

Course description

Enjoy the scent of the aroma while using the steamer.

Warm	:warm steam	Cool	:cool mist	C	:mild mist*1
------	-------------	------	------------	---	--------------


*1 A mild mist is a cold breeze that includes a minuscule amount of mist.

► [COURSE1] Clear skin (approx. 13 min. 30 sec.)

For vibrant and glowing skin

**► [COURSE2] Skin fitness/Elasticity (approx. 12 min.)**

 For elastic and moisturized skin

**► [COURSE3] Sebum care (approx. 13 min.)**

Reduces sebum, for Poreless skin



► [COURSE4] Soft skin² (approx. 11 min.)

For softer and moist skin

Warm
6 min

C
10 s

Warm
1 min 30 s

C
10 s

Warm
1 min 30 s

C
5 s

Warm
1 min 30 s

C
5 s

*2 This course has a gentle skin sensation and helps to suppress sudden changes in the skin temperature by exposing the skin repeatedly to warm steam and mild mist.

► [QUICK] Quick heating & cooling (approx. 7 min.)

For quick warm/cool treatment

Warm
6 min

Cool
1 min

► [WARM] Warm steam (approx. 12 min.)

For concentrated steam care

Warm
12 min

► [CLEANSING] Cleansing (approx. 3 min.)

Warm
3 min

Notes

- The effect may differ between individuals.
- There is no course that provides a cool mist alone.
- In the "WARM (Warm steam)" and "CLEANSING (Cleansing)" courses, no cool mist or mild mist is provided.

- Do not operate the main unit or add water with cleanser or makeup on your hands.
- Do not leave any traces of cleanser or makeup on the main unit. The plastic may deteriorate, resulting in decoloration and cracks and causing failures.

Before Use

Heed the following to protect your skin:

- Excessive steam care is not good for your skin.
When first starting, use the steamer about once a day for two or three days a week, then after about a month use it daily. Adjust the number of uses and the usage time according to the condition of your skin.
- If problems arise with your skin while using the steam, stop using it and consult a physician.
- After steam care, apply your regular basic skin-care products to trap the moisture in your skin.

Please check

- Peel off the protective sheet of the nozzle guard before use.
- The cool mist may get your clothes wet. If this is a concern, cover your clothes with a towel, etc.
- Place the main unit in a flat and hard place not affected by the wind from an air-conditioner, etc.
- Keep your face and décolleté (chest) at least 20 cm away from the tip of the nozzle guard.
If you cannot judge the distance, use the "distance guide" below.

Distance guide

Steam within this range is hot.

0

5

10

Use only distilled water or purified water.

Since the service life of the appliance may shorten depending on water quality, the use of distilled water or purified water is recommended.

Distilled water and purified water are usually available at supermarkets, etc.

Do not use the following types of water:

Mineral water, ground water, geothermal water, ionized alkaline water, physiological saline, slightly acidic water.

Using these type of water may cause shorten life of the main unit.

Do not mix with anything.

Do not mix the water with any other substance, such as lotion, aromatic oil, etc.

Doing so may cause burns, malfunctions, or shorten the life of the main unit.

Separately sold Panasonic aroma tablets (package of four)

- Lavender (Model No. EH-4S11):

The refreshing floral scent of lavender

- Bergamot (Model No. EH-4S12):

The crisp and invigorating scent of citrus

· Because the aroma tablets use natural essential oils, there may be slight differences in scent and color, but these do not affect quality.

Only use the designated aroma tablets. Using other tablets may damage the steamer.

Enjoy the scent of the aroma while using the steamer.

- Be sure to use only Panasonic aroma tablets.

- The aroma tablets are expendables.

Actual aroma varies depending on personal taste and the environment where it is used.

Replace them when the scent changes or weakens. (See this page.)

[Lasts for approximately 15 applications (using steam for 12 minutes)]

- Thoroughly ventilate the room after using the aroma tablet.

- Use the aroma tablets by the date indicated on their storage pouch.


- The usage date indicated is for when the pouch is closed.
- After opening, use the tablets as quickly as possible.

When not using, store in the storage pouch.

To enjoy the scent as long as possible, place the tablets in the storage pouch, remove as much air as possible from the pouch and close the zipper securely before storing.

- Store in a cool, dark place, avoiding places exposed to flames or direct sunlight and hot or humid environments. (These may change the tablet's scent.)

- Some of the aroma material may adhere to the tablet.

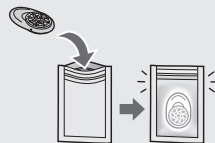

Be careful not to get burned.

15

20

Preparation

1 Remove the water supply tank from the main unit.

Pull it up at a slight angle.



2 Fill the water supply tank with water.

1. Turn and open the water supply cap.
2. Pour water into the water supply tank according to the course used.




FULL: [COURSE1], [COURSE2], [COURSE3],
[COURSE4], [WARM]
QUICK: [QUICK]
CLEANSING: [CLEANSING]

3. Close the water supply cap.
4. Wipe away any water on the surface of the water supply tank.

3 Attach the water supply tank to the main unit.

Push the water supply tank into the main unit until it clicks.


- Water is supplied to the main unit and the water in the tank decreases when the water supply tank is attached the main unit.

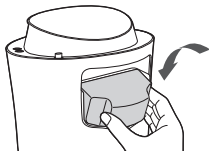

- If the water supply tank is not attached, the CHECK lamp will blink and the steamer cannot be used.
- If the water supply tank is repeatedly attached and removed, water may begin to leak from the water outlet.

4 Place the main unit on a flat, level surface.

1. Spread out a waterproof sheet on a flat and hard surface such as a desk etc.
2. Place the main unit so that it overlaps a little with the waterproof sheet.

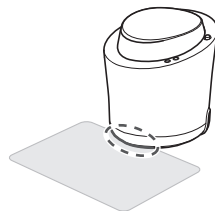

5 Insert the appliance plug into the main unit.


6 Plug in the power plug into the power outlet.

How to use the steamer

1 Open the lid and press the power switch to turn on the appliance.

Push the power switch firmly.


- The course indication lamp [COURSE1] blinks and [COURSE1] Clear skin course will be on standby.
- The CHECK lamp glows when the lid is shut.

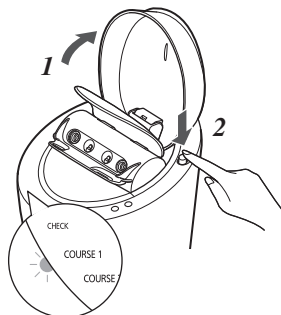


When not using the aroma tablet, skip to step 3.

2 Set the two aroma tablets in the aroma holder.

Grasp the aroma tablet's grip and set in the direction of the arrow on the diagram.

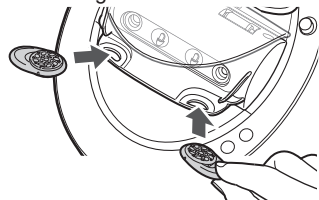

 Set it in so that it lines up with the marks.



With the aroma tablet, the strength of the scent can be selected according to whether the tablet is set with the front or back facing up.

For a stronger aroma, set it in the aroma holder with the front side facing upward. Stop using the aroma tablet if its scent make you feel queasy or you should sense something wrong.



Front (scent strength: strong)



Back (weak)

3 Press the SELECT switch to select your favorite course.

- Each time you press the SELECT switch.

[COURSE1]

↓

[COURSE2]

↓

[COURSE3]

↓

[COURSE4]

↓


[QUICK]

↓

[WARM]

↓


[CLEANSING]

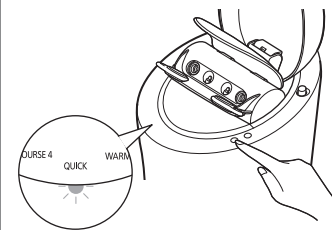

- The course indication lamp will blink in the standby mode until the STOP/START switch is pressed.

4 Press the STOP/START switch.

- The selected course indication lamp and the warm steam/cool mist lamp glow.
- The steam is released after about 1 minute.

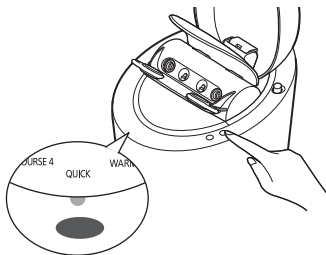

5 Direct steam, mist and mild mist onto your face.

- If you are concerned about the water droplets on your face, wipe your face with a towel etc. while using the steamer.
- If the lid is shut or the nozzle guard is lowered during use, the operation will stop and the CHECK lamp will glow. Upon opening the lid again, the [COURSE1] Clear skin course will be on standby.

If you want to change the course midway

1. Press SELECT switch.


The course indication lamp and the warm steam/cool mist lamp blink.

2. Press the STOP/START switch.

- When the STOP/START switch is pressed during use, the course indication lamp [COURSE1] and the warm steam/cool mist lamp will blink, changing to the standby mode after a while.

6 Adjust the angle (up/down) of the nozzle.

Hold the nozzle adjustment knob and adjust the angle in the up and down direction so that your whole face is exposed to the steam and mist.

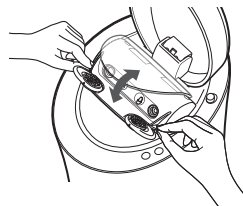

- If you direct the steam and mist at the height of your nose, it will be easier to spread them throughout your whole face.
- Lower the orientation of the nozzle when using the steamer on your décolleté.




At the end of the course, the operation will stop automatically, returning to the standby mode for the [COURSE1] Clear skin course.

- If you want to stop the course midway, press the STOP/START switch.

7 Press the power switch to turn off the appliance.

Push the power switch firmly.
All the lamps will go off.

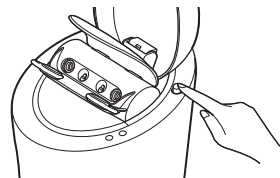

After using the appliance, take care of your skin by moisturizing with lotion, performing cleansing, etc. If you do not take care of your skin, water will evaporate from it, making it dry.

After use

1 Leave the appliance alone to cool for at least 10 minutes.

Do not move the main unit.

2 Unplug the power plug from the power outlet and the appliance plug from the main unit.


Bundle up the power cord for storage. Do not wrap it around the steamer.

When not using the aroma tablet, skip to step 5.

3 Remove the aroma tablet and wipe off any water droplets with a tissue.

4 Place the aroma tablet in the storage pouch and close the zipper securely.

Remove as much air as possible.

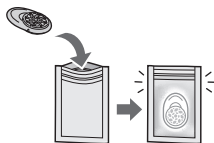

5 Close the lid and remove the water supply tank from the main unit.

Remove the tank in a water-safe location as water droplets may drip from the tank.

6 Discard the water in the tank.

Wipe away any water on the surface of the tank.

Note


Be sure to discard the water in the tank and the main unit every time after use.

Failure to do so may cause adhering of water stains or unusual odors.



7 Discard the water in the main unit.

1. Tilt the main unit and discard the water while pressing down on the lid and inclination switch.
2. Set the steamer back to the horizontal.
3. Repeat the steps 1 to 2 above 2 to 3 times.

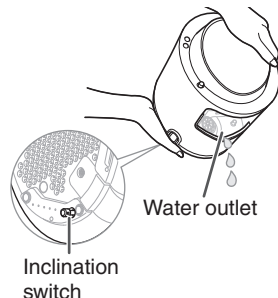

8 Attach the water supply tank.

Push the water supply tank into the main unit until it clicks.

Even after draining the water, some water remains in the appliance.

This does not cause any sanitary problems since the water is boiled when used the next time.

9 Use a towel, etc., to wipe any water droplets off the main unit, then store the main unit in a dry place.

When not planning to use it for a long period of time (several weeks or more), dry the steamer off thoroughly before storing it.

Cleaning

Notes

- Disconnect the power cord from the steamer before cleaning.
- Do not wash or soak the appliance in water.

Cleaning inside the main unit

(Clean once a month.)

To remove limescale and prevent it from forming, clean the inside of the steamer using the procedure below.


- After using, always let the main unit cool down for at least 10 minutes.

1 Fill the water supply tank with water up to FULL line and close the water supply cap.




2 Attach the water supply tank to the main unit.

Push the water supply tank into the main unit until it clicks.

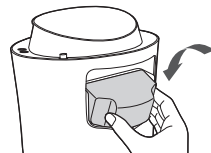

3 Shake the appliance horizontally 3 to 4 times.

Shake the appliance gently without tilting it.

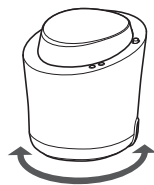

4 Remove the water supply tank from the main unit.



5 Discard the water from the water outlet in the direction of the "Drain" arrow while pushing the inclination switch on the bottom of the main unit.

Return the appliance to a flat position and repeat the step above 2 to 3 times.



6 Repeat the steps 2 to 5 above 2 or 3 times.

7 Wipe off the water on the main unit and the water supply tank.

Cleaning the power cord

(Clean once a month.)

Remove the power plug from the power outlet and the appliance plug from the main unit. Wipe away any dust, etc., using a dry cloth.

Cleaning the appliance

(if it seems dirty)

Wipe the appliance with a cloth moistened with soapy water.

Never use alcohols, nail polish removers, detergents (hand soaps) etc.

Doing so may result in malfunction or part cracks or discoloration.

Cleaning the cool mist outlet

(When the cool mist is not released smoothly)

1 Remove the cap from the attached cleaning needle.

2 Clean the two cool mist outlets with the needle.


Put the needle straight in and out of the hole 2 to 3 times.

- Forcefully pushing the needle may deform it.
- Do not use any items other than the attached cleaning needle (e.g., a sewing needle). Doing so may result in a malfunction.
- Lightly wipe the parts around the cool mist outlet with a cotton swab to prevent damage.

3 Attach the cap to the attached cleaning needle.

Failure to do so may result in a deformation.


Cool mist outlet

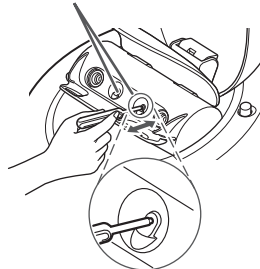

How to attach each part

How to attach the lid

1 Align the positions of the main unit and lid.

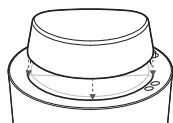


2 Push the lid from the top.
Push the lid until a “click” sound is heard.
Check that the lid is secured.




How to attach the water supply cap seal

1 Push up the center of the water supply cap.
Use your index finger to push up on the center of the water supply cap.

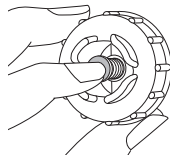

2 Press lightly along the outer rim of the water supply cap seal and find the raised edge on the water supply seal.

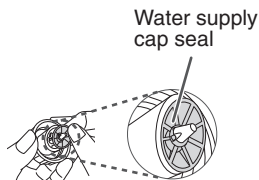

FAQ

► About odors

Q

There is a strange odor.
Why?

A

If you are using the steamer for the first time or if you have not used it for a long time (several weeks or more), the steamer may give off an odor. Clean the inside of the main unit a few times and use it a couple of times for the odor to go away. (See page 16.)
In addition, when you are not going to use the steamer for a long period of time (several weeks or more), throw away the water in the water supply tank and main unit first before storing it.

► About the steam and mist

Q

Can I use the steamer with cool mist only?

A

The steamer cannot be used with cool mist only. There is also no course that starts from a cool mist.

Q




The CHECK lamp blinks and the course stops midway.

A

This is because the water was insufficient, or the water supply tank was removed during use. Cool down the main unit for about 10 minutes first before supplying water and attaching the water supply tank.

Q	Can the course be changed midway? What happens when I start the course again after stopping it once?
A	The course can be changed but the course you switched to will start from the beginning. In this case, the water in the water supply tank may run out midway. Cool down the main unit for about 10 minutes first before supplying water. In addition, the course will start from the beginning even if you start it again after stopping once.
Q	Why does the quantity of water remaining differ every time after use?
A	The amount of water differs depending on the selected course, quantity of water supply, and how the water is discarded. (See pages 12 and 15.)

Problem notification function of the lamps

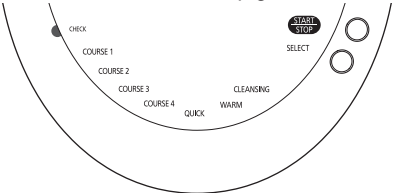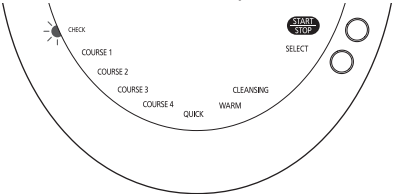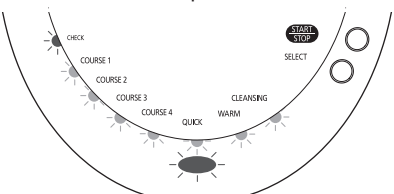Lamp indication	Causes/remedy
<p>The CHECK lamp glows.</p> 	<ul style="list-style-type: none"> • The appliance is inclined. • The main unit is overturned. <p>Set the appliance on a flat surface.</p> <ul style="list-style-type: none"> • Lid is closed. <p>Open the lid.</p> <ul style="list-style-type: none"> • Nozzle guard was lowered. <p>Do not touch the nozzle guard during use.</p>
<p>The CHECK lamp blinks.</p> 	<ul style="list-style-type: none"> • No water <p>Supply the water. (See page 12.)</p> <ul style="list-style-type: none"> • The water supply tank is not attached or loose. <p>Push in the water supply tank until a “click” sound is heard.</p>
<p>All lamps blink.</p> 	<ul style="list-style-type: none"> • Abnormal conditions on the appliance <p>Contact an authorised service center.</p>

Troubleshooting

Problem	Possible cause	Action
The steamer does not turn on.	▶ The power switch is not pushed firmly.	▶ Push the power switch firmly.
	▶ The power plug or appliance plug is not plugged all the way in.	▶ Plug the power plug and appliance plug securely all the way in.
The power plug is abnormally hot.	▶ The power plug is not firmly inserted into the outlet.	▶ Use an outlet in which the power plug fits snugly.
No steam is produced even about 1 minute or more after the power is turned on.	▶ There is no water in the water supply tank.	▶ Let the steamer cool down for at least 10 minutes, then supply water. (See page 12.)
	▶ The steamer is not on a level surface. The steamer is tilted.	▶ Place the steamer on a desk or other flat surface.
The way the steam is emitted fluctuates.	▶ Low water level in the water supply tank.	▶ Supply water. (See page 12.)
	▶ The steamer is being affected by the wind from an air-conditioner, etc.	▶ Move the steamer to a place where it will not be affected.
	▶ The way the steam is emitted is not constant and may fluctuate somewhat, but this is not a problem.	
The steam has stopped.	▶ There is no more water in the water supply tank.	▶ Let the steamer cool down for at least 10 minutes, then supply water. (See page 12.)
The amount of steam has decreased.	▶ There are calcium carbonate or limescale deposits inside the steamer.	▶ Contact an authorized service center for repair.

Problem	Possible cause	Action
<ul style="list-style-type: none"> While the steam is being produced, its color gets lighter and it is hard to see. There are hot water droplets flying out with the steam. 	<p>▶ You are using something else mixed in with the water.</p>	<p>▶ Let the steamer cool down for at least 10 minutes, then clean the inside of the steamer. (See page 16.)</p>
There is a gurgling sound while the steam is being produced.	▶ This is the sound of the water boiling inside the steamer. It is not a problem.	
There is a hissing sound while the steam is being produced.	▶ The sound is due to electrical discharge and is not a problem.	
During steam generation, a “psst” sound can be heard from the cool mist outlet.	▶ The sound is due to the air inside the main unit being exhausted. This is not a problem.	
Mist is cut off.	▶ This is due to the air inside the main unit being exhausted. This is not a problem.	
Mist does not come out.	▶ Low water level in the water supply tank.	▶ Supply water. (See page 12.)
	▶ Scale deposits etc. are attached to the cool mist outlet.	▶ Clean the cool mist outlet. (See page 17.)
Operating noise is loud during mist generation.	▶ A mist generation sound (“shoo”) and noise from the operating pump in the main unit will be heard but this is not a problem.	
The way the mist is emitted fluctuates.	▶ The way the mist is emitted is not constant and may fluctuate somewhat, but this is not a problem.	
The CHECK lamp glows.	▶ (See page 20.)	
The CHECK lamp blinks.		

Problem	Possible cause	Action
All lamps are blinking.	▶ Device fault.	▶ Contact an authorized service center for repair.
Water leaks from the water outlet.	▶ The water supply tank has been attached and removed repeatedly.	▶ Throw out the water inside the steamer, then press down on the water supply tank with the water in it until a click is heard.
	▶ The steamer is tilted.	▶ Set the steamer so that it is flat.
The scent of the aroma is too weak.*1	▶ The aroma tablet is set with the back side (weak side) facing up.	▶ Turn the power off, let the steamer cool down, then set the aroma tablet with the front side (strong side) facing up.
	▶ The use-by date has passed. Storage conditions were poor.	▶ Use a new aroma tablet. (See page 11.)
	▶ The tablet has been used the maximum number of times. Approximately 15 times (when using the steam for 12 minutes each time)	
The scent of the aroma is too strong.*1	▶ The aroma tablet is set with the front side (strong side) facing up.	▶ Turn the power off, let the steamer cool down, then set the aroma tablet with the back side (weak side) facing up.

*1 Perception of scents differs from person to person, as well as from scent to scent.

If the problems still cannot be solved, contact the store where you purchased the unit or a service center authorized by Panasonic for repair.

Specifications

Power supply	220 V~, 50 – 60 Hz
Power consumption	580 W
Steam temperature	Approx. 40 °C (at a distance of approx. 20 cm from the edge of the nozzle guard)

This product is intended for household use only.

目錄

安全須知.....	26	清理的方式	37
部件說明.....	30	如何安裝每個部件.....	38
程序說明.....	31	常見問題.....	39
使用前注意事項.....	32	燈的故障顯示功能.....	40
使用前準備工作.....	33	疑難排解.....	41
如何使用美顏器.....	34	產品規格.....	43
使用後.....	36		

感謝您購買本 Panasonic 產品。


使用本產品之前，請仔細閱讀本說明書，並妥善保存以供未來使用。

安全須知

為減低受傷，死亡、觸電、火災及財物損失的風險，請務必遵照以下安全預防措施。


符號說明

以下符號用於為危險、傷害及財物損失的級別分類和作出解釋。若不理會此等符號，不當使用本產品就可能導致所述的危險、人身傷害及財物損失。

 **警告** 表示潛在的危險可能會導致嚴重受傷或致命。

 **注意** 表示可能會導致輕微受傷或財產損失的危險。

以下符號用於分類和解釋必須留意的指示類型。

 此符號用於提示用戶，不得執行某項特定的操作程序。

 此符號用於提示用戶，必須遵從某項特定的操作程序，藉以安全操作本產品。

警告

►若要防止皮膚或健康問題

 懷孕的女士不能使用本產品。
- 否則可能因荷爾蒙不穩定而造成皮膚問題。

 請勿讓已喪失熱感覺的人士使用。
- 否則可能會導致灼傷或燙傷。


以下人士不宜使用本產品：

- 擁有過敏性體質及敏感肌膚的人士
- 患有皮膚病或異位性皮膚炎的人士

 • 癩癩以及血壓異常的人
下列情形請勿使用本產品：

- 皮膚受傷，或者患有濕疹或紅腫
 - 皮膚出現異常情況，如皮膚炎或極度灼傷
- 否則可能導致皮膚或身體上的問題。

體力、知覺或精神障礙者（含幼童）務必在監護人的管理下且了解本產品的使用方式。

 請特別注意避免幼童玩耍本產品。
- 否則可能導致意外或受傷。

如果您的皮膚或全身感到任何疼痛或發生異常現象，請立即停止使用本產品。

- 否則可能會造成皮膚或身體的問題。

►本產品


切勿將產品放置在兒童或幼童可觸摸的地方。請勿讓兒童或幼童使用。


 - 否則可能導致灼傷或燙傷、觸電或受傷。


此外，將香薰片等配件放進口中，可能導致事故及問題。

警告


 切勿讓嬰幼兒舔食機體用插頭。
- 否則可能導致灼傷、觸電或受傷。


 請勿在易燃物（例如酒精、揮發油、稀釋劑、噴霧、護髮產品、去光水）附近使用。
- 否則可能導致爆炸或火警。


 請勿掉落，或者與其他物體發生碰撞。
- 否則可能導致觸電或著火。


 請使用供水槽為本產品加水，並注意當注水到水箱時，沒有沾濕本產品及主控面板。
- 否則可能會因短路而導致觸電、灼傷或火警。

 雙手潮濕時勿使用本產品。
- 否則可能會因短路而導致觸電或火警。

 請勿在浴室或濕氣重的其他房間使用本產品，或將本產品儲存在這些地方。請勿將本產品放置在可能會被濺濕的地方（例如，洗臉盆旁）。
- 否則可能導致觸電或火警。

 請勿在各出口或過濾器處插入任何金屬物體，例如別針、電線或其他異物，且切勿遮擋住出口或過濾器。
- 否則可能會造成觸電。

 切勿改裝、拆卸或維修。
- 否則可能會因異常操作而造成著火或受傷。
請聯絡 Panasonic 直屬服務站進行維修。

 使用後，應及時清潔，以避免油脂和其它殘渣的沉積。
- 否則可能導致肌膚、身體感到不適。

► 若發生異常現象或故障

若產品出現異常或故障情況，請立即停止使用產品及拔出電源插頭。

- 否則會造成火警、觸電或受傷。

< 異常或故障情況 >


• 電線損壞

• 主機變形或出現燒焦氣味。


- 請立即將產品帶往 Panasonic 直屬服務站，以要求檢查或維修。

► 電源線


切勿損壞、改裝或用力弄彎、拉扯或纏繞電源線。

 此外，切勿將重物放在電源線上或夾緊電線。
勿讓別針或垃圾黏附在電源插頭或電器插頭上。
- 否則可能會因短路而導致觸電或火警。


電源線受損或變熱時請勿使用。


 如電源插頭未緊接家用電源插座上，切勿使用本產品。
- 否則可能會因短路而導致灼傷、觸電或火警。

請勿使用非隨附的電源線。

 此外，請勿將其他產品與隨本產品附上的電源線一同使用。
- 否則可能會因短路而導致灼傷或火警。

切勿以超出家用電源插座或配線額定值的方式使用產品。

 將太多插頭插至同一插座上，以致超出額定值，可能會因過熱而導致火警。

 請勿在雙手潮濕時插入或拔出電源插頭及機體用插頭，或是將電源線插頭插入電源插座或機體。
- 否則可導致觸電或受傷。

⚠ 警告

儲藏時，請勿將電源線纏繞機體。



- 否則可令電源線內的纜線因受壓而斷裂，並可能因短路而導致觸電或火警。

請務必使用與本產品上標示之額定電壓相符的電源進行操作。



完全插入電源插頭或機體用插頭。

- 否則可導致火警或觸電。

請定期清潔，確保沒有灰塵累積在電源插頭或機體用插頭上。



- 否則濕氣可令絕緣失效，導致火警。

拔出電源插頭並用乾布擦拭。

如果本機的電源線已經損壞，務必立即停止使用，並送交



Panasonic 直屬服務站進行更換。

- 否則可能導致意外或受傷。

⚠ 注意

►若要防止皮膚或健康問題



請勿將本產品用於護理臉部及胸部之外的用途。

- 否則可能會導致灼傷或燙傷。

►電源線

拔出電源插頭或機體用插頭時應握持插頭而非拉扯電線。



- 以免電源線受到過大負荷而損壞，導致灼傷、觸電或因電線短路而引起火警等。



不使用時，應從家用電源插座拔出電源插頭。

- 否則可因絕緣劣化造成漏電，導致觸電或火警。

►請注意以下注意事項

供水槽內切勿注入蒸餾水、純水以外的其他液體。

臉部應距離噴嘴防護裝置邊緣至少 20 cm。

正在使用蒸氣時，無須擦拭附著於香薰片或卡夾的水滴。

電源斷開後，蒸氣持續釋出（約 1 分鐘）。使用後立即遠離



溫熱蒸氣出口。

下列情形請勿接觸蒸氣：

• 調整蒸氣出口角度時

• 操作開關時

• 開／關蓋子時

- 否則可能會導致灼傷或燙傷。



正在使用蒸氣時，不要關上蓋子。

- 燙熱蒸氣從蓋子周圍散發，可能導致灼傷或燙傷。

注意

使用期間，或在使用過後 10 分鐘內，切勿傾斜、搖動或移動本產品，或切勿接觸或移除供水槽。



- 否則大量蒸氣會從蒸氣出風口排出或濺出熱水，導致灼傷或燙傷。



請在平坦的表面上使用。請勿拿在手上使用。

- 否則可導致灼傷、燙傷或傷害。



除非進行清潔，否則請勿在機體盛有水時加以搖晃。

- 否則熱水可能會從溫熱蒸氣出口濺出，導致灼傷或燙傷。



使用後處理廢水時，請小心以防手碰到熱水。

使用後，請注意供水槽的高溫。

- 否則可能導致灼傷或燙傷。

關於香薰片



警告



切勿將產品放置在兒童或幼童可觸摸的地方。請勿讓兒童或幼童使用。

- 將香薰片等配件放進口中，可能導致事故及問題。



請勿在有煙火的場所使用香薰片。

- 否則可能導致火警。



嚴禁拆解本產品。

請勿於香薰片上滴落精油等。

- 否則可能導致事故或問題。



務必使用指定的香薰片。

- 否則可能導致肌膚或身體問題。



注意



使用中請勿裝卸香薰片。

- 否則可能會導致灼傷或燙傷。



請勿在有小動物的室內使用香薰片。

- 以免引起不當影響。




使用香薰片時，請正確放入至插槽再行使用。


- 否則可能導致灼傷或燙傷。

部件說明



前視圖

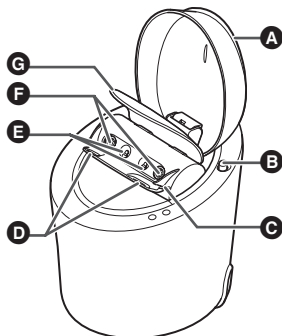

底視圖

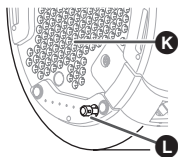



後視圖

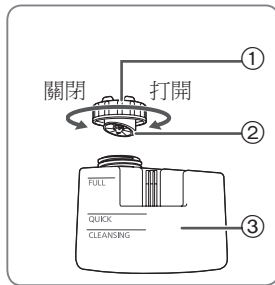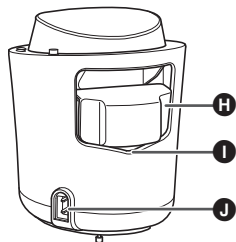

- A** 蓋子
- B** 電源開關 [0/1]
- C** 噴嘴調節旋鈕 (x2)
- D** 卡夾 (x2)
- E** 水汽出口 (x2)
- F** 溫熱蒸氣出口 (x2)
- G** 噴嘴防護裝置

- H** 供水槽
 - ① 加水杯
 - ② 加水杯墊圈
 - ③ 水箱
- I** 排水口
- J** 機體用插頭插入口
- K** 過濾器
- L** 傾斜開關

主控面板

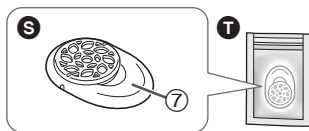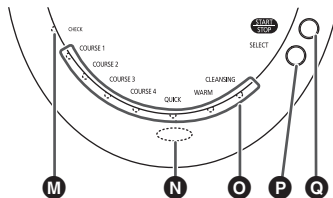

- M** CHECK (檢查) 燈
- N** 溫熱蒸氣/水汽燈

亮起紅色：溫熱蒸氣
亮起藍色：水汽
閃爍藍色：溫和霧氣

程序指示燈

COURSE1: 皮膚清潔
COURSE2: 皮膚保養/
增加彈性
COURSE3: 毛孔深層清潔
COURSE4: 皮膚柔軟
QUICK: 快速加熱及冷卻
WARM: 溫熱蒸氣
CLEANSING: 卸妝

- P** SELECT (選擇) 開關

- Q** STOP/START (停止/啟動) 開關

電源線

- R** 電源線
 - ④ 電源插頭
 - ⑤ 電線
 - ⑥ 機體用插頭

配件

- S** 香薰片 (試用) 薰衣草 2 片
【1 個約 15 次 (蒸氣使用 12 分鐘時)】
- T** 把手
- U** 保管袋
- V** 防水片
- W** 清潔用針
- X** 針帽

註

- 將機體放在平坦且堅硬的表面上，如桌面等。當機體位於墊子或毯子上時，傾斜開關將會啟動，以停用機體。
- 初次使用本設備時，供水槽周圍可能有水滴存在。這是廠家對產品進行檢測時的殘留水份，並不會導致任何衛生問題。

程序說明

使用保濕美顏器的同時，享受香薰帶來的舒爽香氣。

熱敷：溫熱蒸氣 涼敷：水汽 溫和：溫和霧氣*1

*1 溫和霧氣為涼風，其中包含微量霧氣。


►[COURSE1] 皮膚清潔 (約 13 分鐘 30 秒)

讓皮膚容光煥發



►[COURSE2] 皮膚保養／增加彈性 (約 12 分鐘)

讓皮膚彈性水潤

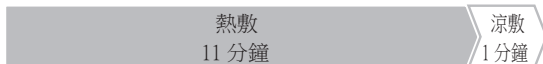

►[COURSE3] 毛孔深層清潔 (約 13 分鐘)

控制油脂分泌，讓皮膚光滑細膩



►[COURSE4] 皮膚柔軟*2 (約 11 分鐘)

 
讓皮膚柔軟濕潤



*2 此程序讓皮膚接觸交替溫熱蒸氣及溫和霧氣，讓皮膚感覺溫和並有助緩和皮膚溫度突變的刺激。

►[QUICK] 快速加熱及冷卻 (約 7 分鐘)

適合快速暖／冷表面



►[WARM] 溫熱蒸氣 (約 12 分鐘)

適合集中蒸氣護理



►[CLEANSING] 卸妝 (約 3 分鐘)



註

- 效果因人而異。
- 本產品並不設有單獨提供水汽的程序。
- 在「WARM (溫熱蒸氣)」及「CLEANSING (卸妝)」程序中，不會提供水汽或溫和霧氣。
- 在手上沾有潔面乳或化妝品的狀態下，請勿操作機體或注水。請清潔沾到潔面乳或化妝品的機體。否則塑料將會變質，導致褪色及裂紋，引發故障。

使用前注意事項

請遵守建議事項，以保護肌膚。

- 過度使用蒸氣的保養方式，反而對肌膚有害。
剛開始使用時，約 1 日 1 次、每週 2 ～ 3 次；使用約 1 個月後，1 日使用 1 次。
請觀察肌膚的狀態，適當調整使用次數及使用時間等。
- 蒸氣使用中、肌膚感到不適時，請停止使用並就醫診治。
- 結束蒸氣的肌膚保養後，為避免帶給肌膚的水分流失，請以平常使用的護膚品保養皮膚。

請檢查

- 使用之前，撕下噴嘴防護裝置的保護片。
- 水汽可能會弄濕您的衣服。如果您擔心這一點，請用毛巾等遮蓋您的衣服。
- 請將機體置於平坦堅固，且不會受到空調等風力影響的場所。
- 臉部及胸部應距離噴嘴防護裝置端部至少 20 cm。
難以掌握距離感時，請參考下列「概略的距離標準」。

只能使用蒸餾水或純水。

由於本產品的使用壽命可能會因水質而縮短，因此建議使用蒸餾水或純水。

您通常可在超市購買到蒸餾水或純水。

請勿使用以下幾種類型的水：

礦泉水、地下水、地熱水、鹼性離子水、生理食鹽水、弱酸性水。
使用這些類型的水可能會減短機體使用壽命。

請勿混合其他液體。

請勿將水與任何物質混合，例如乳液、芳香精油等。
否則可能會造成灼傷、故障或縮短機體的壽命。

Panasonic 另售的專用香薰片（4 個裝）

- 薰衣草（型號 EH-4S11）：
薰衣草最具代表性的特色就是香氣清爽
 - 佛手柑（型號 EH-4S12）：
清新的柑橘香味、新鮮舒爽
 - 因為是天然精油，香氣或顏色有時會有若干出入，並非品質上的問題。
- 請勿使用專用香薰片以外的其他香薰產品，以免故障。

概略的距離標準

此為蒸氣的高溫範圍

0

5

10

使用保濕美顏器的同時，享受香薰帶來的舒爽香氣。

- 請務必使用 Panasonic 專用的香薰片。
- 香薰片為消耗品。
- 香氣會因使用環境或個人感受而異。
- 香氣變質或變弱時，請更換新品。(請參閱第 32 頁。)


【1 個約 15 次（蒸氣使用 12 分鐘時）】

- 使用過香薰片後，請讓房間充分通風。
- 請於香薰片保管袋上記載的使用期限內使用。
- 記載的使用期限為尚未開封時的期限。
- 開封後請盡早使用。

不使用時，放入保管袋保管。

為延長香氣的效能，請放入保管袋，並且盡可能排出袋子裡面的空氣，確實拉上拉鍊妥善保管。

- 請放置於陰涼的場所保管，避免存放在火竈附近或直接日照、高溫及潮濕的環境。(以免香薰的香氣變質)
- 香薰的成分可能會附著在香薰片上。

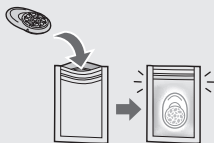

注意避免燙傷

15

20

使用前準備工作

1 從機體卸除供水槽。

拉起水槽，將其置於一個略微傾斜的角度。



2 水注入供水槽。

1. 旋轉並打開加水杯。
2. 根據所用程序向供水槽注水。




FULL: [COURSE1], [COURSE2], [COURSE3], [COURSE4],
[WARM]
QUICK: [QUICK]
CLEANSING: [CLEANSING]

3. 關閉加水杯。
4. 擦掉供水槽表面的水珠。

3 將供水槽安裝到機體上。

將供水槽壓入機體，直到發出喀噠聲。


- 當供水槽安裝到機體上時，水會供向機體，而水槽中的水會減少。

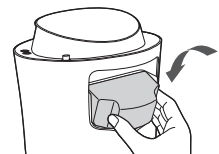

- 如果未安裝供水槽，CHECK（檢查）燈將閃爍，美顏器無法使用。
- 如果重複地安裝和卸除供水槽，水可能會開始從排水口漏出。

4 請將機體放置在平坦、水平的表面。

1. 在平坦、堅硬的表面（如桌子等）上攤開一張防水片。
2. 放置機體，以便機體與防水片有少量重疊。

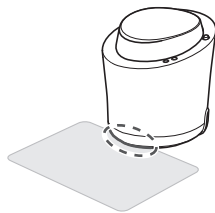

5 將機體用插頭插入機體。


6 電源插頭插入插座。

如何使用美顏器

1 打開蓋子，按下電源開關，以啟動本產品。

按下電源開關。


- 程序指示燈 [COURSE1] 閃爍，而 [COURSE1] 皮膚清潔程序將處於待用狀態。
- 如蓋子閉合，CHECK（檢查）燈亮起。

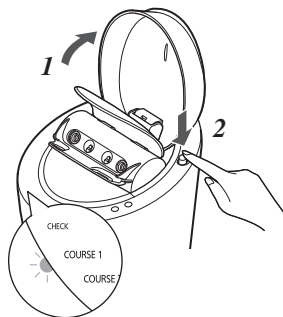


不使用香薰片時，請至步驟 3。

2 在卡夾內放入兩片香薰片。

如圖所示，握住香薰片的把手往圖的箭頭方向裝設。

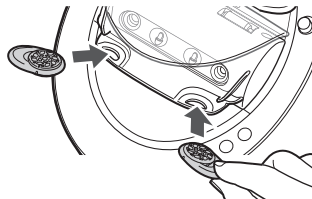

將香薰片放好，以便其與標記對齊。

 

香薰片可依據正面或背面選擇香氣的強弱。想要香氣濃郁時，請將香薰片的正面朝上裝入香薰卡夾中。

如因香薰的香氣而感到不適等時，請停止使用香薰片。



正面（香氣的強度：濃郁）



背面（微香）

3 按下 SELECT (選擇) 開關選擇喜歡的程序。

- 每次您按下 SELECT (選擇) 開關時。

[COURSE1]



[COURSE2]



[COURSE3]



[COURSE4]



[QUICK]



[WARM]





[CLEANSING]

- 程序指示燈將在待用模式下閃爍，直至按下 STOP/START (停止/啟動) 開關。

4 按下 STOP/START (停止/啟動) 開關。

- 所選程序指示燈和溫熱蒸氣/水汽燈將亮起。
- 蒸氣會在約 1 分鐘後開始釋出。

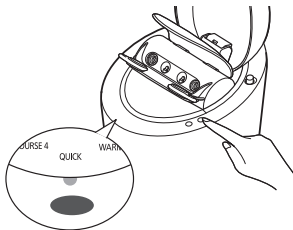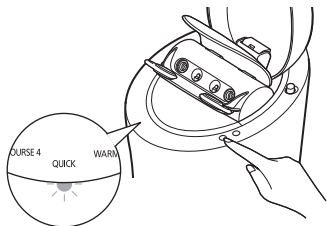

5 蒸氣、霧氣及溫和霧氣直接釋放到您的臉部。

- 如果您擔心臉部出現水滴，請在使用美顏器的同時使用毛巾等擦拭臉部。
- 如果使用期間蓋子閉合或噴嘴防護裝置降低，操作將停止，CHECK (檢查) 燈將亮起。再次打開蓋子時，[COURSE1] 皮膚清潔程序將處於待用狀態。


如果您想要中途更改程序

1. 請按下 SELECT (選擇) 開關。
程序指示燈及溫熱蒸氣/水汽燈將閃爍。
2. 按下 STOP/START (停止/啟動) 開關。

- 當在使用過程中按下 STOP/START (停止/啟動) 開關時，程序指示燈 [COURSE1] 及溫熱蒸氣/水汽燈將閃爍，並於不久之後改變為待用模式。

6 調節噴嘴角度 (上/下)。

- 按住噴嘴調節旋鈕，上下調節角度，以便整個面部都能接觸蒸氣和霧氣。

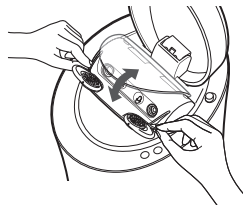


- 如果您使蒸氣及霧氣直接釋放到鼻子的高度，將會更輕鬆地在整個面部擴散。
- 在胸部使用美顏器時，請降低噴嘴方向。



程序結束時，操作將自動停止，返回至待用模式，等待進入 [COURSE1] 皮膚清潔程序。

- 如果您希望中途停止程序，請按下 STOP/START (停止/啟動) 開關。

- 7 按下電源開關，關閉本產品。**
按下電源開關。
所有燈將熄滅。

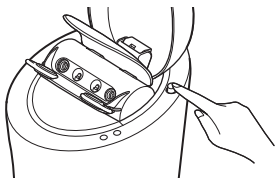


使用本產品後，請使用乳液為您的皮膚進行保濕護理與清潔等工作。如果您不護理您的皮膚，水分將自皮膚蒸發，造成皮膚乾燥。

使用後

- 1 應讓機體單獨冷卻至少 10 分鐘以上。**
請勿移動機體。
- 2 從插座拔出電源插頭，從機體拔出機體用插頭。**
電源線靠攏收納，勿纏繞住機體。

不使用香薰片時，請至步驟 5。

- 3 取出香薰片，以面紙等物品將水滴擦拭乾淨。**
- 4 香薰片放入保管袋，確實拉上拉鍊。**
盡可能排出空氣。

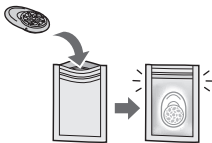


- 5 關上蓋子、取出供水槽。**
在防水的地方移除水槽，因為水槽可能會滴出水滴。


- 6 將水箱中的水倒出。**
擦掉水箱表面的水珠。

註

每次使用後，請務必到掉水槽與機體中的水。
否則可能會留下水漬或發出異味。

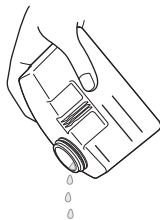

- 7 將機體的水倒出。**
 1. 傾斜機體，在按下蓋子及傾斜開關的同時將水排出。
 2. 將美顏器重新置於水平位置。
 3. 重複上述 1 至 2 步驟 2 至 3 次。

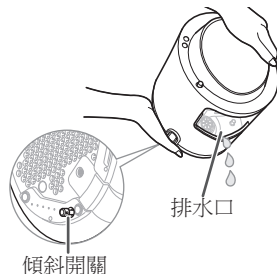

- 8 安裝供水槽。**
將供水槽壓入機體，直到發出喀噠聲。

排水後，機體內仍留有少許的水。
因再使用時會沸騰，衛生上沒有問題。

- 9 使用毛巾等擦乾機體附著的水滴，放置於保持乾爽的地方。**
長期間（數星期以上）暫停使用時，請先充分乾燥後妥善保管。

清理的方式

註

- 清理前，先從機體拔出電源線。
- 切勿用水清洗或浸泡本產品。

清潔機體內部

(請每月清理 1 次。)


請依照以下的步驟清理，以免水垢附著，並徹底除去水垢。

- 使用後，務必先降溫至少 10 分鐘以上。


- 1** 將供水槽的水加至滿水位置，然後蓋上加水杯。



- 2** 將供水槽安裝到機體上。
將供水槽壓入機體，直到發出喀噠聲。

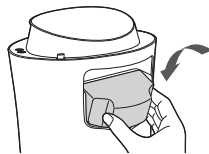

- 3** 水平搖動本設備 3 至 4 次。
請輕輕搖動，勿傾斜本設備。

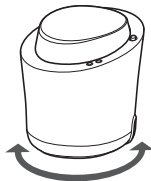

- 4** 從機體卸除供水槽。



- 5** 依「排水」箭頭所示方向，從排水口倒出水，同時壓下機體底部的傾斜開關。

將本產品放回到平坦位置，然後重複上述步驟 2 至 3 次。



- 6** 將步驟 2 至 5 重複 2 或 3 次。

- 7** 擦乾機體以及供水槽上的水。

清潔電源線

(請每月清理 1 次。)

從插座拔出電源插頭，從機體拔出機體用插頭。再以乾布擦拭灰塵等。

清潔本產品

(髒污明顯時)

用浸有肥皂水的抹布，擦拭該設備。

切勿使用酒精、洗甲水、洗滌劑(洗手液)等。

以免故障或零件破裂、變色等。

清潔水汽出口

(當水汽釋放變得不均勻時)

1 從清潔用針上卸下針帽。

2 使用清潔用針清潔兩個水汽出口。


將清潔用針垂直放入孔內並取出，操作 2 到 3 次。

- 過度用力推動清潔用針可能會使其變形。
- 切勿使用其它清潔工具代替隨機配套的清潔用針（如縫紉針）。否則可能會導致本產品故障。
- 用棉花棒輕輕擦拭水汽出口周邊部位，以防損壞。

3 將針帽裝回清潔用針上。

否則可能會導致變形。


水汽出口

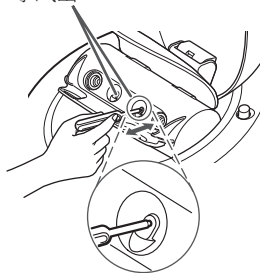

如何安裝每個部件

如何安裝蓋子

1 將機體與蓋子的位置對齊。

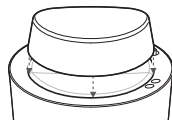

2 從頂部推動蓋子。


推動蓋子，直至聽到「咔嗒」聲。
檢查蓋子是否牢固。



如何安裝加水杯墊圈


1 按住加水杯的正中部份往上抬起。

請用食指朝加水杯中央部位壓入。

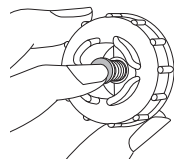

2 請沿著加水杯封蓋的外圈部分輕輕壓入，並尋找供水封蓋的突起邊緣。

加水杯墊圈

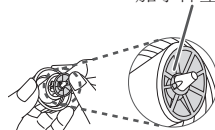

常見問題

►關於異味




問題	美顏器發出異味。 為什麼？
解答	如果您首次使用美顏器，或長時間（數週或更長時間）沒有使用，美顏器可能會散發出氣味。 清潔機體內部數次，使用幾次，氣味便會消失。（請參閱第 37 頁。） 此外，當您打算長期（數週或更長時間）不使用本美顏器時，請在儲藏之前首先排出供水槽和機體內的水。

►關於蒸氣及霧氣

問題	我是否可以僅使用水汽功能的情況下使用美顏器？
解答	美顏器並沒有提供僅發放水汽的功能。也沒有任何一種程序從水汽開始工作。
問題	CHECK（檢查）燈閃爍，程序並於使用中途停止。
解答	原因在於使用期間水量不足，或供水槽被拆下。 冷卻機體約 10 分鐘後再注水，並安裝供水槽。

問題	是否可以在中途改變程序？ 如果我在停止某一程序後再次啟動該程序，將會發生什麼？
解答	可以更改程序，但您切換至的程序將從頭開始運作。 這種情況下，供水槽中的水可能會在使用期間耗盡。 冷卻機體約 10 分鐘後再注水。 此外，即使您在停止一次後再次啟動某程序，該程序將從頭開始運作。
問題	為什麼每次使用過後，剩餘水量不同？
解答	水量根據所選程序、加水量及排水方式的不同而有所差異。 （請參閱第 33 和 36 頁。）

燈的故障顯示功能

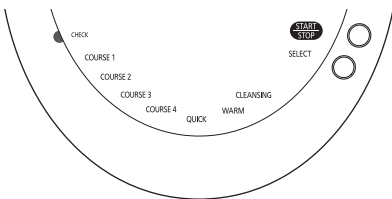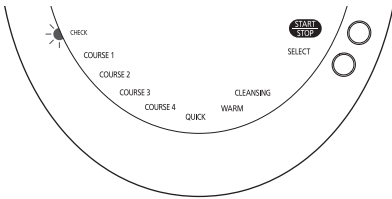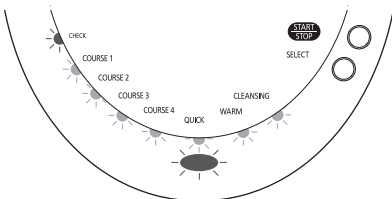指示燈顯示	故障原因 / 排除方法
<p>CHECK (檢查) 燈亮起。</p> 	<ul style="list-style-type: none"> • 設備傾斜，沒有放正。 • 機體倒置。 <p>將本設備放在平坦的表面上。</p> <ul style="list-style-type: none"> • 蓋子閉合。 <p>打開蓋子。</p> <ul style="list-style-type: none"> • 噴嘴防護裝置降低。 <p>使用期間不要觸碰噴嘴防護裝置。</p>
<p>CHECK (檢查) 燈閃爍。</p> 	<ul style="list-style-type: none"> • 沒有水 注水。(請參閱第 33 頁。) • 供水槽未安裝或鬆動。 <p>推入供水槽，直至聽到「咔嗒」聲。</p>
<p>所有燈均閃爍。</p> 	<ul style="list-style-type: none"> • 非正常情況 <p>請聯繫當地授權服務中心。</p>

疑難排解

問題	疑似原因	措施
美顏器不啟動。	▶ 電源開關未牢牢按下。	▶ 按下電源開關。
	▶ 電源插頭或機體用插頭未插緊。	▶ 電源插頭、機體用插頭確實插緊。
電源插頭異常高溫。	▶ 插座鬆動。	▶ 使用不會鬆動的正常插座。
開啟電源後，超過 1 分鐘以上仍未釋出蒸氣。	▶ 供水槽沒有水。	▶ 機體降溫 10 分鐘以上再注水。(請參閱第 33 頁。)
	▶ 機體未平放。 機體歪斜。	▶ 機體放置於桌子等的平面上。
蒸氣的釋放量出現變動。	▶ 供水槽內的水位低。	▶ 注水。(請參閱第 33 頁。)
	▶ 受到空調等風力的影響。	▶ 請移至不會受到影響的場所。
	▶ 每次釋放量均有些微變動，並非異常。	
蒸氣中途停止時。	▶ 供水槽的水用完。	▶ 機體降溫 10 分鐘以上再注水。(請參閱第 33 頁。)
蒸氣量變少。	▶ 機體內部附著碳酸鈣或水垢。	▶ 請聯絡 Panasonic 直屬服務站進行維修。
• 蒸氣產生時，蒸氣的顏色變淡，較難辨識。 • 蒸氣夾雜著熱水水滴而散落。	▶ 混合使用水以外的液體。	▶ 降溫 10 分鐘以上，待機體冷卻之後再排水，清理機體內部。(請參閱第 37 頁。)
正在產生蒸氣時會發出水在翻滾的聲音。	▶ 這是水在機體內沸騰的聲音，並非異常。	
正在產生蒸氣時會發出「噦」的聲音。	▶ 這是放電引起的聲音，並非異常。	
蒸氣釋放期間，聽到水汽出口發出「嘶」的聲音。	▶ 這種聲音是由於機體內部空氣排出而發出的，並非異常。	

問題	疑似原因	措施
霧氣停止散出。	► 這是由於機體內部空氣排出，並非異常。	
不散發霧氣。	► 供水槽內的水位低。	► 注水。(請參閱第 33 頁。)
	► 水垢沉積物等附著在水汽出口。	► 清潔水汽出口。(請參閱第 38 頁。)
霧氣產生時，運作噪音大。	► 您會聽到產生霧氣的聲音(「噓」)及機體操作泵的噪音，並非異常。	
霧氣釋放量出現變動。	► 每次釋放量均可能有些微變動，並非異常。	
CHECK (檢查) 燈亮起。	► (請參閱第 40 頁。)	
CHECK (檢查) 燈閃爍。		
所有燈均閃亮。	► 裝置故障。	► 請聯絡 Panasonic 直屬服務站進行維修。
從排水口漏水。	► 供水槽反覆的裝卸。	► 機體內的水倒掉，先將裝水的供水槽往下押入直到出現「喀嚓」的聲音。
	► 機體歪斜。	► 機體水平放置。
	► 背面(微香)朝上安裝。	► 關閉電源、機體降溫之後，香薰片的正面(濃郁)朝上裝入卡夾。
香薰的香氣微弱。*1	► 使用期限到期。 保管狀態欠佳。	► 使用新的香薰片。(請參閱第 32 頁。)
	► 使用期限到期。 約可使用 15 次。(以蒸氣 12 分鐘的方式使用時)	
	► 香薰片的正面(濃郁)朝上安裝。	
香薰的香氣濃郁。*1	► 香薰片的正面(濃郁)朝上安裝。	► 關閉電源、機體降溫之後，香薰片的背面(微香)朝上裝入卡夾。

*1 香氣的感受性因人而異，也依據種類而各有不同的香味。

如果仍然無法解決問題，請與您購買本機的商店聯繫，或洽 Panasonic 直屬服務站進行維修。

產品規格

電源	220 V ~, 50–60 Hz
耗電量	580 W
蒸氣溫度	約 40 °C (距離噴嘴防護裝置邊緣約 20 cm 的距離)

本產品只適用於家居用途。

Panasonic Corporation
<http://www.panasonic.com>
© Panasonic Corporation 2016-2020