


●多謝選購 Panasonic 乾衣機專用機架。請於裝嵌及使用前詳細閱讀此說明書。


注意事項

- 此機架專為 Panasonic 乾衣機而設。
- 鏈條用的掛鉤必須固定於堅固的牆壁或鐵柱。不可固定於夾板或纖維板上。
- 為了安全起見、必須將鏈條扣上。
- 漂白劑的原液和稀釋劑、塗料等會損傷塗裝表面、故須小心注意。
- 確保扭緊每個接駁位。

零件表

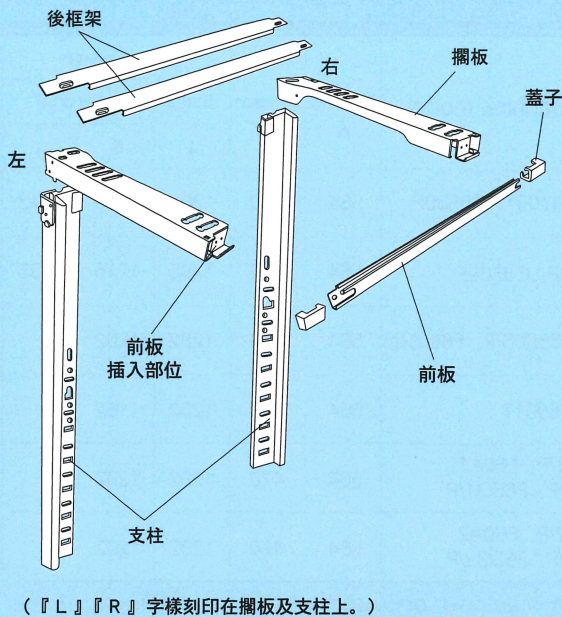

組合用零件

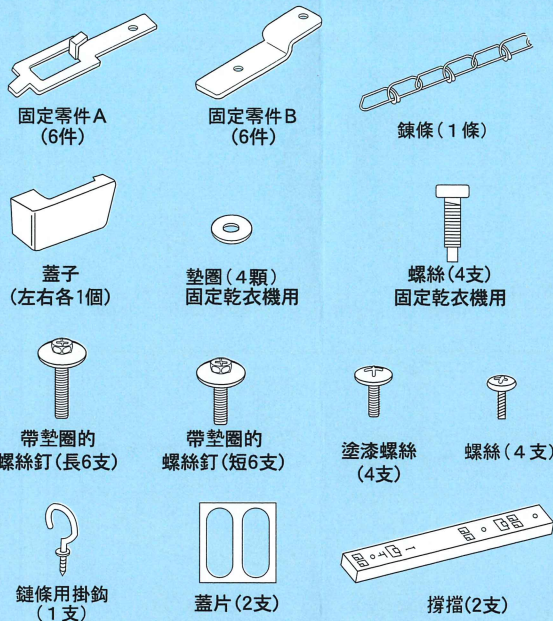


完成圖

設置標準尺寸表


洗衣機種類	A尺寸	B尺寸	C尺寸		
			刻印號碼※		
			4	5	6
F4500T, F4700T, C5500P	564	470	1303	1223	1143
F4700P, C5500P	564	470	1295	1215	1135
F5500S/P, F6500S/P, F6001S	564	470	1282	1202	—
F5001T	564	470	1232	1152	—
F55A1/P, F60A1 F60G1/P, F65G1/P	564	470	1282	1202	—
F55A2/P, F60A2 F60G2/P, F65G2/P	564	470	1282	1202	—

字樣刻印在最高的螺絲孔。

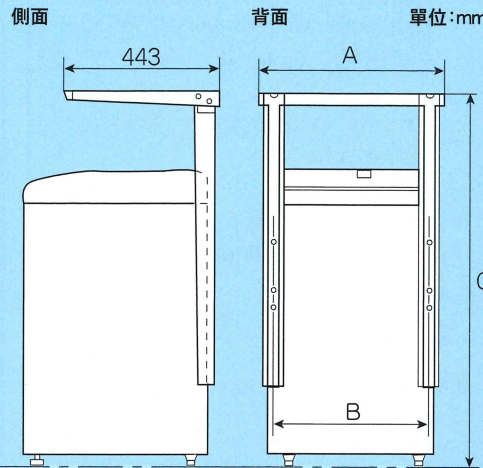


1.將欄板安裝在支柱上

- 將欄板凸出部份嵌入支柱的方孔中、按箭頭方向旋轉欄板、安裝。
※這時、對準背後刻印『R』與『L』的字樣。
- 用塗漆螺絲固定住欄板與支柱。
※完全擰緊螺絲、使螺絲的頭部全部埋入。

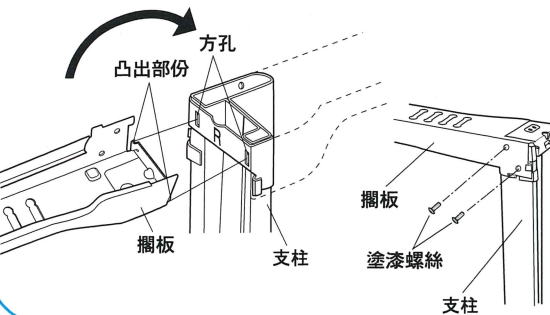


2.將固定零件A或B配於洗衣機

- 〈NA-F6500S 以及其他〉
1.將固定零件A配於洗衣機背面的凹位(6處)。

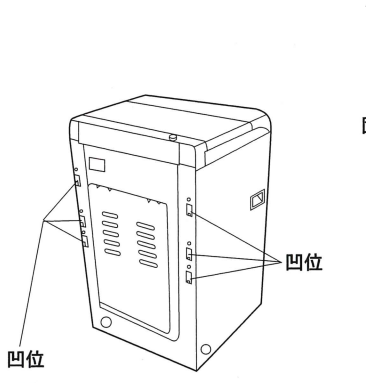


- 〈NA-F4700T, C5500T 以及其他〉
將固定零件B配於洗衣機背面的方孔(左右共6處)。
確認撐擋的卡爪對準固定零件B後、將撐擋按下裝在固定零件B上。
掛設於固定零件B上(左右共6處)

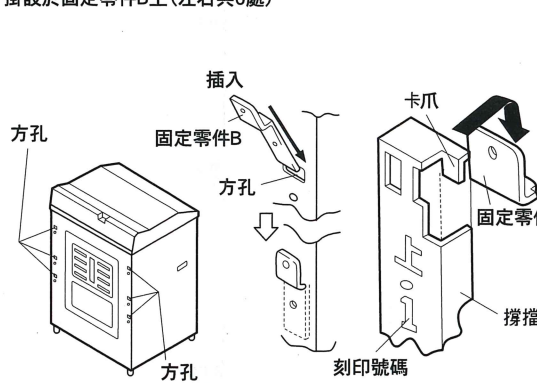


3.裝設支柱

- 確認支柱的左右。
- 根據『設置標準尺寸表』及刻印字樣、調教支柱高度。
- 將支柱的方孔嵌入固定零件A的突起部。(左右共6處)
- 將支柱按在洗衣機的側面、用帶墊圈的螺絲釘(短)將支柱固定。(6處)

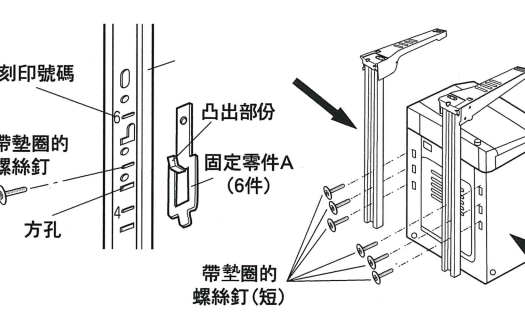


- 確認支柱的左右。
- 將支柱的方孔扣上撐擋的凸出部份。(左右共4處)
- 用帶墊圈的螺絲釘(長)固定住支柱。(6處)

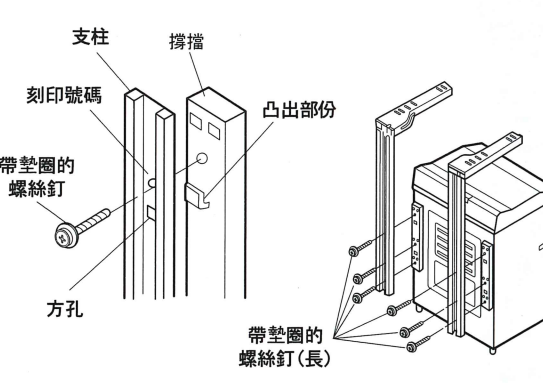


4.安裝後板架、用鏈條固定之

- 確認後板架的前後位置、用螺絲擰緊固定。
- 根據機身闊度、將螺絲裝上內側或外側的螺絲口。
- 如下圖所示、將鏈條寬鬆地掛設於已固定在牆壁的掛鉤上。

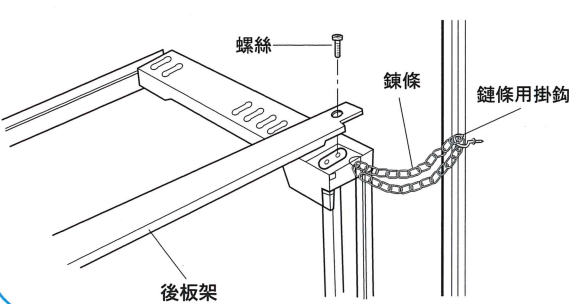

5.裝設、前板

- ※用螺絲將前板安裝好後、蓋上蓋子。
前板的裝設位置隨洗衣機的型號不同而異。

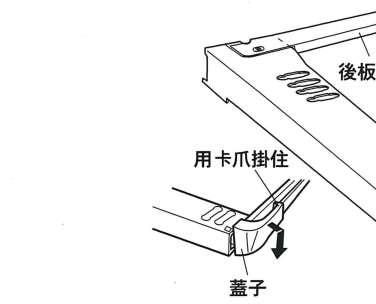


NA-F6500S/P	NA-F65G2/P
NA-F5500S/P	NA-F5001T
NA-F55A1/P	NA-F6001S
NA-F60A1	NA-F4500T
NA-F60G1/P	NA-F4700T, P
NA-F65G1/P	NA-C5500T, P
NA-F55A2/P	
NA-F60A2	
NA-F60G2/P	

(左右一樣)


6.將乾衣機固定於支架上

- 將乾衣機安放於支柱上。
- 用墊圈及螺絲釘固定乾衣機。

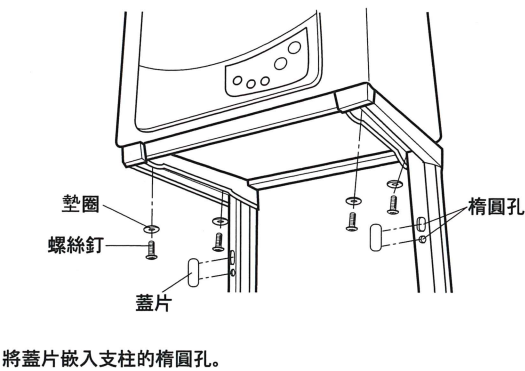

屋外設置時須知

- 務請儘可能設置於屋內、以免造成被陣風所吹倒或掉下等難以預料的危險。
如必須設置於屋外時、必須固定於設有後壁的地方。

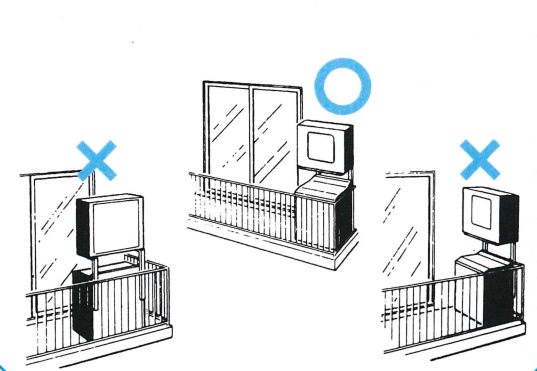

Panasonic

Dryer Stand

For use only with Panasonic fully automatic washing machines

N-UD71T Assembly Instructions


Panasonic Corporation
Web Site: <http://www.panasonic.co.jp/global/>

● Thank you very much for your purchase of the exclusive slidable stand for Panasonic dryers. Please be sure to read this manual before you assemble and use it.


CAUTIONS

- 1. This dryer stand is exclusive for panasonic dryers.
- 2. The chain hook is to be secured to a solid wall of pillar, not to a plywood or plaster wall.
- 3. Be sure to attach the chain to ensure safety.
- 4. Remember that undiluted bleaching liquor, lacquer thinner, lacquer etc. Possibly affect its painted surface.
- 5. Be sure to fasten every joint securely.

TABLE OF PARTS

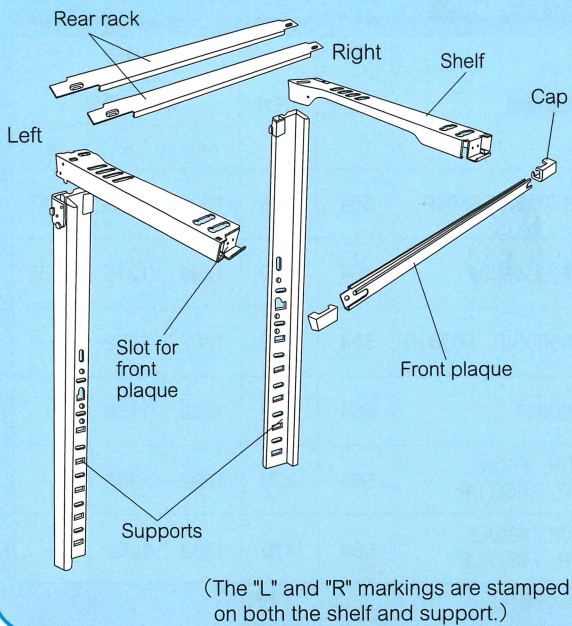

PARTS ATTACHED

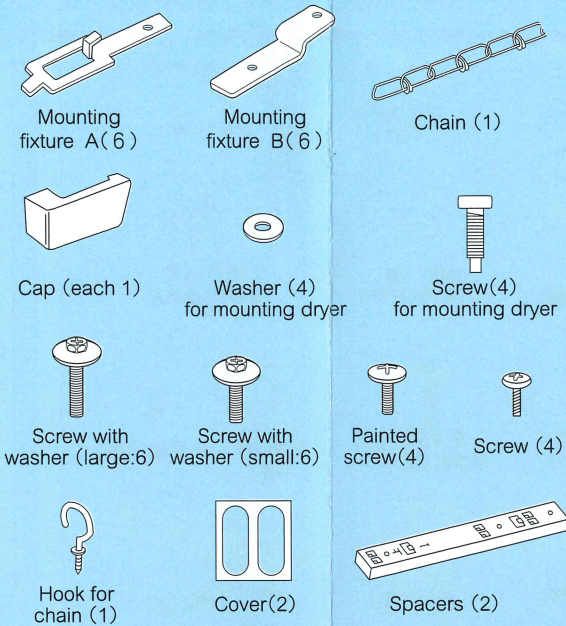


COMPLETED FRAME WORK

TABLE OF STANDARD DIMENSIONS


Washing machine model	Dimension A	Dimension B	Dimension C		
			Stamped indication※		
			4	5	6
F4500T, F4700T, C5500P	564	470	1303	1223	1143
F4700P, C5500P	564	470	1295	1215	1135
F5500S/P, F6500S/P, F6001S	564	470	1282	1202	—
F5001T	564	470	1232	1152	—
F55A1/P, F60A1 F60G1/P, F65G1/P	564	470	1282	1202	—
F55A2/P, F60A2 F60G2/P, F65G2/P	564	470	1282	1202	—

※Indication stamped on uppermost screw hole

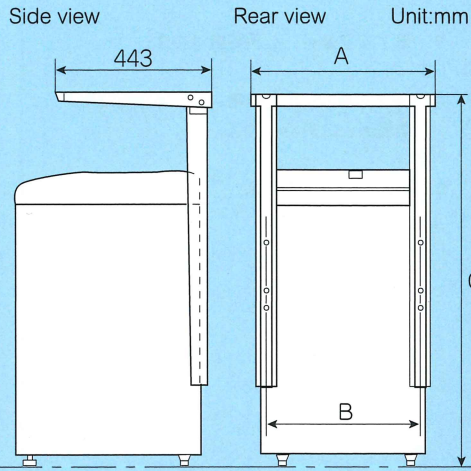

1. Attach the shelf to the support.


- 1. Insert each of the shelf's projections in the square hole of the support and turn the shelf in the direction as indicated by the arrow.
- ※At this time, the "R" or "L" markings on the back of each part must match.

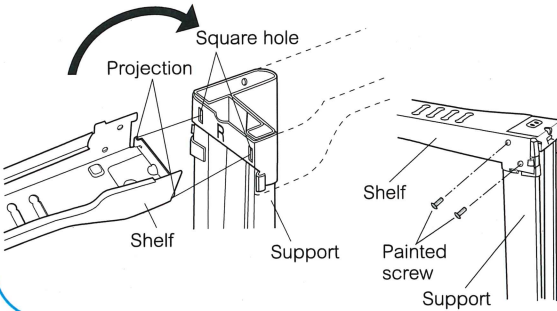

2. Attach mounting fixtures A or B to the washing machine.


<NA-F6500S and others>

- 1. Fit the six mounting fixture A into the concavities on the rear of the washing machine.

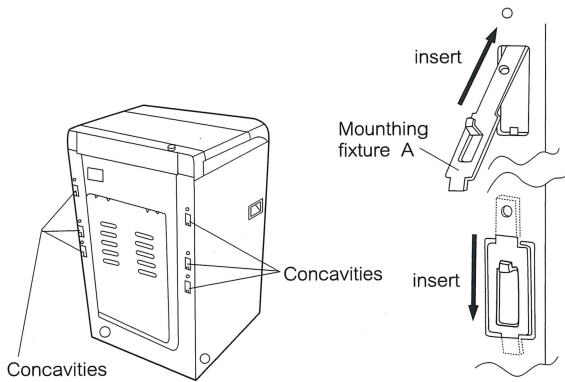


<NA-F4700T, C5500T and others>

- 1. Fit mounting fixtures B into the square holes (six holes on the right and left ends) on the back of the washing machine. Confirm the direction of the spacers and then, while aligning their hooks with mounting fixtures B, push the spacers down to fasten them on mounting fixtures B (for the six points on the right and left).

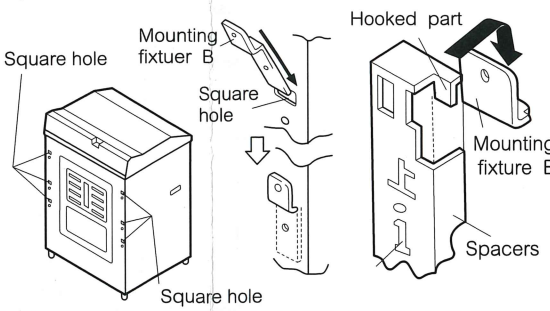


3. Mount the supports.

- 1. Check to identify the left and right supports.
- 2. Adjust the support height according to the stamped indication as shown in the table of standard dimensions.
- 3. Fit the square holes of the supports into the raised mounting fixtures (six positions on the left and right).
- 4. Use washer screw (small) to affix the supports to the side of the washer (six locations).

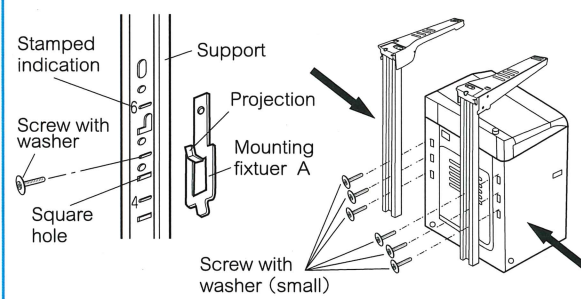


- 1. Check to identify the left and right supports.
- 2. Hook the square holes of the supports onto the projection of the spacers (four points on the right and left).
- 3. Fix the supports with (large) screws and washers (six locations).

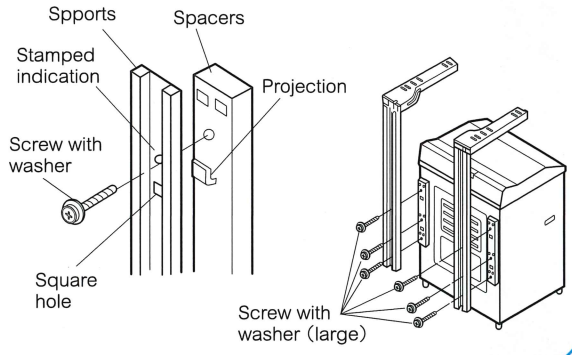


4. Assembling the rear rack and securing it with the chain.

- 1. Make sure which sides of the rack are back and front, then use screws to assemble the rack.
- 2. Attach the screws to the outer or inner holes depending on the width of your washing machine.
- 3. As shown below, allowing for some slack, attach the chain to the hook which have been secured to the wall at the rear of the washing machine.

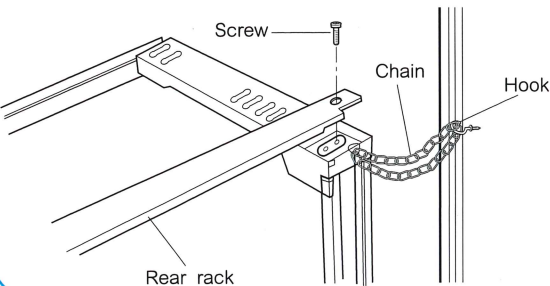

5. Mounting of the front plaque.

※After the front plaque has been mounted with screws, press the caps down.
The mounting position of the front plaque differs depending on the model of washing machines.

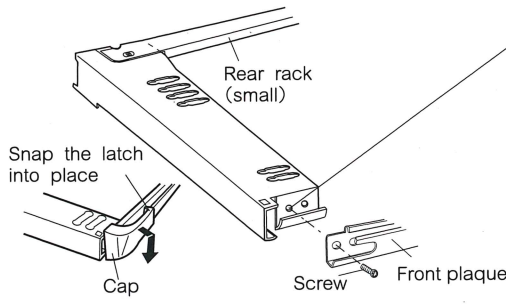


NA-F6500S/P	NA-F65G2/P
NA-F5500S/P	NA-F5001T
NA-F55A1/P	NA-F6001S
NA-F60A1	NA-F4500T
NA-F60G1/P	NA-F4700T, P
NA-F65G1/P	NA-C5500T, P
NA-F55A2/P	
NA-F60A2	
NA-F60G2/P	

(Same on left and right)

6. Place the dryer on top of the supports and secure it.

- 1. Place the dryer on top of the supports.
- 2. Use the washers and the screws to secure the dryer to the supports.

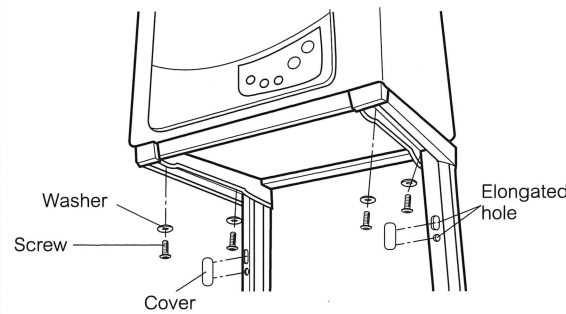

Fit the covers into the elongated holes in the supports.

Notes concerning outdoor installation.

Because installation outdoors is accompanied by the danger of such accidents as the washer and dryer being knocked over by the wind, etc., indoor installation is recommended whenever possible. If installation on a veranda or other outdoor location is unavoidable, be sure to install so that there is a wall directly behind the washer and dryer.

