



Operating Instructions 使用說明書

Air Purifier
空氣清淨機

Model No. 型號 **F-P15EHH**

This Product Can Only Be Used Indoors

本產品只可在室內使用

Table of Contents	<Page No.>	目錄	< 頁號 >
Safety Precautions	2 ~ 4	安全注意事項	11 ~ 13
Description of Names for Each Part and Function	5 ~ 6	各部位名稱說明及功能	14 ~ 15
Method of Use	7 ~ 8	使用方法	16 ~ 17
Method of Operation	8	操作方法	17
Method of Cleaning and Maintenance	9	清潔保養方法	18
When Suspecting Malfunctions ----	10	懷疑故障發生時	19
Method of Emergency Treatment--	10	緊急處理方法	19
Optional Accessories	10	自選配件	19
Specifications	10	規格	20

Preparation
Prior To Use
使用前準備

Method of Use
使用方法

When Encountering
Difficulties
遇到困難時

Additional Warranty

Thank you very much for purchasing Panasonic products.

- Please refer to this guide in detail prior to use, together with correct use and good storage.
- Please read "Safety Precautions" (P.2~4) carefully prior to use.
- In order to ensure your rights, please ask the dealer to record the purchase date and dealer name on the warranty.

另附保證書

在此誠摯的感謝您購買本Panasonic產品。

- 請於使用前，詳細參閱本說明書，正確使用，並妥善保存。
- 使用前，請務必仔細閱讀“安全注意事項”(P.11~13)。
- 為確保您的權益，務必請經銷商在保證書上記入購買日期及經銷商名稱等。

Safety Precautions

Please always adhere to



- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experiences and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the product.
- Be sure to disconnect the power plug before cleaning the product.


In order to prevent from causing injury to users and damaging the property of others, the listed items that shall be conformed to are described.










■ The degree of harm and damage due to ignorance of the representation content and according incorrect usage is described separately by the following representation.

 WARNING	The content indicated in this column is "may cause death or serious injury".	 CAUTION	The content indicated in this column is "may cause harm or there may be only financial damage".
--	--	--	---

■ The types of the content that shall be adhered to are described separately by the following figures.

 This figure indicates "prohibition".	 This figure indicates necessary "mandatory" implementation.
--	---

 **WARNING**

<p>■ Never damage power cord, power plug.</p>  <p>Never cut, process, bend forcibly, pull, press with heavy object or bundle with nylon strap and iron wire. Continued use after damage may result in short circuit, fire or electric shock.</p> <p>● Damaged power cord, if any, shall be replaced by manufacturer, its service office or qualified person in order to avoid hazard.</p>	<p>■ Clean dust and dirt from power plug regularly.</p>  <p>Fire or electric shock may result due to moisture accumulated because of dust on power plug, which causes ineffective insulation layer of power plug.</p> <p>● Unplug power plug and wipe it with a dry cloth. As there is no need to use the cleaner, remember definitely to unplug power cord.</p>	<p>■ Do not pull the power cord when carrying or storing the product.</p>  <p>Otherwise, the power cord may be damaged with the possibility of fire or electric shock.</p>
<p>■ Avoid damage or processing of the power cord.</p>  <p>Damage due to placement of heavy object, heating, or pulling may result in fire or electric shock.</p>	<p>■ Never use voltage which is not specified.</p>  <p>220 V</p> <p>Fire or electric shock may result due to heat.</p>	<p>■ Never use a damaged power cord.</p>  <p>Use of damaged power cords may result in short circuit, fire, or electric shock. Please contact your nearest service station or dealer.</p>
<p>■ Never remove plugs with a wet hand.</p>  <p>Electric shock may result.</p>	<p>■ Never power off by unplugging power plug.</p>  <p>Fire or electric shock may result due to heat.</p>	<p>■ Shutdown is required and power plug shall be unplugged in cleaning.</p>  <p>There may be danger of electric shock.</p>


Safety Precautions

Please always adhere to




WARNING

- Never let the current exceed the rated current of the power socket and wiring device when in use.

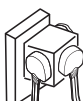

If rated current is exceeded due to use of too many branch lines, fire or electric shock may result due to heat.

- Never place foreign objects such as fingers or sticks into the air inlet / outlet or gaps.

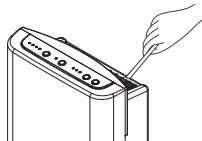

Injury or electric shock may result due to the high running speed of inside fan.


- In case of the exception (as with the smell of burning, etc.), please unplug power plug after shutdown.



Fire or electric shock may result due to heat or other reasons.


- Please contact your nearest service station or dealer.

- Never use in a place where there is direct sunlight or wind and rain.

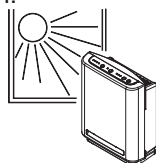

Fire or electric shock may result due to heat.


- Never repair it by yourself.

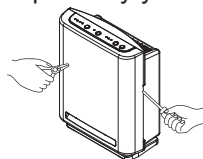

Fire or electric shock may result.

- As repair is required, please contact your nearest service station or dealer.

- Never wash the machine body with water directly.

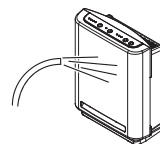

Fire or electric shock may be resulted due to electric leakage.



CAUTION

- Never pull wire forcibly when unplugging power plug.




Forcible pulling of power cord, if any, may damage power cord and result in short circuit, fire, or electric shock.

- Please unplug power plug in order for safety when the machine is not used for a long time.



Heat or fire may result due to dust and foreign objects attached to power plug, if any.

- Please place it on stable and sturdy floor for use.

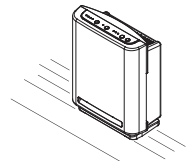

In order to prevent collapse, which results in injury.

- Please extract the product from the rear handle hole, and never extract the product from the front panel.




Please extract from here




In order to avoid the falling of the main body of the product during extraction, which hurts the foot or damages the article injury.

- Never remove the front panel and the filter while the machine is running.

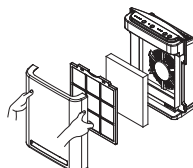

Foreign matters are prevented from entering the article during operation. At this time, the internal fan rotates at a high speed, which may cause injury or electric shock.

- Do not place the product near combustible materials such as lighted cigarette, incense, etc.

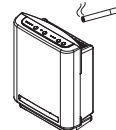

Otherwise, these may be absorbed into the product with possibility of fire.


Safety Precautions

Please always adhere to



CAUTION

- Never allow animals and plants to be situated under direct wind blowing.

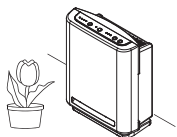


Adverse impact on animals and plants will result.

- Never use in a place where there may be leakage of flammable gas.



Fire may result if flammable gas leaks into surrounding space.

- Never use in a damp place such as a bathroom.

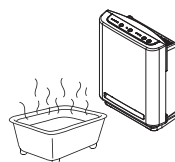

There is risk of electric shock or malfunction.

- Never use in a narrow space such as a closet.



Poor ventilation may result in heat or fire.

- Never sit or climb onto the machine.




Injury may be resulted due to slipping or falling.

- Never block air inlet / outlet with cloth or quilt.




Poor ventilation may result in heat or fire.

- Do not clean the product with gasoline or other volatile mixture solvents, and avoid contacting with spray insecticides.

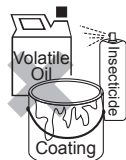

Otherwise, the product may crack or short circuit with the possibility of injury, fire or electric shock.

- When it is used together with a heater or burner, please keep good ventilation (this unit is not a device for removing carbon monoxide and ventilation shall be kept.)

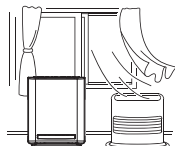

There may be danger of carbon monoxide poisoning.

- Do not operate this product in places where indoor fumigation type insecticides are being used.



Chemical residue may build up inside the product and discharge from the air outlet, and cause damage to health.

- Ventilate the room with fresh air thoroughly after using insecticides before operating the product.

Description of Names for Each Part and Function


Body

HEPA Dust Collection Filter

The filter is designed to filter out harmful particles in the air effectively. A light green filter in front may inhibit bacterial growth effectively.

The activated carbon filter may remove odors effectively.


※Please remove the filter from the plastic bag as it is just purchased or replaced.

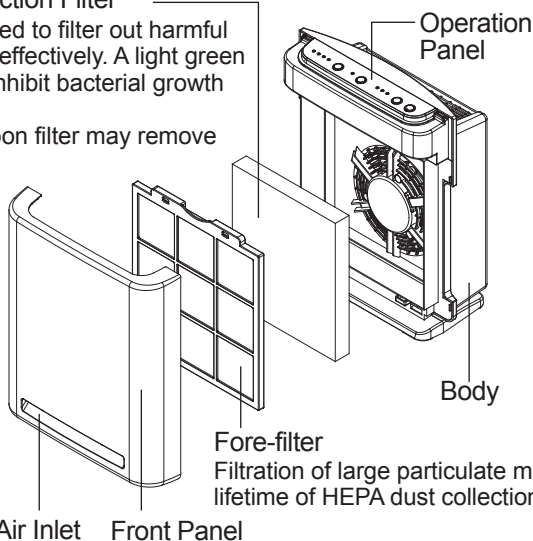

Fore-filter


Filtration of large particulate matters can extend the lifetime of HEPA dust collection filter effectively.

Back

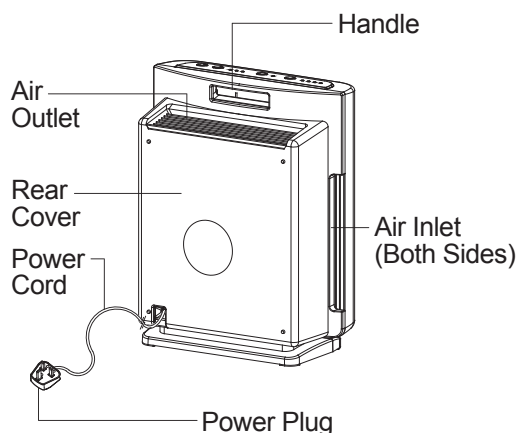


1 Remove the packing bag for the HEPA dust collection filter.(first use)

- Remove front panel, fore-filter , and HEPA dust collection filter.

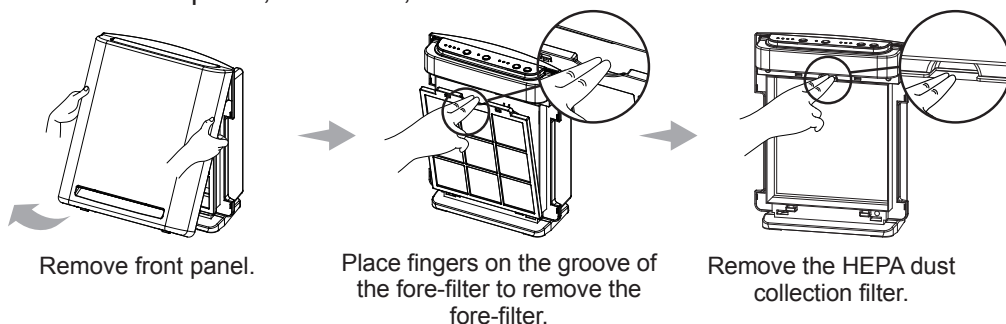


- Remove the packing bag of the HEPA dust collection filter.

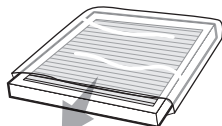


Remove the plastic bag and take out the HEPA dust collection filter.

- Log the commencement date of use on the sticker on the dust collection filter.

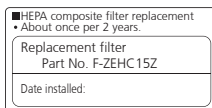

Log the commencement date of using the HEPA dust collection filter.

- Reinstall the HEPA dust collection filter, the fore-filter in reverse order.

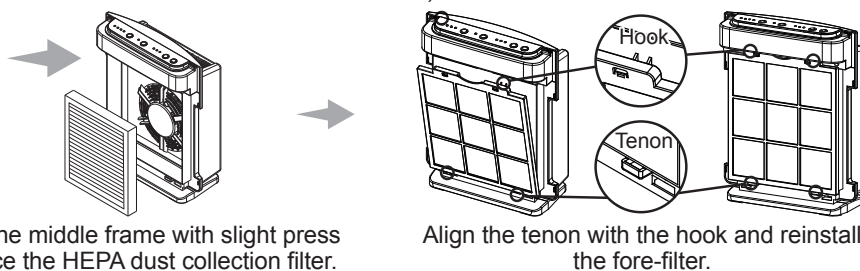

Align the middle frame with slight press to place the HEPA dust collection filter.

Align the tenon with the hook and reinstall the fore-filter.


Notice The light green part of the HEPA dust collection filter faces forward.

- The HEPA dust collection filter forms a light green filter as a bacteriostatic filter material, within which there are a white dust collection filter and a black activated carbon filter. When assembling, please have the light green dust collection facing forward.

Description of Names for Each Part and Function

2 Reinstall the front panel in position.

- Take the front panel and fasten the tenon on the upper edge with the groove of the body, followed by pushing the two sides of the lower edge of the front panel toward the body until hearing the “click” sound and having the body secured.

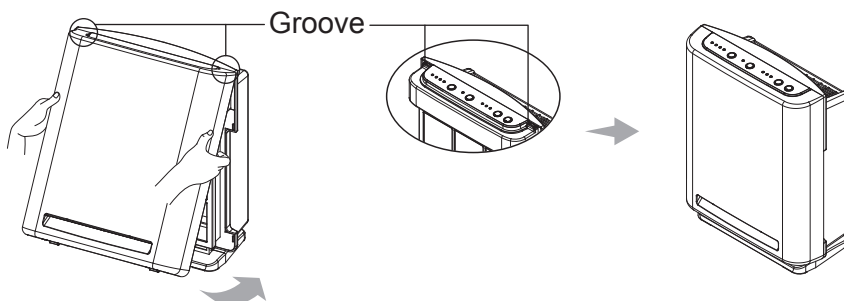


Reference Time for Replacement of HEPA Dust Collection Filter.

Filter Model	Expiration Date of Filter Replacement	Conditions
F-ZEHC15Z HEPA Dust Collection Filter.	About once every 2 years	As a discharge amount equivalent to 5 cigarettes is absorbed every day (measurement standard for cycle of replacing filter) (JEM1467 Standard of Japan Electrical Manufactur- ers' Association)

- Depending on the place and method of use (for example, houses with more smokers), the cycle of replacing the filter may be shortened. In short, please replace it when the effect is not good.


It is better to know in advance! Efficient Setup Method

- As it is used in the same place for a long time
The wall around the body or the floor may be dirty.
→ When maintaining the body, it is recommended to leave enough space in the setup place or between the body and the wall.
- In order for efficient indoor air circulation
The air outlet should be kept at a distance of more than 30 cm from the wall or furniture.
- In order to avoid clutter or noise
 - Please place it at a distance of 1 m or more from a TV or radio.
 - Never use the same socket with a TV or radio.

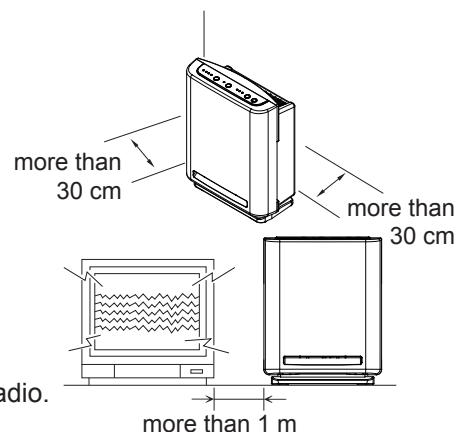

Method of Use

Operation Panel

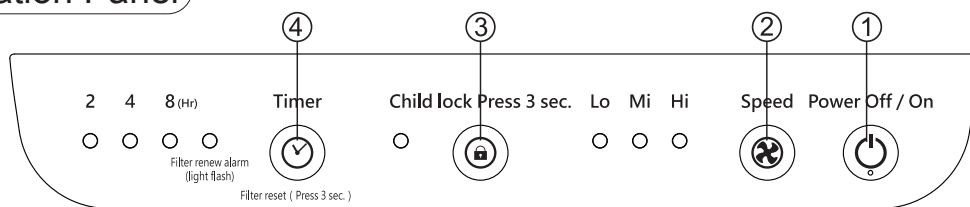

Preparation Actions

Insert the power plug into the socket (220 V), followed by pressing the “ Power Off / On ” key on the operation panel to start running of the product.

Power Off / On

1 Press the key (power on)

- As the key is pressed for the first time, the air volume indicator “Mi” lights up and the running starts.
- Then, press this key for the machine body to be powered off completely.

Speed

2 Press key

- In running, the air volume is switched as indicated in the figure below for every press.



Child lock Press 3 sec.

3 Long press to open the child safety lock

- Long press this key for 3 seconds to turn on the child safety lock function, and the light is on, otherwise, the child safety lock function is turned off and the light is off.

Child lock Press 3 sec.



Child safety lock
Function is turned on

Child lock Press 3 sec.



Child safety lock
Function is turned off


Timer

4 Press key

Filter reset (Press 3 sec.)

Set running time


- In running, it is switched as indicated in the figure below for every press.

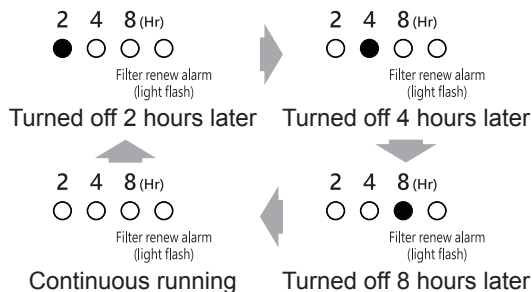

- The indicator displays the remaining time automatically as time elapses.



 Function of Long pressing for 3 seconds to recount lifetime of filter

- As the filter renew alarm light flashes (the lifetime of the filter is about 2 years), it indicates that the filter needs to be replaced.
 
- After the filter is replaced, long press this key for 3 seconds in a power-off state until a long tone sounds, which indicates that the filter has been replaced and the lifetime of the filter is recounted.
- If the reminder light for filter renew alarm flashes and this key is pressed for 3 seconds until a long tone sounds, the lifetime of the filter will also be recounted.

Method of Use

Notice


- This product has a memory function. By pressing the Power Off / On key to stop the running of the product, followed by pressing this key again to start the running, the product is configured to the previous running mode automatically. (Timing is not within the memory range)
Example: If running at a medium speed is the original setting, 2-hour is timed, and the child safety lock is on. As the timed condition is met for automatic shutdown, the child safety lock must be off in order for booting to commence, after which running at the medium speed is resumed.
- This memory function disappears after the power plug is removed.

Method of Operation


Example:

There are unpleasant smells of smoke and odor in the air, as well as there are children on the spot, the air volume is set to strong speed, the running lasts for 2 hours, and the child safety lock is turned on.


- 1 After inserting the power plug, the “ Power Off / On ” key on the operation panel is pressed.

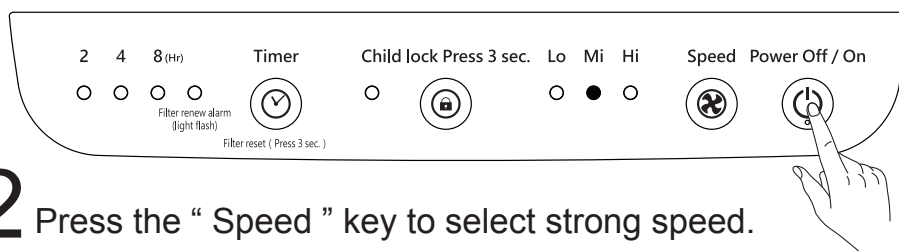


- 2 Press the “ Speed ” key to select strong speed.

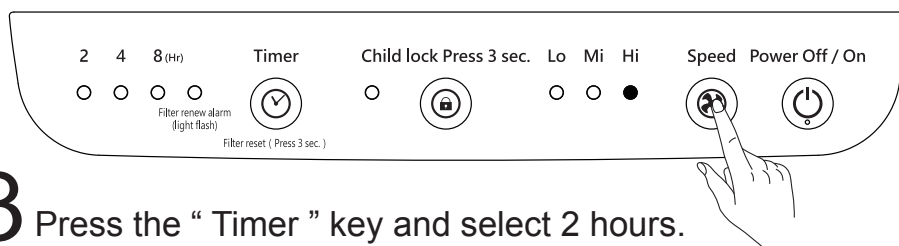

- 3 Press the “ Timer ” key and select 2 hours.

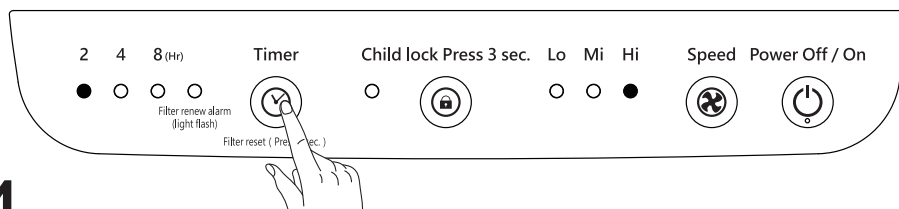

- 4 Long press the “ Child lock Press 3 sec. ” key for 3 seconds to turn on the child safety lock function.

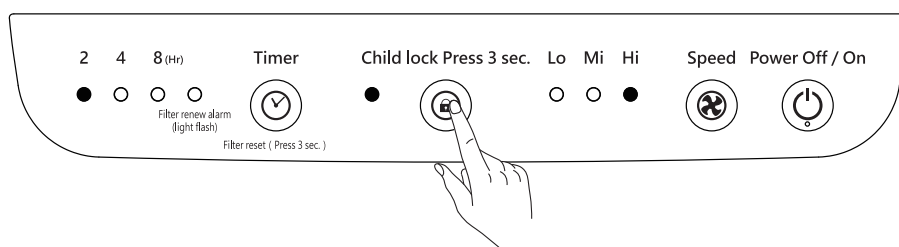

Method of Cleaning and Maintenance



WARNING



Make sure to disconnect the power plug before cleaning the product. (Otherwise, the product might operate with the possibility of electric shock or injury.)

Notice As a reminder, it is recommended to perform cleaning and maintenance.


Cleaning of machine body. (every 1~2 months.)

- Dirt on the machine body may be wiped by using a cloth dampened with water or a neutral detergent.



Sweep of the air suction vent. (every 1~2 months.)

- For dust in the air suction vent, please wipe it with a dry cloth or clear it with a dust cleaner.

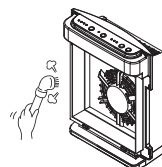

Cleaning of Fore-filter (every 1~2 months.)

- Hook the left and right sides of the front panel left with two hands, followed by pulling it out to remove the panel and remove the fore-filter.
- Use clean water, neutral detergent or dust cleaner for cleaning, followed by drying and reinstalling it in the machine body.



Cleaning and replacement of filter(every 1 month.)

Time for cleaning and replacement of filter

- The air volume at the air outlet becomes smaller and the sound becomes louder. Please check if it is time to clean or replace the filter. Generally, it should be cleaned once every 1 month approximately.
- Due to different environment for place of use, the service life of the HEPA dust collection filter also differs. Generally, it should be replaced once every 2 years approximately.

HEPA dust collection filter for replacement (optional) : F-ZEHC15Z


Please purchase it from your nearest service station or dealer.

Method for cleaning and replacement of filter

1 Remove the front panel, fore-filter.

- For the approach of removing the fore-filter, please refer to Cleaning of Fore-filter mentioned above.

Reach in the lower edge of the front panel and pull forward to remove the front panel.

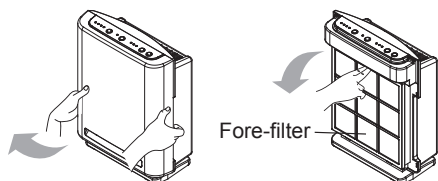

2 Take the filter out of the machine body.

- Remove the fore-filter prior to removal of the HEPA dust collection filter.


3 Replacement or cleaning of the filter is determined according to the dirty conditions on the surface of the filter.

In renewal

- Please remove the filter from the plastic bag as it is just purchased or replaced.

In cleaning

- Simply clean the surface of the filter with a dust cleaner.
- Never use water washing and brush for cleaning.

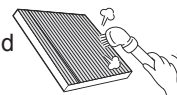

4 Install fore-filter, front panel, plug in the power plug.

- After replacing the filter, in the power-on state, please long press the Timer/Filter reset (press 3 sec) key for 3 seconds until a long tone sounds, and the replacement time for the filter is recounted.

Remind As a reminder, use dust cleaning to suck dust for the HEPA dust collection filter, and never wash it with water in order not to lose function of the filter.

When Suspecting Malfunction

Malfunction Condition

The machine body does not run as the "Power Off/On" key is pressed

- Is the power plug plugged into the socket properly?
- Is there no fuse switch at home or is the fuse blown out?
- Is there power outage?

Too small air volume is perceived

- Is the filter too dirty such that ventilation does not work due to blocking?
- Are the air inlet and the air outlet of the machine blocked?

As the noise is too loud

- Is the level of the desktop, ground surface where the machine body is placed horizontally is not flat?

Method of Emergency Treatment

Stop running immediately in case of the following symptoms, followed by unplugging the power plug and consulting your nearest service station or dealer.

- As there is no fuse switch or fuse is tripped or blown out frequently.
- As unintentionally introduce foreign object or water into the machine.
- As power cord or plug is exceptionally heated.



- As power cord is damaged and needs to be exchanged, please send it to your nearest service station or dealer in order for safety.
- As there is an exception (smell of burning, etc.), the running function shall be stopped and the power plug shall be removed.
- Never conduct repair work by yourself. Poor repair is a cause of fire and electric shock.

Optional Accessories

Part Name	Model	Please purchase it from your nearest service station or dealer.
HEPA dust collection filter for replacement	F-ZEHC15Z	

Specifications

Model Name	F-P15EHH
Voltage Frequency	220 V~ 50 Hz
Total rated power consumption (※1)	29 W
Air Volume	1.6 m ³ /min
Applicable Area (※2)	13 m ²
Dimensions	310 mm (Width) x 165 mm (Depth) x 385 mm (Height)
Product Weight	3.5 kg

(※1) A power of 0.9 W is still consumed even in a standby state in which the running is stopped.

(※2) Usable area tool JEM 1467 is measured at a high-speed running state.
(Standard of Japan Electrical Manufacturers' Association)

安全注意事項

請務必遵守

- 如果機器的電源線壞了，必須委託該機器的製造廠商，維修服務中心或有資格的技術人員替您更換以防發生危險。
- 此機器不適合傷殘人士、知覺障礙人士、智力障礙人士或兒童自行操作。如有安全負責人在場監督及提供指導下協助操作此機，則屬例外。
- 請勿讓兒童擅自操作本產品。
- 維修保養前，請務必拔下電源插頭。

為防範未然避免危害使用者及他人財產，列舉務必遵守事項如下加以說明。

■當忽視表示內容而使用方式錯誤時會導致的危害及損害程度，以下面的表示來區分說明。


 警告	本欄所表示的內容為「有可能導致死亡或重傷」。	 注意	本欄所表示的內容為「有可能導致傷害或僅有財物可能發生損害」。
---	------------------------	---	--------------------------------

■將需要遵守內容的種類以下面的圖形來區分說明。

  本圖形表示「禁止」之意。	 本圖形表示務必「強制」實行之意。
--	--

警告

■請不要損壞電源線・電源插頭

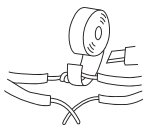

請不要割傷、加工、強力彎曲、拉扯、上壓重物或用尼龍綁帶及鐵絲捆綁。損壞後繼續使用有可能導致短路、火災或觸電。

●若電源線損壞時，必須由製造商、其服務處或具有相關資格的人員加以更換以避免危險。


■定期清理電源插頭上的塵埃和污垢



電源插頭上的塵埃會累積濕氣，導致電源插頭的絕緣層失去效用，可能導致火災或觸電。


●拔出電源插頭並用乾布拭抹。當不需使用清淨機時，緊記拔出電源插頭。

■移動或存放時禁止拉扯電源線

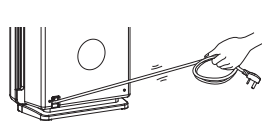


否則電源線可能會損壞，導致火災或觸電。

■避免電源線破損或加工

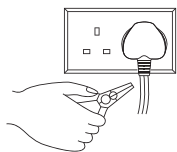


放置重物、加熱、拉扯所產生的破損，可能導致火災或觸電。

■勿使用規定之外的電壓

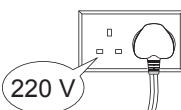

有可能由於發熱導致火災或觸電。

■請勿使用損壞的電源線

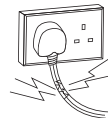

使用損壞的電源線可能導致短路、火災或觸電。請洽詢直屬服務站或經銷商。

■手潮濕時請勿拔取插頭




可能導致觸電。

■請不要用拔下電源插頭的方式來關機



有可能由於發熱導致火災或觸電。


■清潔時要停機並且將電源插頭拔下

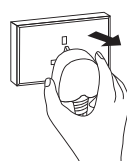

可能有觸電的危險。


警告

■ 使用時不要超出電源插座及配線器具的額定電流

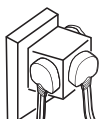

如果使用過多分支線超過額定電流，有可能由於發熱導致火災或觸電。

■ 請不要將手指或棒類等異物放入出入風口或縫隙中

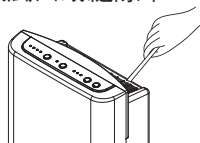

由於裡面的風扇高速旋轉，可能導致傷害或觸電。


■ 異常時（有燒焦氣味等）請停機後將電源插頭拔下



由於發熱等原因可能導致火災、觸電。


● 請洽詢直屬服務站或經銷商。

■ 請不要在有陽光直射、風吹雨淋的地方使用

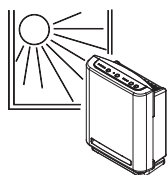

由於受熱可能導致火災或觸電。


■ 請不要自行修理

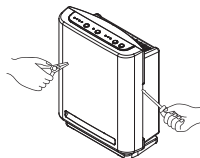

有可能導致火災或觸電。

● 須修理時，請洽詢直屬服務站或經銷商。


■ 機體不要沾水或潑水

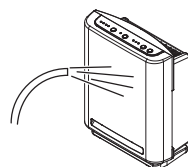

有可能漏電導致火災或觸電。

注意

■ 拔下電源插頭時，請勿強拉電線

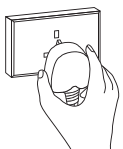


如果拉扯電源線有可能損壞電源線導致短路、火災或觸電。

■ 當長時間不用本機器時，為安全起見請將電源插頭拔下



如果電源插頭附有灰塵及異物有可能導致發熱或火災。

■ 請放在平穩且堅固的地板上使用

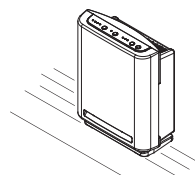

以防止傾倒發生，造成受傷。

■ 請由後方把手孔提取製品，不要由前面板處提取製品




請由此處提取




以避免提取時製品主體落下，砸傷腳部或砸壞物品。

■ 機器運轉時，請勿把前面板與濾網取下

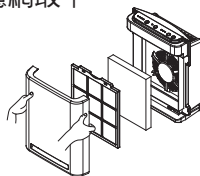

避免運轉時異物進入製品，此時，裡面的風扇高速旋轉，可能導致傷害或觸電。


■ 禁止將點燃的香煙、香燭等可燃物接近產品

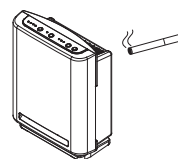

否則產品吸入易燃物後可能會起火，導致火災。



■請勿讓動植物直接吹風

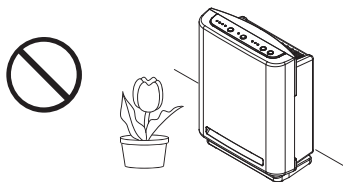


會造成動植物有不良影響產生。

■請不要在可能有可燃性氣體洩漏的地方使用



如果可燃性氣體洩漏充斥周圍空間，有可能導致火災。

■請勿在浴室等潮濕的地方使用

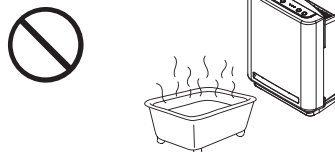


有觸電或導致故障的危險。

■請不要在壁櫥等狹窄的空間使用



由於通風不良有可能導致發熱或火災。

■請不要坐在或爬到機器上面

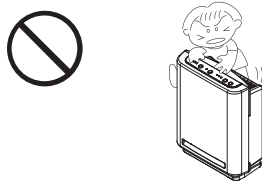

有可能由於滑落、跌倒導致傷害。

■請不要將出入風口用布或被子蓋住




由於通風不良有可能導致發熱或火災。

■禁止使用汽油或其他揮發性混合溶劑擦拭產品，以及把殺蟲劑噴到產品上



否則產品可能會破裂或短路，導致受傷、火災或觸電。

■與暖爐或燃燒器同時使用時，請保持通風良好（本機並非去除一氧化碳的裝置，須保持空氣流通）

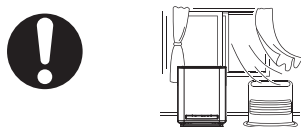

可能有一氧化碳中毒的危險。

■使用煙熏型殺蟲劑時禁止使用本產品



否則化學殘留物可能會在產品內聚集，然後從出風口排出，危害身體健康。


●使用殺蟲劑後，應先讓房間徹底通風，然後才可使用本產品。

各部位名稱說明及功能

本體


HEPA集塵濾網

濾網之設計可有效過濾空氣中危害健康的微粒子。前面淺綠色濾網可有效抑制細菌滋長。活性碳濾網可有效去除臭味。※剛購買或更換濾網時請將濾網由塑膠袋中取出。

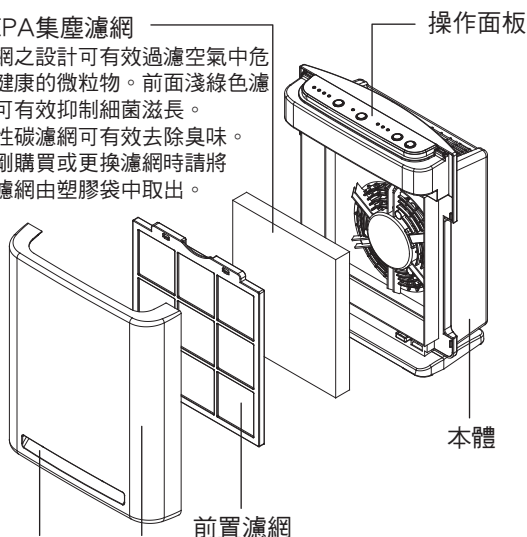


過濾大型微粒子，可有效延長HEPA集塵濾網壽命。

背面

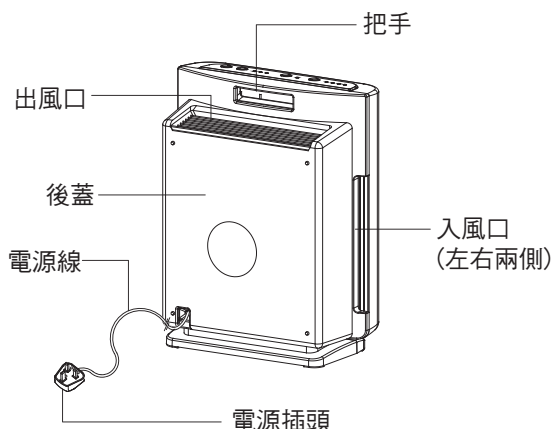


1 將HEPA集塵濾網包裝袋取下 (第一次使用)


- 將前面板、前置濾網、HEPA集塵濾網取下。

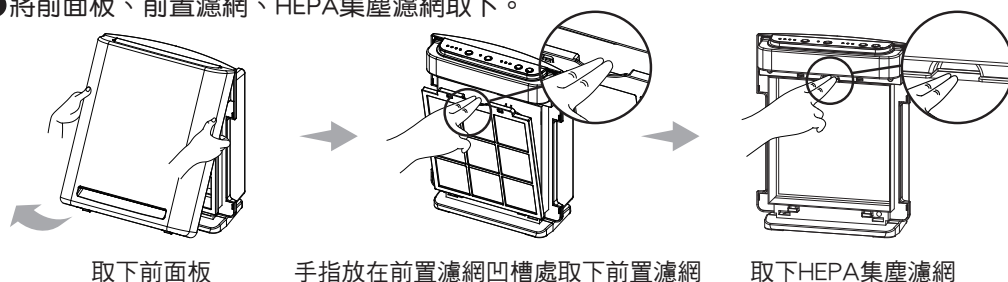


- 將HEPA集塵濾網之包裝袋取出。

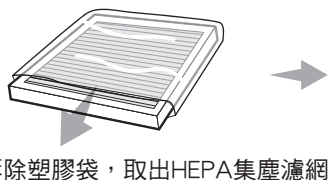

- 在集塵濾網上的貼紙上記錄開始使用日期。

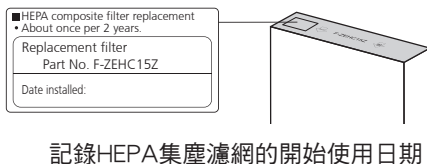

- 反順序裝回HEPA集塵濾網、前置濾網。

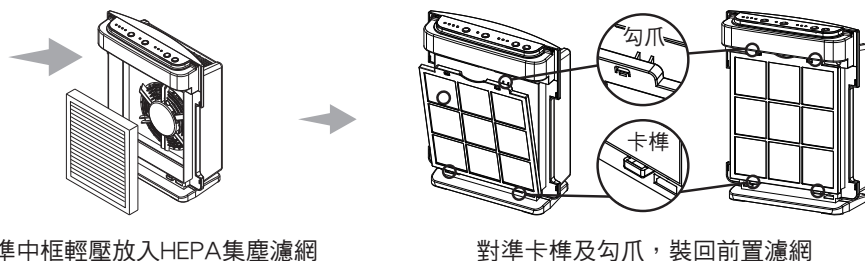


提醒 HEPA集塵濾網之淺綠色面朝前

- HEPA集塵濾網組成淺綠色濾網為抑菌濾材，內部為白色集塵濾網及黑色活性碳濾網。組裝時，請將淺綠色集塵網面朝前。

各部位名稱說明及功能

2 將前面板裝回定位

- 取前面板，將上緣之卡榫扣上本體之凹槽，再將前面板下緣兩側往本體推，聽到”喀”聲即卡住本體。

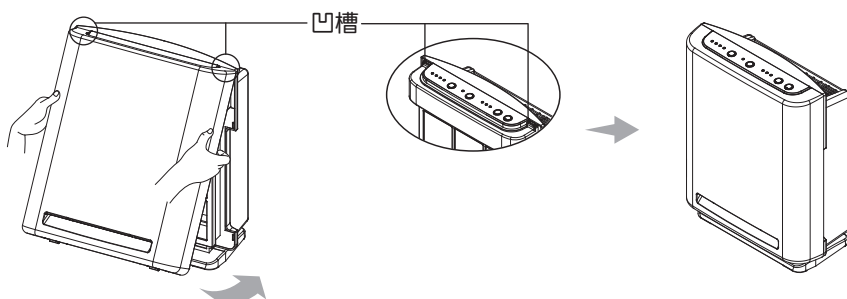


更換HEPA集塵濾網的參考時間

濾網型號	濾網更換期限	條件
F-ZEHC15Z HEPA集塵濾網	大約2年1次	每天吸入5支香菸排放量時(濾網的更換周期的測算標準) (日本電機工業協會標準JEM1467)


- 根據使用場所和使用方法(例如吸菸人數較多的家庭)，濾網的更換周期可能會縮短。
總之效果不好時請及時更換。

想事先了解！有效率設置方法

- 長時間在相同場所使用時
本體周邊的牆壁或地板會有髒污的情形發生。
→在維護保養本體時，建議將設置場所或在本體與牆壁之間留下足夠的空間。
- 為了讓室內空氣有效率的循環
出風口應與牆壁或傢俱保持約 30 cm 以上的距離。
- 為了避免畫面紊亂或雜音產生
 - 請和電視機或收音機等距離 1 m 以上放置。
 - 請勿和電視機或收音機等使用同一個插座。

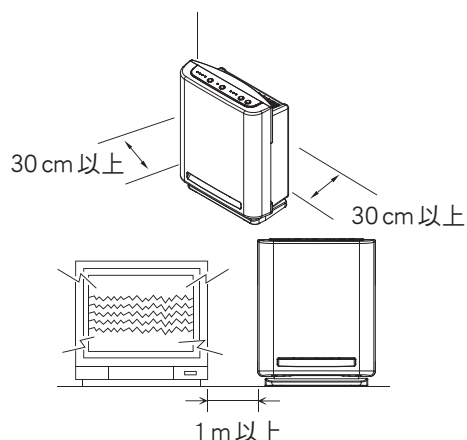

使用方法

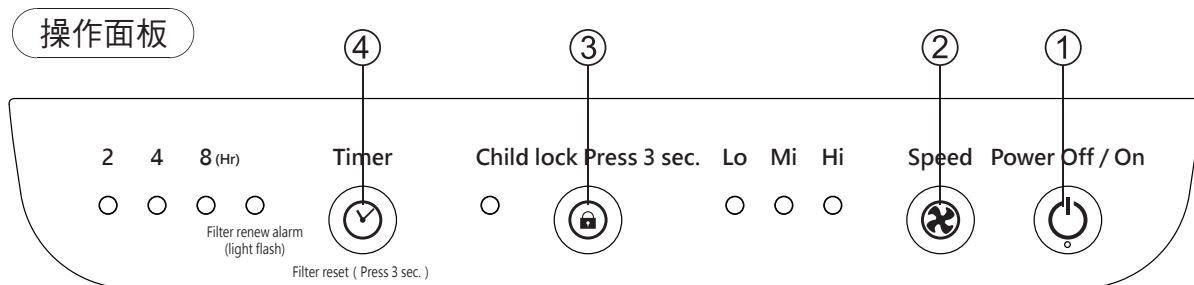

準備動作

將電源插頭插入插座 (220 V)，按操作面板之「Power Off / On」鍵啟動製品運轉。

① 按下 鍵 (電源開)

- 第一次按此鍵時，風量指示燈“Mi”點亮開始運轉。
- 再按此鍵，機體電源全部關閉。


② 按下 鍵

運轉中，每按一次，風量依下圖指示切換。



③ 長按 鍵開啟兒童安全鎖

- 長按此鍵3秒，開啟兒童安全鎖功能，燈亮，反之，關閉兒童安全鎖功能，燈滅。

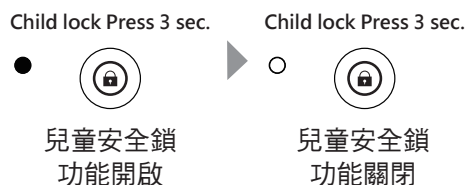


④ 按下 鍵

Filter reset (Press 3 sec.)

設定運轉時間

- 運轉中，每按一次，依下圖指示切換。

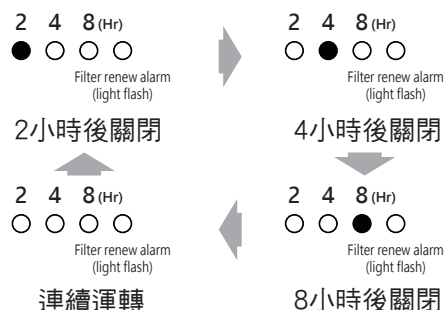

- 指示燈會隨時間經過而自動顯示剩餘時間。



長按3秒濾網壽命重計功能

- 當濾網更換提醒燈閃爍時(濾網壽命約2年)，代表需更換濾網。2 4 8 (Hr) Filter renew alarm (light flash)
- 濾網更換後，在開機狀態下，長按此鍵3秒至發出長音，表示濾網更換完成，濾網壽命重新計算。
- 若濾網更換提醒燈未閃爍即長按此鍵3秒至發出長音，則濾網壽命也會重新計算。

使用方法


提醒

- 本製品具備記憶功能，於按 Power Off / On 鍵使製品停止運轉後，再按此鍵啟動運轉，則製品自動設定於前次運轉狀態。(定時不在記憶範圍之內)
範例:如原設定中速運轉，定時2小時，兒童安全鎖開啟，當定時到達條件自動關機後，若要再開機則要先將兒童安全鎖取消，才可再開機，開機後則恢復中速運轉。
- 此項記憶功能於電源插頭拔除後消失。

操作方法

例：空氣中有不喜歡的煙味和異味，還有孩童在場，設定風量為強速，運轉 2 小時，兒童安全鎖開啟。


1 插入電源插頭後按下操作面板之「Power Off / On」鍵

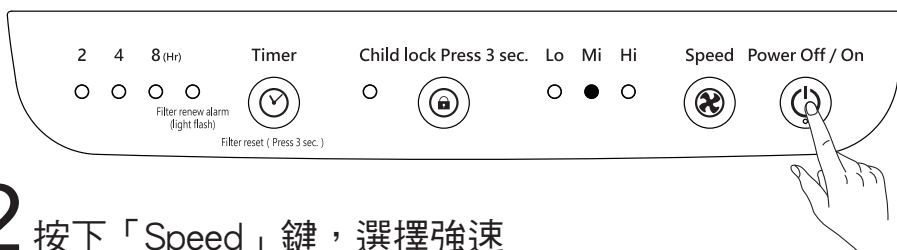


2 按下「Speed」鍵，選擇強速



3 按「Timer」鍵，選擇2小時

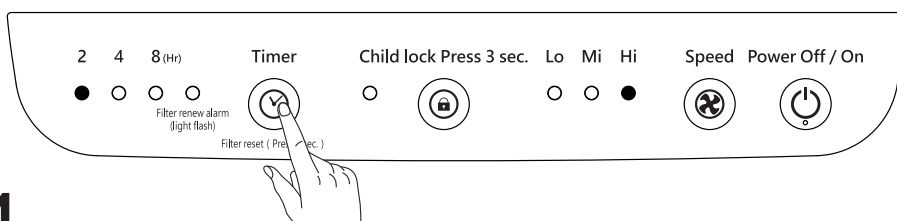

4 長按「Child lock Press 3 sec.」鍵3秒，開啟兒童安全鎖功能

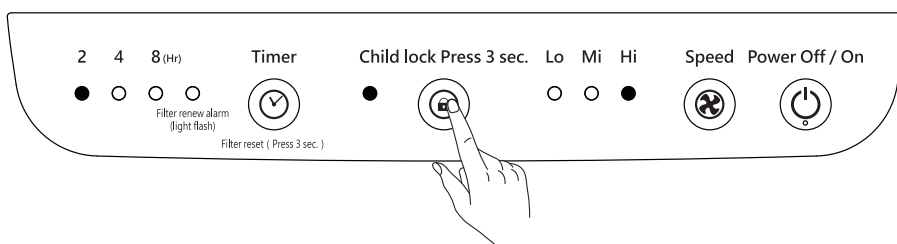

清潔保養方法



警告




維護保養產品前，請務必拔出電源插頭。
(否則產品可能會突然運轉，導致觸電或受傷。)

提醒 建議每隔 1 ~ 2 個月進行一次清潔保養。


機體清理 (每1~2個月一次)

- 機體的污垢可用抹布沾水或中性清潔劑擦拭。

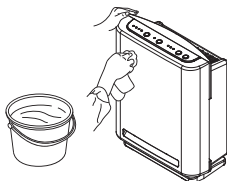





吸風口的清掃 (每1~2個月一次)

- 吸風口的灰塵，請用乾布擦拭或吸塵器吸取清除。

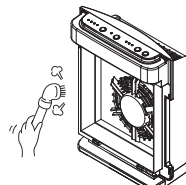

前置濾網清洗(每1~2個月一次)

- 雙手勾住前面板左右，往外拉即可取下前面板，將前置濾網取下。
- 使用清水、中性清潔劑或吸塵器清理，完成後晾乾再裝回機體內即可。

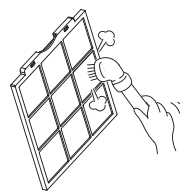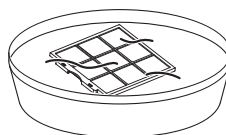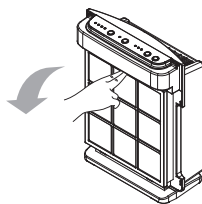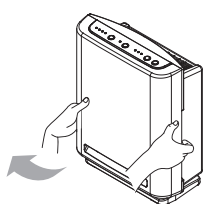

濾網的清理與更換(每1個月一次)

濾網清理更換時間

- 出風口風量變小，聲音變大，請檢查濾網是否該清理或更換，一般而言約1個月清理一次。
- 因使用場所環境的不同，HEPA集塵濾網的使用壽命亦有差異，一般而言約2年更換一次。



更換用HEPA集塵濾網(另購)：F-ZEHC15Z 請向直屬服務站或經銷商購買。

濾網清理更換方法

1 取下前面板、前置濾網

- 前置濾網之取下方式，請參照上記之前置濾網清洗。

伸入前面板下緣，往前拉，前面板即可取下。

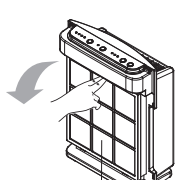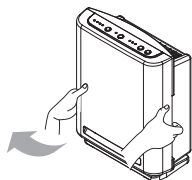

前置濾網

2 將濾網由機體取出

- 先拆下前置濾網，再取下HEPA集塵濾網。


3 依據濾網表面髒污的情況判斷濾網更換或清理

更新時

- 剛購買或更換濾網時請將濾網由塑膠袋中取出。

清理時

- 以吸塵器清理濾網表面即可。
- 不可水洗及使用刷子清理。

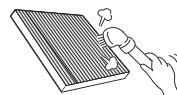

4 安裝前置濾網、前面板、插上電源插頭

- 更換濾網後，在開機狀態下，請長按 Timer/Filter reset (Press 3 sec.) 鍵3秒至發出長音，濾網更換時間重新計算。

提醒 HEPA集塵濾網用吸塵器吸取灰塵，不得以水清洗，以免喪失濾網之效能。

懷疑故障發生時

故障狀況

按「Power Off / On」鍵
時機體不運轉

- 電源插頭是否確實插入插座？
- 家中無熔絲開關或保險絲是否切斷？
- 有沒有停電？

感覺風量太少

- 濾網是否太髒了，阻塞不能通風？
- 機台入風口及出風口是否堵塞？

噪音太大時

- 機體平放處的桌面、地面是否不平？

緊急處理方法

出現下述症狀時立即停止運轉，拔下電源插頭並洽詢直屬服務站或經銷商。

- 無熔絲開關或保險絲經常跳脫或熔斷時。
- 誤將異物或水引入機內時。
- 電源線或插頭異常發熱時。



- 電源線受損需要交換時，基於安全理由，請送到直屬服務站或經銷商。
- 發生異常時（燒焦味等）須停止運轉功能，拔掉電源插頭。
- 請勿自行進行修理工作，修理不善是引起火災及觸電發生的原因。

自選配件

部 品 名 稱	型 號
更換用HEPA集塵濾網	F-ZEHC15Z

請向直屬服務站或經銷商購買。

規格

型 號	F-P15EHH
電 壓 頻 率	220 V~ 50 Hz
總額定消耗電功率 (※1)	29 W
風 量	1.6 m ³ /min
適 用 面 積 (※2)	13 m ²
產 品 尺 寸	闊 310 mm x 深 165 mm x 高 385 mm
產 品 重 量	3.5 kg

(※1)即使是運轉停止待機狀態下，約消耗 0.9 W 電力。

(※2)適用面積依據JEM 1467，在高速運轉的狀態下測定。(日本電機工業協會標準)

Panasonic Corporation

Web Site : <http://www.panasonic.com/>