

# Panasonic

Operating Instructions

使用說明書

Arahan Pengendalian

คู่มือการใช้งาน

دفترچه راهنما روش استفاده

تعليمات التشغيل

Hand Blender (Household Use)

手提攪拌機 (家庭用)

Pengisar Tangan (Kegunaan rumah tangga)

เครื่องตีผสมแบบมือถือ (สำหรับใช้ในครัวเรือน)

مخلوطکن دستی (برای استفاده خانگی)

خلاط يدوي (استعمال منزلي)

Model No. **MX-SS1**  
**MX-GS1**

English

中文 (繁體)

Melayu

 
ภาษาไทย

فارسی

عربي



MX-SS1

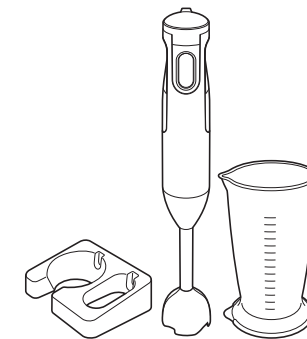

MX-GS1

Panasonic Taiwan Co., Ltd.

Web Site : <http://panasonic.net/>

© Panasonic Taiwan Co., Ltd. 2013

MZ50J236  
F0913S0

SK-TM-ST

# Contents

|  | Page |
|--|------|
| Safety Precautions                           | EN3  |
| Important Information                        | EN7  |
| Parts Names and Handling Instructions        | EN8  |
| How to Use                                   |      |
| • Using the blender attachment               | EN10 |
| • Using the chopper attachment (MX-SS1 only) | EN12 |
| • Using the whisk attachment (MX-SS1 only)   | EN14 |
| How to Clean                                 | EN16 |
| Troubleshooting                              | EN18 |
| Replacement Parts                            | EN19 |
| Specifications                               | EN19 |
| Fixing the wall bracket                      | EN19 |

Thank you for purchasing the Panasonic product.

- This product is intended for household use only.
- Please read these instructions carefully to use the product correctly and safely.
- Before using this product **please give your special attention to "Safety Precautions"** (Page EN3–EN7).
- Please keep this Operating Instructions for future use.


# Safety Precautions

Please make sure to follow these instructions.


In order to prevent accidents or injuries to the user, other people, and damage to property, please follow the instructions below.


■ The following charts indicate the degree of damage caused by wrong operation.

 **WARNING:** Indicates serious injury or death.

 **CAUTION:** Indicates risk of injury or property damage.

 
■ The symbols are classified and explained as follows.

 This symbol indicates prohibition.

 This symbol indicates requirement that must be followed.

## WARNING

- **Do not damage the power cord or power plug.**  
Following actions are strictly prohibited.  
Modifying, touching on or placing near heating elements, bending, twisting, pulling, pulled over sharp edges, putting heavy objects on top, bundling the power cord and carrying the appliance by the power cord.  
(It may cause electric shock, or fire due to short circuit.)

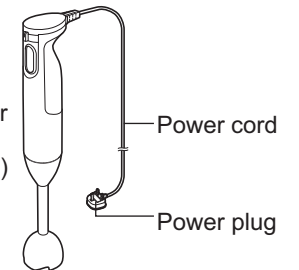




- **Do not use the appliance if the power cord or power plug is damaged or the power plug is loosely connected to the outlet.**  
(It may cause electric shock, or fire due to short circuit.)  
→ If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- **Do not plug or unplug the power plug with wet hands.**  
(It may cause electric shock.)
  - Always ensure that hands are dry before handling the power plug or switching on the appliance.



# Safety Precautions

Please make sure to follow these instructions.


## WARNING

-  ● **Make sure the voltage indicated on the label of the appliance is the same as your local supply.**  
(It may cause electric shock or fire.)
  - Also avoid plugging other devices into the same outlet to prevent electric over heating. However, if you are connecting a number of power plugs, make sure the total wattage does not exceed the rated wattage of the outlet.
- **Insert the power plug firmly.**  
(Otherwise it may cause electric shock and fire due to heat that may be generated around the power plug.)
- **Clean the power plug regularly.**  
(Dust and moisture build-up on the power plug may cause insufficient insulation, which may cause a fire.)
  - Unplug the power plug, and wipe with a dry cloth.
- **Keep the power cord out of reach of children. Do not let the power cord hang over the edge of the table or worktop.**  
(It may cause burns, injury or electric shock.)
-  ● **Do not immerse the appliance in water or splash it with water.**  
(It may cause electric shock, or fire due to short circuit.)
- **Do not disassemble, repair or modify this appliance.**  
(It may cause fire, electric shock or injury.)
  - Please contact the service centre for the repair.
-  ● **This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.**  
(It may cause burns, injury or electric shock.)

## WARNING

-  ● **Always keep the children away from the appliance.**  
(It may cause burns or injury.)
  - Children do not realise dangers that are likely to occur because of improper use of appliances.
- **Discontinue using the appliance immediately and unplug in the unlikely event that this appliance stops working properly.**  
(It may cause smoking, fire, electric shock or burns.)  
e.g. for abnormal or breaking down
  - The power plug and the power cord become abnormally hot.
  - The power cord is damaged or the appliance power fails.
  - The main body is deformed, has visible damage or is abnormally hot.
  - There is abnormal turning noise while in use.
  - There is crack on the beaker and chopper bowl.
  - There is another abnormality or failure.
  - Please unplug the appliance immediately and contact the service centre for the check or the repair.
-  ● **Do not allow infants and children to play with packaging material.**  
(It may cause suffocation.)

## CAUTION

-  ● **Do not use the appliance for any purpose other than those described in these instructions.**  
(It may cause burns or injury.)
  - Panasonic will not accept any liability if the appliance is subject to improper use, or failure to comply with these instructions.

# Safety Precautions

Please make sure to follow these instructions.

## CAUTION



- **Do not use the appliance on following places.**
  - On uneven surfaces, on carpet or table cloths etc. (It may cause fire or injury.)
  - Place where it may be splashed with water or near a heat source. (It may cause electric shock or electrical leakage.)
  - Near any open water such as bathtubs, sinks, or other containers. (It may cause electric shock or electrical leakage.)
  - Near a wall or furniture. (It may cause discolouration or deformation.)
- **Do not insert any object in the gaps.** (It may cause electric shock.)
  - Especially metal objects such as pins or wires
- **Do not place hot ingredients (over 60 °C) into the beaker and chopper bowl.** (It may cause burns due to overflow or injury by broken containers.)
- **Do not hold the appliance by the power cord.** (It may cause electric shock or injury.)
- **Do not continue operation for a long time.** (It may cause burns.)
- **Do not replace any parts of the appliance with the spare parts other than this appliance genuine parts.** (It may cause fire, electric shock or injury.)
- **Do not use the blender when the saucepan is on the heat source.** (It may cause burns.)
- **Make sure to hold the power plug when unplugging the power plug. Never pull on the power cord.** (Otherwise it may cause electric shock, or fire due to short circuit.)
- **Place the appliance on a firm, dry, clean flat heatproof worktop.** (It may cause injury.)

## CAUTION




- **Beware not to be tripped over or get caught in the power cord while in use.** (Otherwise it may cause burns or injury.)
- **Always disconnect the hand blender from the supply if it is left unattended and before assembling, disassembling or cleaning; -do not allow children to use the hand blender without supervision.** (It may cause fire, electric shock or injury.)
- **Switch off the appliance and disconnect from supply before changing attachment or approaching parts that move in use.** (It may cause injury.)
- **Care shall be taken when handling and cleaning the blades.** (It may cause injury.)
- **Do not put your fingers, spoon or fork close to the blade while the appliance is operating.** (It may cause injury.)

## Important Information

- Do not place the beaker and chopper bowl on any heat sources or in a microwave.
- Do not drop the appliance to avoid damaging the appliance.
- Do not use the appliance outdoors.
- Do not wrap the power cord around the motor housing.
- Make sure attachments are set firmly.
- Make sure to clean the appliance after every use.
- Do not move the chopper by holding the chopper lid or motor housing.


# Parts Names and Handling Instructions

- The illustrations inside mainly show model MX-SS1.
- Wash all the detachable parts before using the appliance for the first time or when you have not used it for a while. (P. EN16)

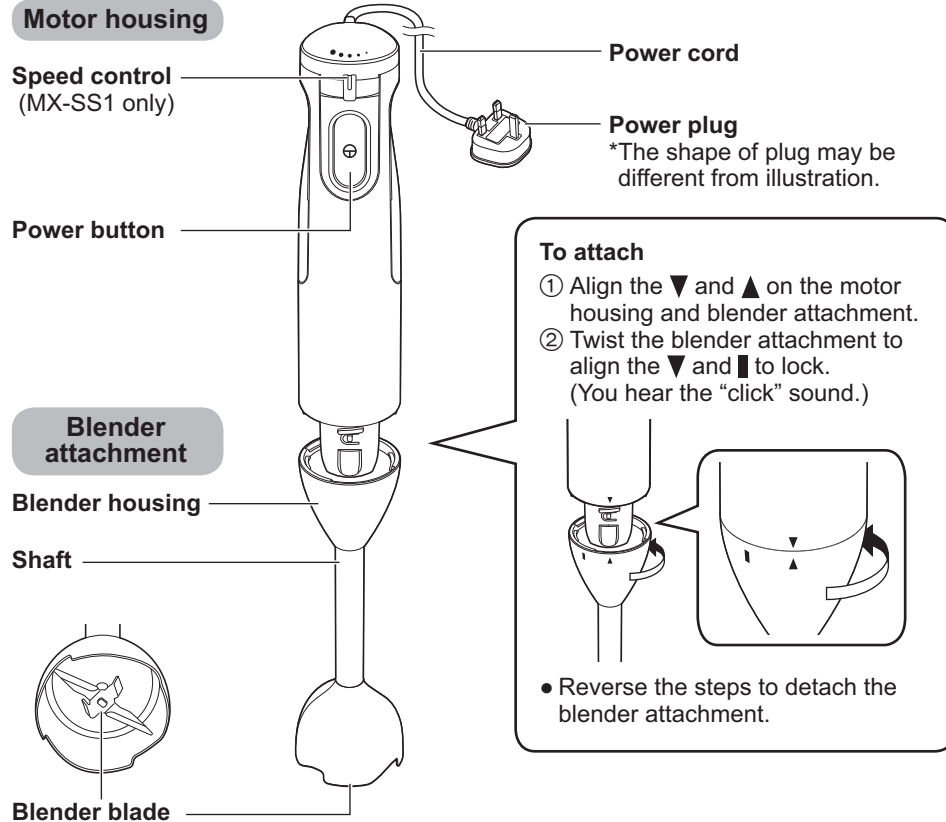 

### To attach

 
- ① Align the ▼ and ▲ on the motor housing and blender attachment.
- ② Twist the blender attachment to align the ▼ and ■ to lock. (You hear the “click” sound.)

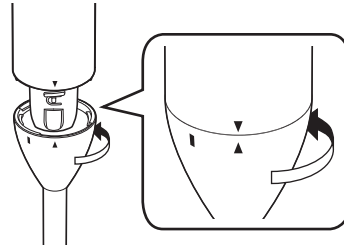

- Reverse the steps to detach the blender attachment.


### Accessories
 
#### Beaker

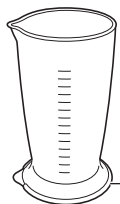

Base  
(Also use as lid.)


#### Wall bracket

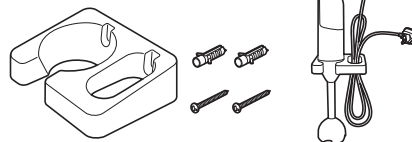 


- To fix the wall bracket, refer to page EN19.

### Chopper attachment (MX-SS1 only)

 
#### Chopper lid

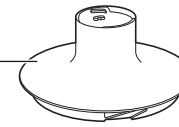

#### Chopper blade

 

#### Chopper bowl

 

#### Blade shaft

 


#### Packing

### Note


- Be sure to attach the chopper lid correctly.

### Incorrect

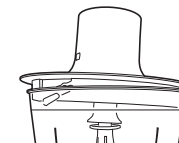

### To attach

 - ① Insert the chopper blade into the blade shaft.
- ② Match the groove inside of the chopper lid and top of the chopper blade. If it is hard to attach them, turn the top of the chopper blade a little and close the chopper lid again.
- ③ Align the groove of the chopper lid and convex of the chopper bowl, then turn the chopper lid clockwise to close it. (You hear the “click” sound.)
- ④ Align the ▼ and ▲ on the motor housing and chopper lid.
- ⑤ Twist the motor housing to align the ▼ and ■ to lock. (You hear the “click” sound.)

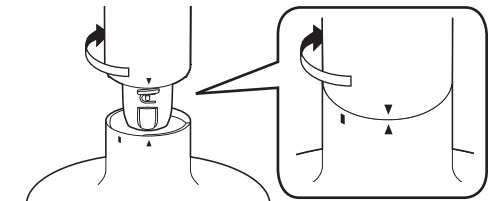

- Reverse the steps to detach the chopper attachment.

### Whisk attachment (MX-SS1 only)

#### Whisk adapter

 


#### Whisk



### To attach

- ① Insert the whisk into the whisk adapter. (You hear the “click” sound.)
- ② Align the ▼ and ▲ on the motor housing and whisk attachment.
- ③ Turn the whisk attachment to align the ▼ and ■ to lock. (You hear the “click” sound.)

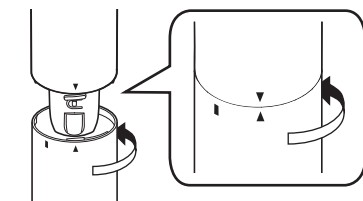

- Reverse the steps to detach the whisk attachment.

# How to Use Using the blender attachment

- Using blender attachment for sauces, dips, soup, fruit, milk shakes, cooked vegetables baby food or making mayonnaise, etc.
- You can use the other container such as deep bowl instead of the beaker.

## Note

- Do not exceed the quantity of ingredients higher than connection of the blender housing and shaft.
- Do not insert or remove the appliance from the bowl during the power button is pressed.
- Avoid scratching the pan or bowl when blending ingredients by hitting.
- The mixture may overflow from the beaker depend on ingredients, its quantity and/or movement of the blender. In that case reduce the quantity of the mixture.

## Prohibition Ingredients

 
Do not use the hard ingredients as they may damage the blade.

- Hard ingredients such as:
  - coffee beans
  - fish
  - meat
  - frozen food
  - ice cube
  - soy beans
  - turmeric etc.
- Sticky ingredients
- Hard dough such as bread dough.

## Preparations


- Pre-cut ingredients into approx. 2 cm cubes or sticks.

## 1 Attach the blender attachment to the motor housing. (P. EN8) Then plug in.

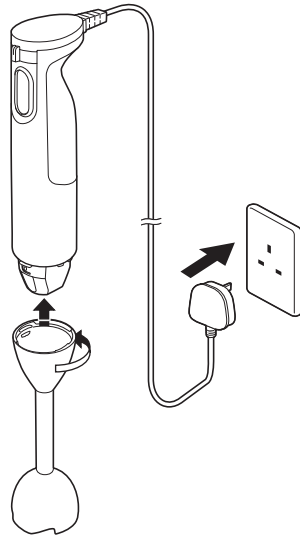


- Make sure blender attachment is attached firmly.

## 2 Insert the blender into the beaker and hold the power button down to start.

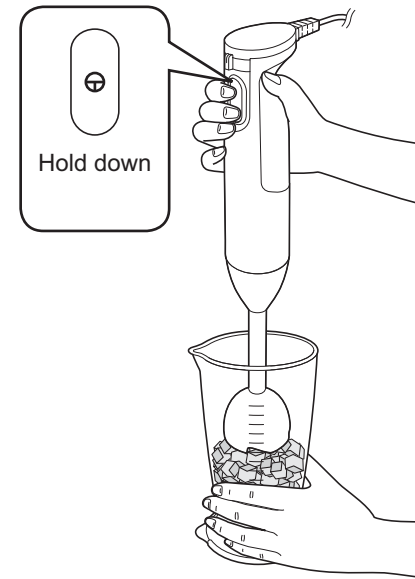 

- Do not operate the blender continuously for more than 1 minute. Rest over 3 minutes after 1 minute operation at two consecutive cycles.
- Adjust speed by turning the speed control. (MX-SS1 only)
- The blender lightly touch the bottom of beaker and start blending.
- While operating, hold the beaker steadily.

## 3 When blending is complete, release power button before removing the appliance from the mixture.

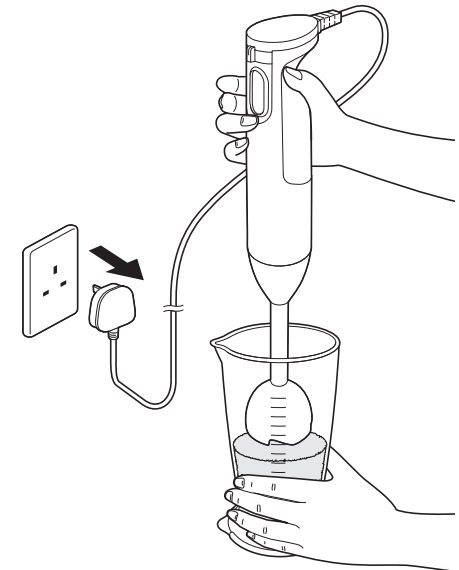 

**Unplug immediately after use and remove the blender attachment.**

# How to Use Using the chopper attachment (MX-SS1 only)

■ Using chopper attachment to chop food such as vegetables, nuts, cheese, herbs, crackers, bread and meat.

## Note

- The mixture may overflow from the chopper bowl depend on ingredients, its quantity, too much liquid and/or mixing speed. In that case reduce the quantity of the mixture.

## Prohibition Ingredients

 
Do not use the hard ingredients as they may damage the blade.

- Hard ingredients such as:
  - coffee beans
  - frozen food
  - ice cube
  - soy beans
  - turmeric etc.
- Sticky ingredients
- Hard dough such as bread dough.

## Preparations


- Pre-cut ingredients into approx. 2 cm cubes or sticks.
- Un-shell nuts.
- Remove bones, tendons and gristle from meat.

**1** Insert the chopper blade into the chopper bowl and place cut ingredients into the chopper bowl.

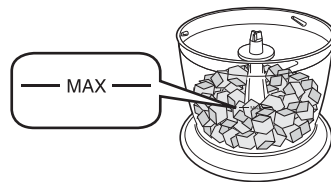


- Do not exceed the quantity of ingredients higher than MAX line.

 **2** Close the chopper lid and attach the motor housing onto the chopper attachment. (P. EN9) Then plug in.

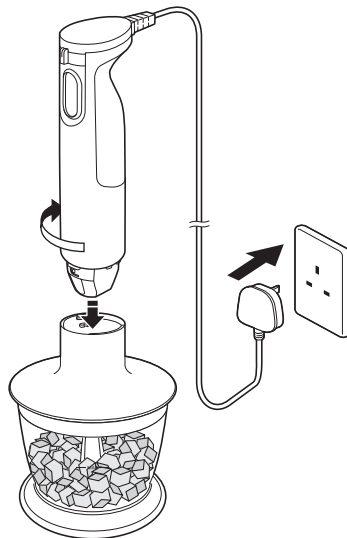


- Make sure the chopper lid and chopper attachment are attached firmly. Otherwise, it may cause malfunction.

 **3** Hold the power button down to start.

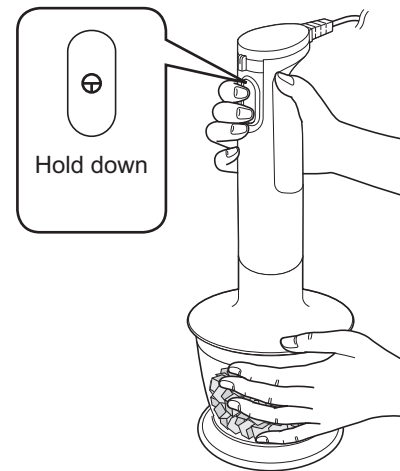

- Do not operate the chopper continuously for more than 1 minute. Rest over 3 minutes after 1 minute operation at two consecutive cycles.
- Adjust speed by turning the speed control.
- While operating, hold the chopper lid steadily. (It may loose it up by vibration during operating.)
- During the operation, do not open the chopper lid.

 **4** When chopping is complete, release the power button before removing the motor housing.

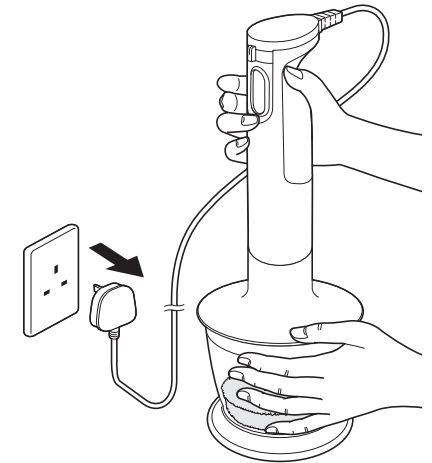

**Unplug immediately after use and remove the motor housing.**

## Reference for quantity and time

| Ingredients     | Max. quantity | Operating time (approx.) | Speed (MX-SS1 only) |
|-----------------|---------------|--------------------------|---------------------|
| Onion           | 200 g         | 10 sec.                  | ● ● ● ● ●           |
| Carrot          |               | 10-30 sec.               | ● ● ● ● ●           |
| Meat            |               | 30 sec.                  |                     |
| Parmesan cheese |               | 20 sec.                  |                     |
| Nuts            |               | 30 sec.                  |                     |
| Dry bread       | 80 g          |                          |                     |

- If amount of the ingredient is too little, the chopper blade cannot be contacting with them and result of the quality is unsatisfactory.

# How to Use Using the whisk attachment (MX-SS1 only)

- Using whisk attachment to whip cream or beat egg whites.
- Use the deeper bowl to avoid splashing ingredients.

## Note

- Avoid scratching the pan or bowl when blending ingredients by hitting.
- When whip eggs, do not exceed 4 eggs whites.

 
## Prohibition Ingredients

- Hard dough such as bread dough.

## Preparations


- Chilled cream before whipping it.

## 1 Attach the whisk attachment into the motor housing. (P. EN9) Then plug in.

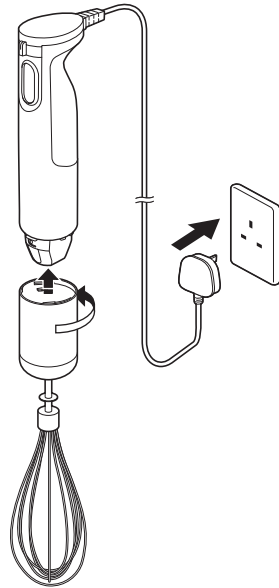


- Make sure the whisk attachment is attached firmly.

## 2 Insert the whisk into the bowl and hold the power button down to start.

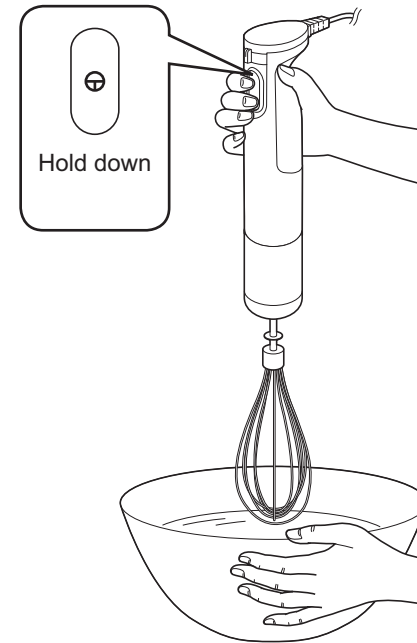 

- Do not operate the whisk continuously for more than 2 minutes. Rest over 3 minutes after 2 minutes operation at two consecutive cycles.
- Hold the whisk vertically when whipping ingredients.
- Adjust speed by turning the speed control.
- The whisk lightly touch the bottom of bowl and start whisking.
- While operating, hold the bowl steadily.
- When the ingredients are of small quantity, whisk well by tilting the bowl.

## 3 When whisking is complete, release the power button before removing the whisk.

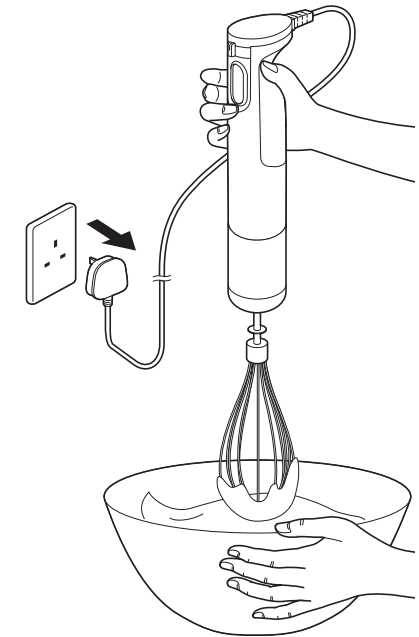 

**Unplug immediately after use and remove the whisk attachment.**



# How to Clean


- Clean the appliance after every use.
- Unplug before cleaning.

**Note**

- Do not use benzine, thinner, alcohol, bleach, polishing powder, metal brush or nylon brush, otherwise the surface will be damaged.
- Do not wash the motor housing, chopper lid and whisk adapter in a dishwasher.
- Do not clean the appliance with pointed object such as a toothpick or pin.


**Motor housing/Wall bracket**

Wipe with a well-wrung cloth.

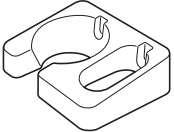

**Beaker\*/Base**

Wash with diluted dish soap (neutral) and a soft sponge.

 


**Blender attachment\***

Fill the beaker with water and operate the blender approx. 5 seconds in the beaker to remove residue. Change the water and repeat it few times. Then wash with diluted dish soap (neutral) and a brush with handle.


**Note**

Care shall be taken when handling and cleaning the blades.

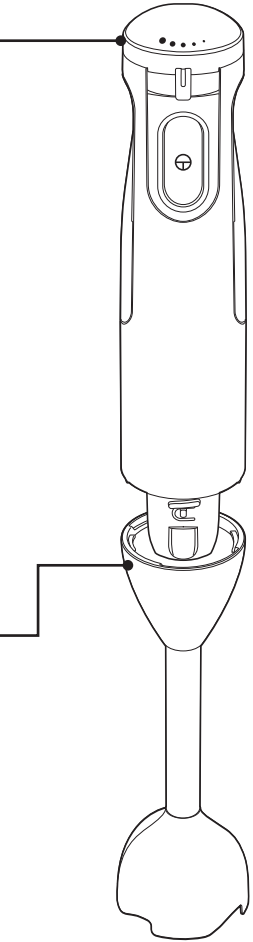

\*Dishwasher safe

 (MX-SS1 only)

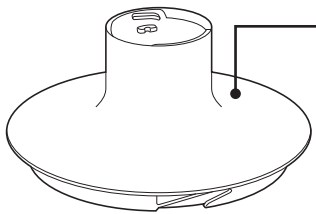


**Chopper lid**

Wash with diluted dish soap (neutral) and a soft sponge.

**Note**

 Do not soak in water.

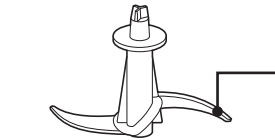


**Chopper blade\***

Wash with diluted dish soap (neutral) and a brush with handle.


**Note**

 Care shall be taken when handling and cleaning the blades.

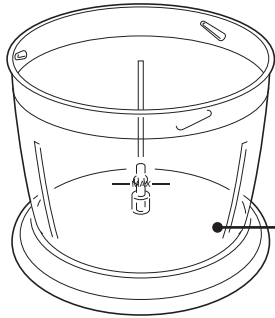


**Chopper bowl\*/Packing**

 Wash with diluted dish soap (neutral) and a soft sponge.



**Whisk adapter**

 Wipe with a well-wrung cloth.

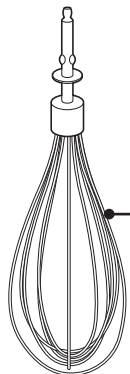

**Whisk\***

Wash with diluted dish soap (neutral) and a soft sponge.

\*Dishwasher safe

# Troubleshooting

| Problem   | Cause and Action  |
|---|---|
| The appliance does not turn on.   | <ul style="list-style-type: none"> <li>The power plug is not in the outlet.                             <ul style="list-style-type: none"> <li>→ Plug in firmly.</li> </ul> </li> </ul>   |
| <ul style="list-style-type: none"> <li>When you are making action below, unplug.</li> </ul> |   |
| The ingredients are not blending.   | <ul style="list-style-type: none"> <li>The quantity of the ingredients are too much.                             <ul style="list-style-type: none"> <li>→ Reduce the quantity of the ingredients.</li> </ul> </li> <li>The ingredients are too large.                             <ul style="list-style-type: none"> <li>→ Cut them into smaller pieces.</li> </ul> </li> <li>Using hard ingredients.                             <ul style="list-style-type: none"> <li>→ Remove the hard ingredients.</li> </ul> </li> <li>Using improper speed. (MX-SS1 only)                             <ul style="list-style-type: none"> <li>→ Adjust speed by turning the speed control.</li> </ul> </li> <li>The blade may be damaged.                             <ul style="list-style-type: none"> <li>→ Contact the service centre.</li> </ul> </li> </ul> |
| Abnormal noise occur.   | <ul style="list-style-type: none"> <li>Using hard ingredients.                             <ul style="list-style-type: none"> <li>→ Remove the hard ingredients.</li> </ul> </li> <li>The motor housing may not be securely attached.                             <ul style="list-style-type: none"> <li>→ Re-attach the motor housing. (P. EN8, EN9)</li> </ul> </li> <li>The chopper lid is not close firmly. (P. EN9) (MX-SS1 only)                             <ul style="list-style-type: none"> <li>→ Re-close the chopper lid.</li> </ul> </li> </ul>  |
| Abnormal vibration occur.   | <ul style="list-style-type: none"> <li>The quantity of the ingredients are too much.                             <ul style="list-style-type: none"> <li>→ Reduce the quantity of the ingredients.</li> </ul> </li> <li>The ingredients are too large.                             <ul style="list-style-type: none"> <li>→ Cut them into smaller pieces.</li> </ul> </li> <li>Using hard ingredients.                             <ul style="list-style-type: none"> <li>→ Remove the hard ingredients.</li> </ul> </li> </ul>  |
| The attachment is not able to attach.   | <ul style="list-style-type: none"> <li>The attachment is not attached properly.                             <ul style="list-style-type: none"> <li>→ Re-attach it. (P. EN8, EN9)</li> <li>If it is still not able to be attached, contact service centre.</li> </ul> </li> </ul>  |

# Replacement Parts

| Part name    | Part number |
|--------------|-------------|
| Beaker       | AMD02-236   |
| Chopper bowl | AMD01-236   |

 
# Specifications

|   |         | MX-SS1   | MX-GS1              |
|---|---------|--|---------------------|
| Power supply  |         | 220 - 240 V ~ 50 - 60 Hz                           |                     |
| Power consumption   |         | 600 W  |                     |
| Speed control   |         | Variable speed control                             | –                   |
| Operation rating  | Blender | 2 consecutive cycles of 1 min. ON, then 3 min. OFF |                     |
|   | Chopper | 2 consecutive cycles of 1 min. ON, then 3 min. OFF | –                   |
|   | Whisk   | 2 consecutive cycles of 2 min. ON, then 3 min. OFF | –                   |
| Dimensions (Motor housing + attachment) (W × D × H) (approx.) | Blender | 6.4 × 7.0 × 39.7 cm                                | 6.4 × 7.0 × 39.7 cm |
|   | Chopper | 14.7 × 14.7 × 36.9 cm                              | –                   |
|   | Whisk   | 6.0 × 6.8 × 45.7 cm                                | –                   |
| Mass (Motor housing + attachment) (approx.)                   | Blender | 1.0 kg   | 1.0 kg              |
|   | Chopper | 1.2 kg   | –                   |
|   | Whisk   | 1.0 kg   | –                   |
| Length of the power cord (approx.)                            |         | 1.3 m  |                     |

# Fixing the wall bracket

■ Fix the wall bracket on the firm wall properly. If it is fix on fragile surface such as sheetrocks, it may be loose up easily and cause the blender to fall or damage to the wall.

- ① Drill two holes (depth of plastic tube's length) in the wall. (Refer to illustration for dimension.)
- ② Hammer two plastic tubes into the holes.
- ③ Secure the wall bracket on the wall with two screws.

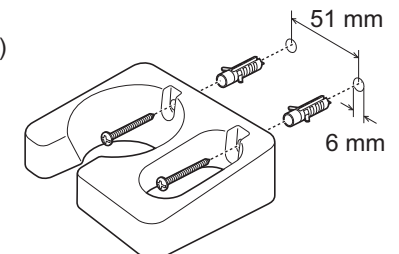

# 目錄

|                        | 頁次   |
|------------------------|------|
| 安全注意事項                 | TC3  |
| 重要資訊                   | TC7  |
| 零件名稱與操作說明              | TC8  |
| 使用方法                   |      |
| • 使用攪拌機配件              | TC10 |
| • 使用切碎器配件（只適用於 MX-SS1） | TC12 |
| • 使用打蛋器配件（只適用於 MX-SS1） | TC14 |
| 清潔方法                   | TC16 |
| 疑難排解                   | TC18 |
| 更換零件                   | TC19 |
| 規格                     | TC19 |
| 固定牆壁支架                 | TC19 |

感謝您購買 Panasonic 產品。

- 本產品僅供家庭使用。
- 請仔細閱讀這些指示，以正確安全地使用產品。
- 使用本產品前，請特別留意「安全注意事項」（第 TC3 - TC7 頁）。
- 請保存本使用說明書以便未來使用。


# 安全注意事項

請務必遵守這些指示。


為避免使用者或其他人員發生意外或受傷，或是損壞其他物品，請遵守下列指示。


■ 下表列出因操作不當而導致的損壞程度。

 **警告：** 代表嚴重傷亡。


 **注意：** 代表有受傷或損壞物品的風險。

 
■ 符號的分類及說明如下。

 此符號代表禁止。

 此符號代表必須遵守使用要求。

## 警告

-  請勿損壞電源線或電源插頭。  
嚴禁執行下列動作：  
修改、接觸或放置在發熱品附近、彎曲、扭轉、拉扯、拉過鋒利邊緣、在上方放置重物、纏繞電源線、以拉住電源線的方式拿取本器具。  
（可能導致觸電，或因短路而發生火災。）

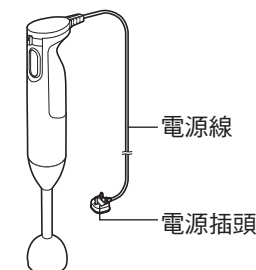




- 如果電源線或電源插頭已損壞，或電源插頭未能穩妥地連接到家用電源插座，請勿使用本器具。  
（可能導致觸電，或因短路而發生火災。）  
→ 如果電源線受損，務必請製造商、服務代理商或是具備相同資格的技師人員予以更換，以避免危險發生。
- 請勿以潮濕的手插入或拔除電源插頭。  
（可能導致觸電。）  
• 握拿電源插頭或切換器具電源開關前，請一律先確認雙手乾燥。



# 安全注意事項

請務必遵守這些指示。


## 警告

-  ● 確認本器具標籤上所示的電壓與您當地供電來源相同。  
(可能導致觸電或火災。)
  - 此外，請避免在同一個家用電源插座上使用其他裝置，以避免電路過熱。但是，如果需連接多個電源插頭，請確認總電壓未超過家用電源插座的額定功率。
- 穩固插入電源插頭。  
(否則可能因為電源插頭周圍產生熱氣，而導致觸電或火災。)
- 定期清潔電源插頭。  
(電源插頭上沉積的灰塵或水氣可能導致絕緣不佳，而造成火災。)  
→ 拔除電源插頭，以乾布擦拭。
- 請將電源線放在兒童無法接觸的地方。請勿讓電源線懸掛在桌子或工作檯邊緣。  
(可能導致燙傷、受傷或觸電。)
-  ● 請勿將本器具浸入水中或對其噴水。  
(可能導致觸電，或因短路而發生火災。)
- 請勿拆解、修理或改裝本器具。  
(可能導致火災、觸電或受傷。)  
→ 修理事宜請與服務中心聯絡。
-  ● 本器具不提供予身體、感官、心智能力等較弱的人(包括兒童)以及缺乏使用經驗和知識的人使用。除非有人為他們的安全承擔責任，對他們的使用給予監督和指導。請監督兒童，切勿讓他們把本器具當作玩具。  
(可能導致燙傷、受傷或觸電。)

## 警告

-  ● 務必讓兒童遠離本器具。  
(可能導致燙傷或受傷。)
  - 兒童並不瞭解極可能因不當操作本器具而發生危險。
- 在發生意外情況時，請立即停止使用本器具，並拔除插頭，以順利讓本器具停止運作。  
(可能導致冒煙、火災、觸電或燙傷。)  
例如，異常或故障：
  - 電源插頭和電源線異常發熱。
  - 電源線損壞或本器具電源故障。
  - 主機變形、有明顯可見的損壞、或異常發熱。
  - 使用期間發出異常轉動聲音。
  - 攪拌杯和切碎器碗有裂縫。
  - 發生其他異常或故障。→ 請立即拔掉電源插頭，並與服務中心聯絡進行檢查和修理。
-  ● 請勿讓嬰孩和小童將包裝當作玩具。  
(可能導致窒息。)



## 注意

-  ● 請勿將本器具用於本說明書所示以外的其他用途。  
(可能導致燙傷或受傷。)
  - 對於不當使用本器具，或未遵守使用指示而導致的問題，Panasonic概不負責。


# 安全注意事項

請務必遵守這些指示。

## 注意

-  ●請勿在下列地點使用本器具。
  - 在不平整的表面、地毯或桌巾上等等地方。  
(可能導致火災或受傷。)
  - 可能被水噴到或靠近熱源的地方。  
(可能導致觸電或漏電。)
  - 靠近任何開放式水源，例如浴缸、水槽或其他容器。  
(可能導致觸電或漏電。)
  - 靠近牆壁或家具。  
(可能導致染色或變形。)
- 請勿在縫隙中插入任何物品。  
(可能導致觸電。)  
- 尤其是金屬物品，例如針或電線
- 請勿將熱食材（超過 60 °C）放入攪拌杯及切碎器碗內。  
(可能會因食材溢出導致燒傷或容器破爛而受傷。)
- 請勿以電源線握住產品。  
(可能導致觸電或受傷。)
- 請勿長時間持續操作。  
(可能導致燙傷。)
- 除本產品的專用零件外，請勿使用其他零件取代任何產品零件。  
(可能導致火災、觸電或受傷。)
- 當平底鍋在熱源上時，請勿使用攪拌機。  
(可能導致燙傷。)
-  ●務必以握拿電源插頭的方式拔除電源插頭。  
切勿拉扯電源線。  
(否則可能導致觸電，或因短路而發生火災。)
- 請將本器具放在穩固、乾燥、清潔的平坦耐熱工作檯上。  
(可能導致受傷。)

## 注意

 
-  ●使用時，請小心不要踩踏電源線或被絆倒。  
(否則可能導致燙傷或受傷。)
- 如您不使用手提攪拌機及在裝配、拆解或清潔前，請務必將手它從電源拔除；  
- 請勿在沒人監管情況下讓小童使用手提攪拌機。  
(可能導致火災、觸電或受傷。)
- 更換配件或接近任何在使用中會移動的零件前，請先關掉電器及拔斷電源。  
(可能導致受傷。)
- 處理或清潔刀片時請小心。  
(可能導致受傷。)
- 電器操作期間請勿將手指、餐匙或餐叉貼近刀片。  
(可能導致受傷。)

## 重要資訊

- 請勿將攪拌杯和切碎器碗放在任何熱源上或微波爐內。
- 請勿掉下電器以避免損毀電器。
- 請勿在室外使用本器具。
- 請勿將電源線圍繞在摩打座外。
- 請確保配件已固定裝好。
- 每次使用後，請務必清潔本器具。
- 請勿手持切碎器蓋或摩打座移動切碎器。


# 零件名稱與操作說明

- 下列圖片主要顯示 MX-SS1 機型內部構造。
- 首次使用器具前或長時間無使用，請清洗所有可拆除的零件。(第 TC16 頁)

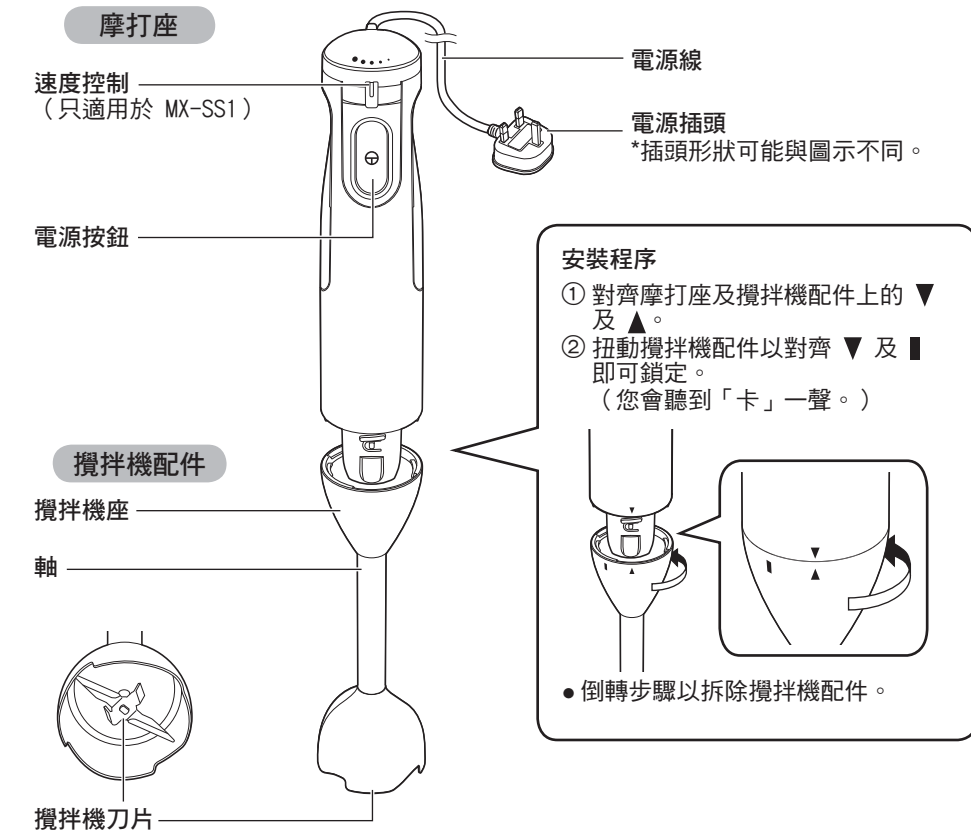

## 安裝程序

 
- ① 對齊摩打座及攪拌機配件上的 ▼ 及 ▲。
- ② 扭動攪拌機配件以對齊 ▼ 及 ■ 即可鎖定。  
(您會聽到「卡」一聲。)

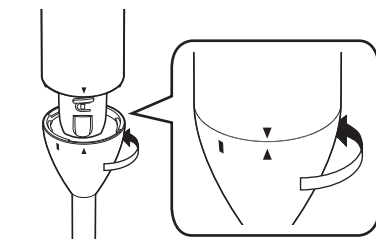


- 倒轉步驟以拆除攪拌機配件。

## 配件
 
### 攪拌杯

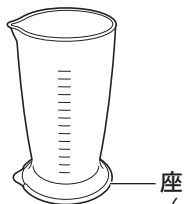


### 牆壁支架

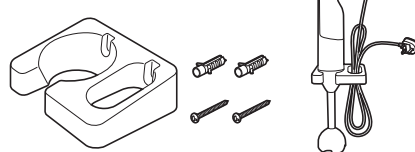 


- 若要固定牆壁支架，請參考第 TC19 頁。

## 切碎器配件 (只適用於 MX-SS1)

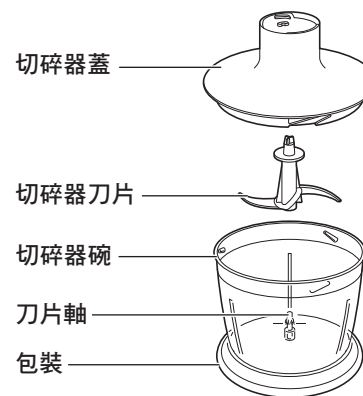 

## 安裝程序

 - ① 將切碎器刀片插入刀片軸。
- ② 將切碎器蓋的凹槽與切碎器刀片的頂部對齊。如裝上有困難，請將切碎器刀片的頂部稍微轉動然後再合上切碎器蓋。
- ③ 將切碎器蓋的槽與切碎器碗凸位對齊，然後將切碎器蓋順時針方向轉動將它合上。  
(您會聽到「卡」一聲。)
- ④ 對齊摩打座及切碎器蓋上的 ▼ 及 ▲。
- ⑤ 扭動摩打座以對齊 ▼ 及 ■ 即可鎖定。  
(您會聽到「卡」一聲。)

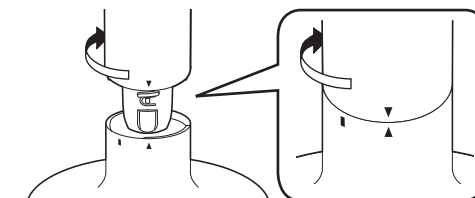


- 倒轉步驟以拆除切碎器配件。


## 附註

 - 請正確地裝上切碎器蓋。

## 錯誤

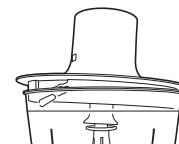


## 打蛋器配件 (只適用於 MX-SS1)

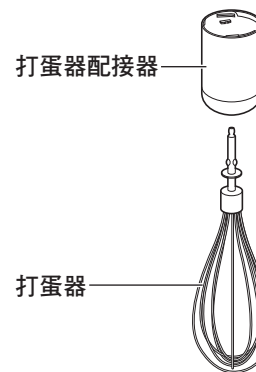 

## 安裝程序

 - ① 將打蛋器插入打蛋器配接器。  
(您會聽到「卡」一聲。)
- ② 對齊摩打座及打蛋器配件上的 ▼ 及 ▲。
- ③ 扭動打蛋器配件以對齊 ▼ 及 ■ 即可鎖定。  
(您會聽到「卡」一聲。)

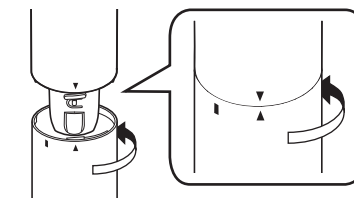

- 倒轉步驟以拆除打蛋器配件。

# 使用方法 使用攪拌機配件

- 使用攪拌機配件烹調醬汁、蘸醬、湯、果汁、奶昔、煮熟蔬菜的嬰兒食品或蛋黃醬等。
- 您也可以使用其他容器，例如較深的碗取代攪拌杯。

## 附註

- 食料份量不可超出攪拌機座及軸的連接點。
- 按下電源按鈕期間請勿從碗插入或取出電器。
- 透過擊打攪拌食材時避免刮花平鍋或碗。
- 視乎材料、份量和/或攪拌機動作，混合料可能從攪拌杯流出。如遇這種情況請減少混合料份量。

## 禁用食材

 
請勿用於攪拌硬身食材，因為它們可能損毀刀片。

- 硬身食材，例如：
  - 咖啡豆
  - 魚類
  - 肉類
  - 冷凍食品
  - 冰塊
  - 黃豆
  - 薑黃等
- 黏性食材
- 如麵包粉糰的硬粉糰。

## 準備程序


- 預先將食材切成大約 2 cm 小方塊或條狀。

## 1 將攪拌機配件裝到摩打座。 (第 TC8 頁) 然後插入電源 插頭。

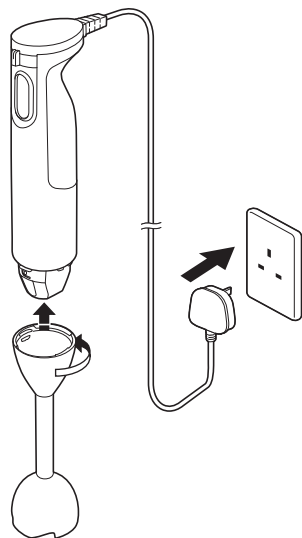


- 請確保攪拌機配件已穩固裝上。

## 2 將攪拌機放入攪拌杯然後向 下按住電源按鈕即可開始。

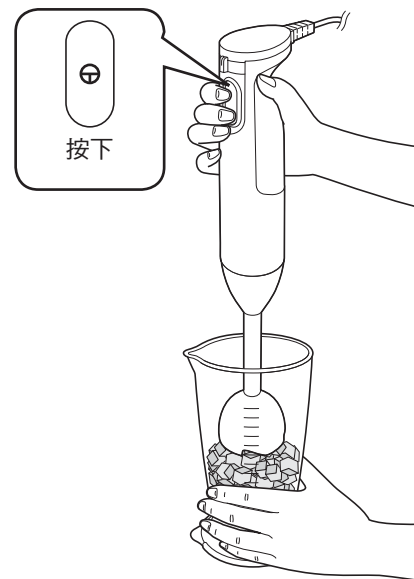 

- 請勿持續操作攪拌機超過 1 分鐘。完成連續兩次循環的 1 分鐘操作後，暫停超過 3 分鐘。
- 轉動速度控制可調整速度。(只適用於 MX-SS1)
- 攪拌機輕輕按在攪拌杯的底部然後開始攪拌。
- 操作期間，請穩握攪拌杯。

## 3 當攪拌完成後，從混合食材取 出產品前先鬆開電源按鈕。

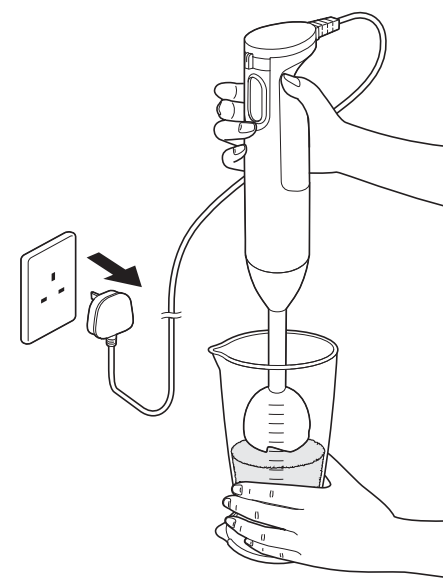 

用完即時拔掉電源插頭，然後拆除攪拌機配件。

# 使用方法 使用切碎器配件（只適用於 MX-SS1）

■ 使用切碎器配件切碎食物，例如蔬菜、果仁、芝士、香草、餅乾、麵包及肉類。

## 附註

- 視乎材料、份量、太多液體及/或攪均速度，混合料可以從切碎器碗流出。如遇這情況請減少混合料份量。

## 禁用食材

 
請勿用於攪拌硬身食材，因為它們可能損毀刀片。

- 硬身食材，例如：
  - 咖啡豆
  - 冷凍食品
  - 冰塊
  - 黃豆
  - 薑黃等
- 黏性食材
- 如麵包粉糰的硬粉糰。

## 準備程序


- 預先將食材切成大約 2 cm 小方塊或條狀。
- 將果仁除殼。
- 從肉類中取出骨頭、肌腱和軟骨。

**1** 將切碎器刀片插入切碎器碗然後將切碎食材放入切碎器碗內。

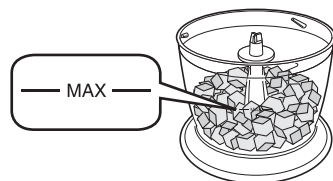


- 食材份量不可超出 MAX（最大量）線。

 **2** 合上切碎器蓋然後將摩打座裝在切碎器配件上。（第 TC9 頁）然後插入電源插頭。

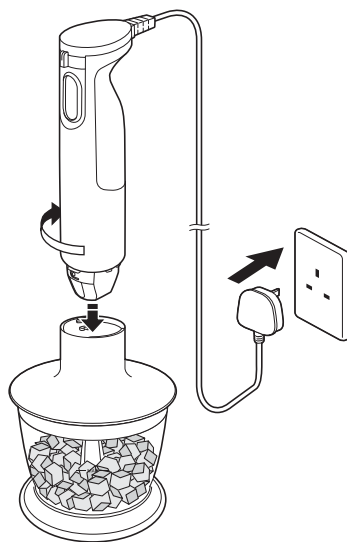


- 請確保切碎器蓋和切碎器配件已穩固裝上。否則可能導致故障。

 **3** 按下電源按鈕即可開始。

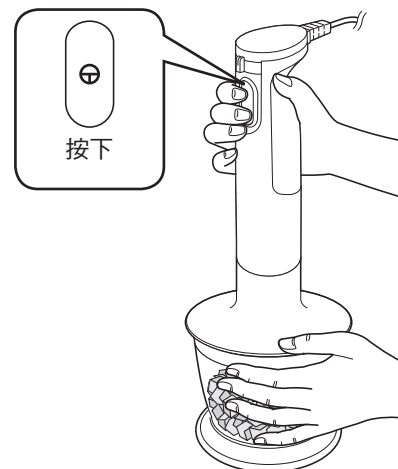

- 請勿持續操作切碎器超過 1 分鐘。完成連續兩次循環的 1 分鐘操作後，暫停超過 3 分鐘。
- 轉動速度控制可調整速度。
- 操作期間，請穩握著切碎器蓋。（因為操作期間的震動可能會引致其鬆開。）
- 操作期間，切勿打開切碎器蓋。

 **4** 當切碎完成後，移除摩打座前先鬆開電源按鈕。

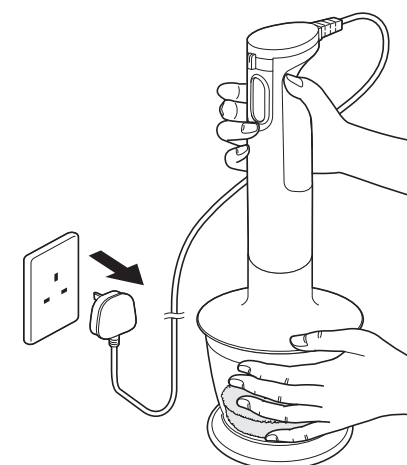

用完即時拔掉電源插頭然後拆除摩打座。

## 參考份量及時間

| 食材    | 份量上限  | 操作時間（大約） | 速度<br>（只適用於 MX-SS1） |
|-------|-------|----------|---------------------|
| 洋蔥    | 200 g | 10 秒     | ● ● ● ● □           |
| 蘿蔔    |       | 10-30 秒  | □ ● ● ● ●           |
| 肉類    |       | 30 秒     |                     |
| 巴馬臣芝士 |       | 20 秒     |                     |
| 果仁    |       | 30 秒     |                     |
| 乾麵包   | 80 g  |          |                     |

- 如材料太少，切碎器刀片則無法與其接觸並可能導致不良效果。



# 使用方法 使用打蛋器配件（只適用於 MX-SS1）

- 使用打蛋器配件打奶油或打蛋白。
- 使用較深的碗以避免食材濺出。

## 附註

- 攪拌食材時避免擊打平鍋或碗以防止刮花。
- 當您打蛋時，請勿超個 4 個蛋白。

 
## 禁用食材

- 如麵包粉糰的硬粉糰。

## 準備程序


- 打蛋前將忌廉冷卻。

- 1** 將打蛋器配件裝到摩打座。  
（第 TC9 頁）然後插入電源  
插頭。

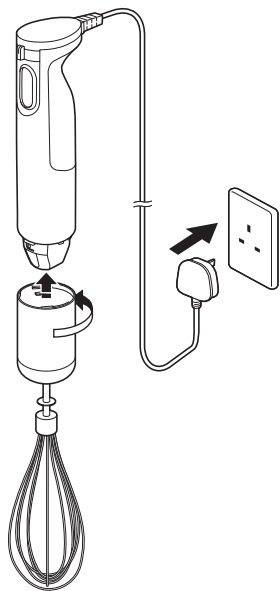


- 請確保打蛋器配件已穩固地裝上。

 - 2** 將打蛋器插入碗內然後向下  
按住電源按鈕即可開始。

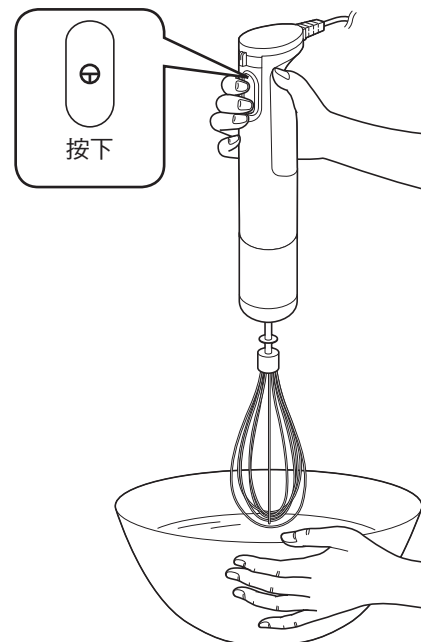

- 請勿持續操作打蛋器超過 2 分鐘。  
完成連續兩次循環的 2 分鐘操作  
後，暫停超過 3 分鐘。
- 攪動食材時以垂直方式握住打蛋器。
- 轉動速度控制可調整速度。
- 打蛋器輕輕按在碗的底部然後開始  
打蛋。
- 操作期間，穩握碗。
- 食材份量較少時，將碗傾斜打蛋會  
更好。

 - 3** 當打蛋完成後，移除打蛋器  
前先鬆開電源按鈕。

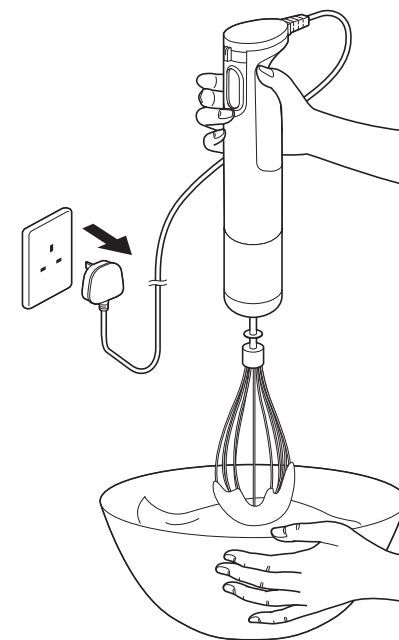

- 用完即時拔掉電源插頭然後  
取出打蛋器配件。

# 清潔方法

 
- 每次使用後，請清潔本器具。
- 清潔前拔掉電源插頭。

## 附註

- 請勿使用揮發油、稀釋劑、酒精、漂白劑、磨砂粉、金屬刷或尼龍刷，否則表面將會受損。
- 請勿在洗碗機內清洗摩打座、切碎器蓋及打蛋器配接器。
- 請勿使用尖銳的物品來清潔本器具，例如牙籤或針。


### 摩打座/牆壁支架

以擰乾的布擦拭。

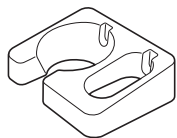

### 攪拌杯\*/座

 使用溫和洗潔精（中性）與柔軟海綿來清洗。



### 攪拌機配件\*

將攪拌杯裝滿水並在攪拌杯內操作攪拌機大約 5 秒將殘餘清除。  
更換清水並重複數次。  
然後使用溫和洗潔精（中性）與手柄刷來清洗。

## 附註

處理或清潔刀片時請小心。

\*洗碗機適用

（只適用於 MX-SS1）

### 切碎器蓋

使用溫和洗潔精（中性）與柔軟海綿來清洗。

## 附註

請勿浸入水中。

### 切碎器刀片\*

使用溫和洗潔精（中性）與手柄刷來清洗。

## 附註

處理或清潔刀片時請小心。

### 切碎器碗\*/包裝

使用溫和洗潔精（中性）與柔軟海綿來清洗。

### 打蛋器配接器

以擰乾的布擦拭。

### 打蛋器\*

使用溫和洗潔精（中性）與柔軟海綿來清洗。

\*洗碗機適用

# 疑難排解

| 問題                      | 原因和解決方法  |
|-------------------------|--|
| 電器無法開啟。                 | <ul style="list-style-type: none"> <li>• 電源插頭未插入插座。</li> <li>→ 將插頭穩固地插入。</li> </ul>  |
| <p>• 進行以下操作時，請拔斷電源。</p> |  |
| 食材未混合。                  | <ul style="list-style-type: none"> <li>• 食材份量太多。</li> <li>→ 減少食材份量。</li> <li>• 食材太大件。</li> <li>→ 將它們切成小塊。</li> <li>• 使用硬身食材。</li> <li>→ 取出硬身食材。</li> <li>• 使用不正確速度。(只適用於 MX-SS1)</li> <li>→ 轉動速度控制可調整速度。</li> <li>• 刀片可能已損毀。</li> <li>→ 聯絡服務中心。</li> </ul> |
| 發生異常聲音。                 | <ul style="list-style-type: none"> <li>• 使用硬身食材。</li> <li>→ 取出硬身食材。</li> <li>• 摩打座可能未安全裝上。</li> <li>→ 重新裝上摩打座。(第 TC8、TC9 頁)</li> <li>• 切碎器蓋未合實。(第 TC9 頁)(只適用於 MX-SS1)</li> <li>→ 重新合上切碎器蓋。</li> </ul>  |
| 發生異常震動。                 | <ul style="list-style-type: none"> <li>• 食材份量太多。</li> <li>→ 減少食材份量。</li> <li>• 食材太大件。</li> <li>→ 將它們切成小塊。</li> <li>• 使用硬身食材。</li> <li>→ 取出硬身食材。</li> </ul>   |
| 無法裝上配件。                 | <ul style="list-style-type: none"> <li>• 配件未正確裝上。</li> <li>→ 將它重新裝上。(第 TC8、TC9 頁)</li> <li>如仍無法裝上，請聯絡服務中心。</li> </ul>  |

# 更換零件

| 零件名稱 | 零件編號      |
|------|-----------|
| 攪拌杯  | AMD02-236 |
| 切碎器碗 | AMD01-236 |

# 規格

|  |     | MX-SS1                      | MX-GS1              |
|--|-----|-----------------------------|---------------------|
| 電源供應                                   |     | 220 - 240 V ~ 50 - 60 Hz    |                     |
| 耗電量                                    |     | 600 W                       |                     |
| 速度控制                                   |     | 可變速度控制                      | -                   |
| 操作級別                                   | 攪拌機 | 兩次連續循環 1 分鐘 ON, 3 分鐘 OFF    |                     |
|  | 切碎器 | 兩次連續循環<br>1 分鐘 ON, 3 分鐘 OFF | -                   |
|  | 打蛋器 | 兩次連續循環<br>2 分鐘 ON, 3 分鐘 OFF | -                   |
| 尺寸<br>(摩打座+配件)<br>(寬 × 深 × 高)<br>(約略值) | 攪拌機 | 6.4 × 7.0 × 39.7 cm         | 6.4 × 7.0 × 39.7 cm |
|  | 切碎器 | 14.7 × 14.7 × 36.9 cm       | -                   |
|  | 打蛋器 | 6.0 × 6.8 × 45.7 cm         | -                   |
| 重量<br>(摩打座+配件)<br>(約略值)                | 攪拌機 | 1.0 kg                      | 1.0 kg              |
|  | 切碎器 | 1.2 kg                      | -                   |
|  | 打蛋器 | 1.0 kg                      | -                   |
| 電源線長度 (約略值)                            |     | 1.3 m                       |                     |

# 固定牆壁支架

■ 將牆壁支架正確地固定在結實的牆上。如固定在易碎表面，例如石膏板，有可會容易鬆脫並導致攪拌機跌下或損毀牆身。

- ① 在牆上鑽兩個孔(塑膠管長度的深度)。(參考圖解大小。)
- ② 將兩條塑膠管釘入牆孔。
- ③ 使用兩口螺絲將牆壁支架固定。

