

HK

Panasonic®



Operating Instructions

Electric Rice Cooker / Steamer **Household Use**

使用說明書

微型電腦飯煲 **家用型**

Model No. / 型號 : SR-TEM18 / SR-TEM10

Table of Contents

目錄

Safety Precautions	2-3	Before Use	安全注意事項	9-10	使用前
Parts Identification	4		部件名稱	11	
• Parts Identification	4		• 部件名稱	11	
• Accessories	4		• 配件	11	
Functions	5-6	Usage	功能	12-13	使用
• Cook Rice • Keep Warm.....	5		• 煮飯方法 • 保溫.....	12	
• Steam Food (Using the steam basket).....	6		• 蒸煮食物的方法 (使用蒸籠).....	13	
Cleaning and maintenance	7		清潔及維護	14	
Troubleshooting	8	In trouble	故障排除	15	出現問題
Specifications	8		技術規格	15	

Thank you for purchasing this Panasonic product.

- This product is intended for household use only.
- Please read these instructions carefully and follow safety precautions when using this product.
- Before using this product **please give your special attention to “Safety Precautions” (Page 2-3).**

Keep this manual for future use

感謝您購買 Panasonic 產品。

- 本產品僅限家用。
- 使用本產品時請仔細閱讀說明並遵循安全注意事項。
- 使用本產品之前，請特別留意「安全注意事項」（第 9~10 頁）。

請保留此說明書以供日後使用。

Safety Precautions

Must be followed!

In order to prevent accidents or injuries to the users, other people and damage to property, please follow the instructions below.

■ The following charts indicate the degree of damage caused by wrong operation.


 WARNING Indicates serious injury or death.	 CAUTION Indicates risk of injury or property damage.
---	---

■ The symbols are classified and explained as follows.


   These symbols indicate prohibition.	 This symbol indicates requirement that must be followed.
---	--

WARNING


■ Do not use the appliance if the power cord or power plug is damaged or the power plug is loosely connected to the power outlet.

 (It may cause an electric shock or fire caused by short circuit.)


■ Do not insert metal objects or any other foreign objects in the exhaust outlets, or any other portion of the unit.

 Especially clip or wire. (It may cause an electric shock or malfunction.)

■ This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.


 (It may cause burn or injury.)

■ Clean the power plug regularly.

 (A soiled power plug may cause insufficient insulation due to the moisture, and may cause a fire.)

- Unplug the power plug, and wipe with a dry cloth.


■ Do not damage the power cord or power plug.

 Following actions are strictly prohibited.

Modifying, placing near heating elements, bending, twisting, pulling, putting heavy objects on top, and bundling the cord. (It may cause an electric shock or fire caused by short circuit.)


- If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.

■ Do not immerse the appliance in water or splash it with water.

 (It may cause a fire caused by short circuit or electric shock.)


- Please enquire with an authorized dealer if water gets inside the appliance.

■ Use only a power outlet rated at 10 amperes and alternating electric voltage at 220 volts.

 (Plugging other devices into the same outlet may cause electric overheating, which may cause a fire.)

- Use only an extended cord rated at 10 amperes minimum.

■ Do not plug or unplug the power plug with wet hands.

 (It may cause an electric shock.)

■ Do not get your face close to the steam vent or touch it with your hand. Keep the steam vent out of reach of small children.



Steam vent



(It may cause a burn.)

■ Do not modify, disassemble, or repair this appliance.



(It may cause a fire, electric shock or injury.)

- Please make enquiries at the store or the repair department of an authorized dealer.

■ Insert the instrument plug and the power plug firmly.



(Otherwise it may cause an electric shock and fire caused by the heat that may generate around the instrument plug or the power plug.)

- Do not use a broken power plug or a loose power outlet.

■ Discontinue using the appliance immediately and unplug the power cord in cases of abnormal situations and breaking down.



(It may cause smoking, a fire or electric shock.)
(e.g. for abnormal situations or breaking down)

- The power plug and the power cord become abnormally hot.
- The power cord is damaged or power failure occurs when touched.
- The main body is deformed or abnormally hot.
- The unit gives out smoke or scorching smell.
- There are cracks, looseness or wobbles of the appliance.
- The cast heater is warped or the inner pan is deformed.

 
→ Please make enquiries at a Panasonic authorized service center for immediate inspection and repair.

Safety Precautions

Must be followed!

⚠ CAUTION

■ Do not use the appliance in the following places.

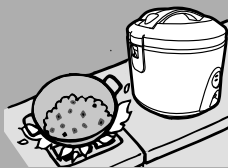

- In an area where it may be splashed with water or near a heat source. (It may cause a fire caused by short circuit or electric shock.)
- An unstable surface or carpet, electric carpet, table cloths (ethylene plastic) or other object that cannot resist high temperature. (It may cause an injury, burn or fire.)
- Near a wall or furniture. (It may cause a discoloration or deformation.)

■ Do not touch heating elements while the appliance is in use or after cooking.



Especially the cast heater. (It may cause a burn.)

■ Do not press on the hook button when the appliance is being carried or moved.



(It may cause the outer lid to open, resulting in a burn.)

■ Do not expose the power plug to steam and do not let water spill on the connector of the power plug.



- Do not expose the power plug to steam when it is plugged in. (It may cause a fire caused by short circuit.) When using a cabinet with sliding table, use the appliance where the power plug cannot be exposed to steam.

■ Be sure to hold the instrument plug or the power plug when unplugging. Do not pull the power cord.



(Otherwise it may cause an electric shock or fire caused by short circuit.)

■ Do not use the cord set (for instrument plug and power plug) that is not specified for use with this appliance. Also do not transfer them.



(It may cause an electric shock, leakage, and fire.)

■ Be careful when opening the outer lid while cooking.



(It may cause a burn.)

■ Unplug the power plug from the power outlet when the appliance is not in use.



(Otherwise it may cause an electric shock and fire caused by short circuit due to the insulation deterioration.)

■ Heating element is subjected to residual heat after use. Please allow the appliance to cool down before cleaning it.



(Touching hot elements may cause a burn.)

■ Do not use other pans than the one specified.



(It may cause a burn and injury due to overheat or malfunction.)

Precaution for Use

Please put in correct amount of rice and water and select functions correctly according to the operating instructions.

(So as to avoid overflow of rice water, half-cooked rice or scorched rice.)

Do not put ingredients to be cooked directly into the appliance in which no inner pan is placed.

Do not cook without inner pan.

(So as to prevent any impurities from causing failure.)

Avoid using the appliance under direct sunlight.

(So as to avoid color change.)

Before using the appliance, the anti-tarnish paper between the inner pan and the cast heater should be removed.

(So as to avoid poor cooking or fire.)

Do not cover the outer lid with cloth or other objects when the appliance is in use.

(So as to avoid deformation, color change of the outer lid or failure.)

 
Do not let water spill on the power plug of the power cord set.

(This may result in electric shock.)

Do not scoop out rice with any metal object.

(So as to avoid scratching the inner pan coating and causing peeling of the coating.)

Please always clean the foreign matters such as rice on the inner pan, cast heater and temperature sensor.

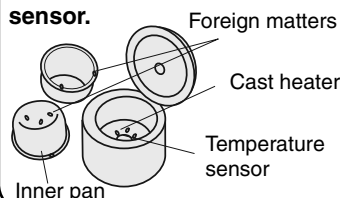

- Do not tilt or overturn the appliance.
- Before cleaning, turn off the power switch and pull out the power plug.

 
When there is any overflow of rice water from the steam vent, pull out the power plug immediately to disconnect the power supply. Do not resume the use until the rice water on the power plug and the instrument plug is cleaned with a dry cloth.

The appliance is for household use only. Do not use it for any commercial or industrial purposes or any purposes other than cooking.

When power failure occurs during the operation of the appliance, the cooking result may be affected.

Parts Identification

Parts Identification

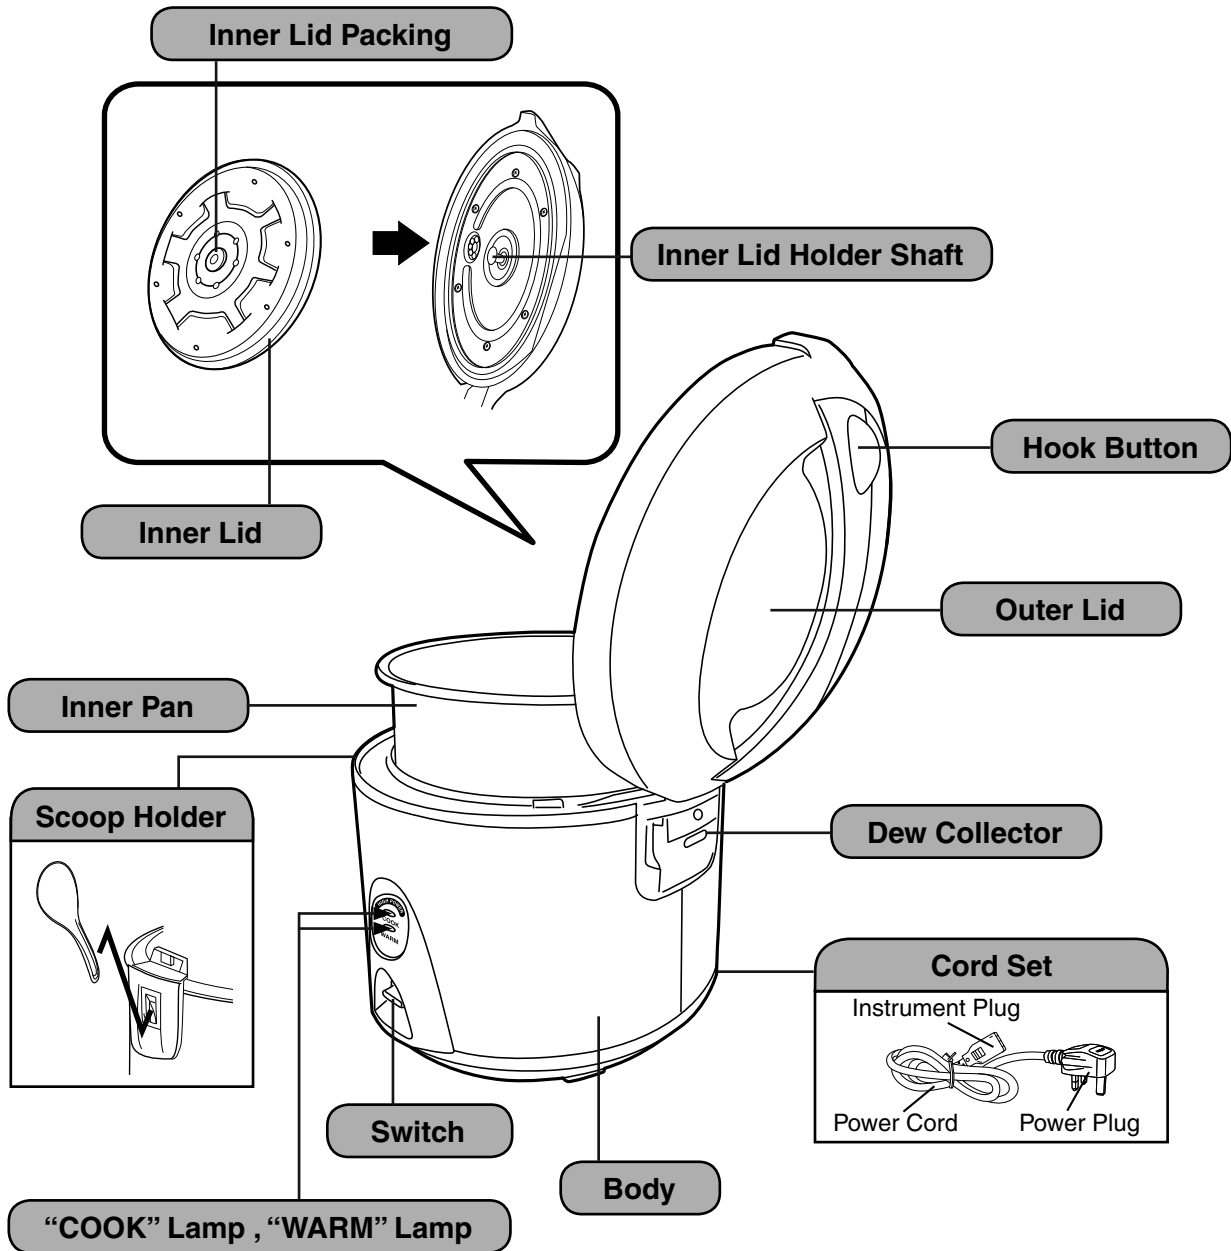


Accessories



Measuring Cup
(Approx. 180 mL)



 Rice Scoop




Steam Basket

Functions Cook Rice • Keep Warm


1 Measure rice with the measuring cup provided.

 - The volume of the measuring cup is about 180 mL.

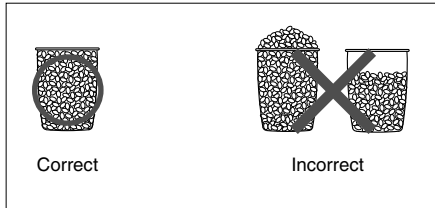

2 Rinse the rice.

 - Rinse the rice in a separate bowl.
- Do not rinse the rice in the provided inner pan as non-stick coating may be damaged.
- Pour the washed rice into the inner pan.

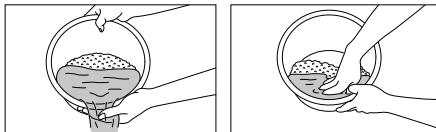


Use water to rinse the rice for fresher smelling rice.

Rinse and wash the rice until the water becomes relatively clear.

3 Pour in the desired amount of water.

 - Set the inner pan on a flat surface when adding the water.
- Add the desired amount of water following the scale marked on the inner pan.
- Hot water is not recommended for cooking as it may result in soggy rice.

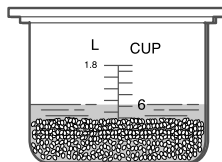


Eg: To cook 6 cups of rice.

Add the water to the line marked "6" on the side of the inner pan.


4 Put the inner pan into the body.

 - Wipe off the water around the inner pan surface before it is placed into the rice cooker, otherwise it may result in strange noise during cooking.
- Be sure that the inner pan is directly in contact with the cast heater.
- Improper contact between the inner pan and the cast heater may result in overflow or uncooked rice.

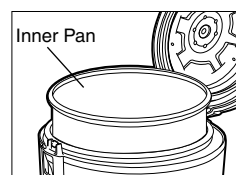

5 Close the outer lid, connect the instrument plug to the appliance socket then plug in to the power supply outlet.

 - Close the outer lid firmly. (If it is not securely closed, cooking will be affected.)

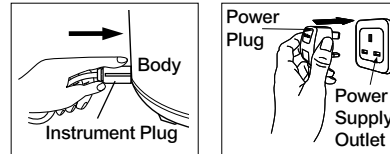

6 Press switch.

 
- Do not open the outer lid or unplug the appliance while it is operating.
- Please ensure that the switch is pressed and the "COOK" lamp lights up properly. (The rice will not be cooked in warm mode.)



Press the switch to start cooking. The "COOK" lamp lights up.

7 After the rice is cooked.

- The appliance will automatically switch to warm mode.
- Let the rice warm for another 15 minutes without opening of the outer lid.
- Scoop and mix the rice well.
- Unplug the appliance when it is not in use.

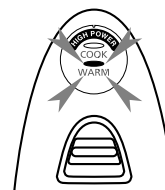


The "WARM" lamp lights up to indicate warm mode.

KEEP WARM

- When the cooking is over, the appliance will turn to warm mode automatically and "WARM" lamp lights up.
- You can keep the rice warm for up to 5 hours, so as not to affect the taste or cause unpleasant smell.
- After the rice has been cooked or warmed, scooped and mix the rice gently.
- Do not leave the rice scoop inside the inner pan.**
- Do not use the rice cooker to warm other kinds of food. (It is for rice only.)**
- Do not warm cold rice.**
- Variations in the room temperature may cause the rice to discolor and lose its fresh smell.

Functions Steam Food (Using the steam basket)

 - 1 Add 2 cups of water into the inner pan by using the measuring cup provided.**

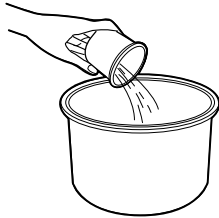

- 2 Set the steam basket into the inner pan and put the food in the steam basket.**

- Do not put too much food as the outer lid may not be closed properly.



 
 
- 3 Put the inner pan into the body.**

- Wipe off the water around the inner pan surface before it is placed into the rice cooker, otherwise it may result in strange noise during cooking.
- Be sure that the inner pan is directly in contact with the cast heater.
- Improper contact between the inner pan and the cast heater may result in overflow or uncooked rice.



- 4 Close the outer lid, connect the instrument plug to the appliance socket then plug in to the power supply outlet.**

- Close the outer lid firmly. (If it is not securely closed, cooking will be affected.)

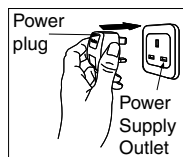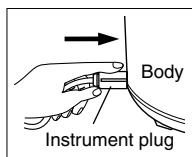

- 5 Press switch.**

- Do not open the outer lid or unplug the appliance while it is operating.
- Please ensure that the switch is pressed and the "COOK" lamp lights up properly. (The rice will not be cooked in warm mode.)



 
Press the switch to start cooking. The "COOK" lamp lights up.

- 6 Steaming period is done manually by checking the condition of the food from time to time.**

- This appliance will automatically switch to warm mode when the water inside the pan become empty.
- Open the outer lid slowly as to avoid water dripping out from the outer lid.



- 7 When steaming is done, unplug the appliance and open the outer lid to take out the food.**

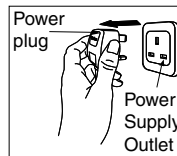

ATTENTION

- The table shows the maximum allowable amount of rice that can be cooked while steaming with steam basket.

Capacity	Rice (cups)
1.8 L	5
1.0 L	2

- Wait until the food cools down and no steam is coming from the steam vent before opening the outer lid.
- Then, check whether the food is cooked as desired.
- When rice is cooked while steaming food, do not open the outer lid until the rice is cooked. (It is better to select the food that has a steaming time similar to the time for cooking rice.)

Cleaning and maintenance

- Be sure to unplug and carry out these operations when the appliance is cooled down.
- Parts need to be cleaned after every use.
- Do not use cleaning objects such as benzine, thinners, cleansing powder or metal scrubbers.

Body / Outer Lid / Upper Frame

- Wipe with a damp cloth.
- Do not use a dishwashing detergent.

Inner Pan

 
- Wash with a diluted dishwashing detergent and sponge and wipe off the external surface of the pan.

Temperature Sensor / Cast Heater

- If an object has become stuck to the temperature sensor / cast heater, slightly polish it off using fine sandpaper (of about # 600). Then wipe with a damp cloth.

Dew Collector

- Hold the sides and remove / install in the direction of the arrows.
- Remove and empty the dew collector after every use.

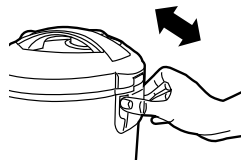


Accessories



Measuring Cup





 Rice Scoop



Steam Basket

  
- Wash using diluted dishwashing detergent and sponge.

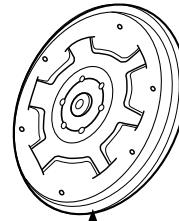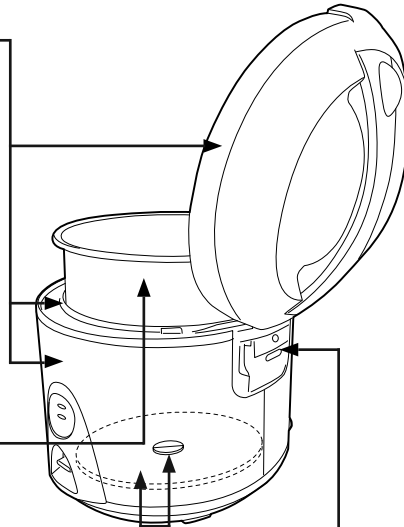

Inner Lid

■ Removal

 
- Hold and pull off inner lid to remove in the direction of arrow.



- Should be cleaned with sponge. (Do not use abrasive cleaners or steel wool.)

■ Install

 - Slide inner lid onto the inner lid holder shaft.
- Face the large rubber lip of the inner lid packing towards the outer lid.



- The small side of the inner lid packing should face you when the outer lid is open.

Clean after every use.

Troubleshooting

Please check the following items

Rice Cooking

Details	Cooking problems					Keep Warm problems			No power	Strange sound occurs
	Too hard	Undercooked	Too soft	Water overflow	Burnt rice at bottom of pan	Color change	Bad smell	Too dry		
Wrong rice and water proportion.	●	●	●	●	●			●	Unplug and check the circuit breaker. If there is no problem at the breaker, take the rice cooker to the nearest service center.	Sound occurs if there is some water between the inner pan and cast heater.
Inadequate washing of rice.				●	●	●	●			
Foreign matters between pan and cast heater.	●	●	●		●					
Cooking with a lot of oil.	●	●			●	●	●			
The rice has been warmed more than 5 hours.						●	●	●		
The outer lid is not securely closed.	●			●		●	●	●		
The pan is not adequately washed.					●		●			
The power cord is not connected to the socket securely.		●					●			

Specifications

Model No.		SR-TEM10	SR-TEM18
Power Source		220 V ~ 50 Hz	
Power Consumption	In the Cooking Function	600 W	800 W
	In the Keep Warm Function	32 W	33 W
White Rice Capacity	In the Cooking Function (approx.)	1 - 5.6 cups	3 - 10 cups
	In the Keep Warm Function (approx.)	1 - 5.6 cups	3 - 10 cups
Dimensions (Width x Length x Height) (approx.)		248 x 247 x 255 mm	276 x 274 x 278 mm
Weight (approx.)		2.5 kg	3.1 kg
Keep Warm		5 hours	

- For power cord replacement and product repair, please contact Panasonic authorized service center.

安全注意事項

必須遵循！

為了防止使用者或其他人員出現意外或人身傷害或出現財物損害，請遵循以下說明。

■ 錯誤操作可導致的損害級別如下圖所示。



警告

表示嚴重人身傷亡。



注意

表示人身傷害或財產損害的風險。

■ 符號分類及說明如下。



此符號表示禁止。



此符號表示必須遵循的要求。

警告

- 電源線或電源插頭損壞，或電源插頭沒有緊固連接至插座時，請勿使用電器。



(可能會因為短路而導致觸電或起火。)

- 請勿將金屬物件塞入噴氣孔或任何其他部位。



特別是針或電線之類等金屬物體。
(可能會導致觸電或故障。)

- 此電器不適合身體、感官思維有缺陷者或缺乏經驗與知識者使用(包括兒童)。除非他們的監護人給予他們關於電器的適當使用和監督與指示。必需監督兒童，以確保他們不會將電器當成玩具。



(可能會導致燙傷或人身傷害。)

- 請定期清潔電源插頭。



(有污漬的電源插頭可能會因為潮濕而導致絕緣失效從而出現火警隱患。)

· 請拔出電源插頭，並用乾布擦拭。

- 請勿損壞電源線或電源插頭。



嚴厲禁止以下行為。

更改、放置在接近加熱元件附近的位置、彎曲、扭轉、拉伸、在上方放置較重物體及捆紮電線。(可能會因為短路而導致觸電或起火。)

- 若電源線損壞，則必須使用從製造商或服務代理處獲取的專用電線或部件予以更換。

- 請勿將電器浸入水中或在電器上潑水。



(可能會由於短路造成起火或出現觸電事故。)

- 若電器進水，請向授權經銷商諮詢處理事宜。

- 請僅使用額定電流為 10 安培及交流電壓為 220 伏特的插座。



(在同一插座插入其他裝置可能會導致電器過熱，造成火警隱患。)

- 請僅使用最低額定電流為 10 安培的延長電線。

- 若出現異常情況或發生故障，請立即停止使用電器並拔出電源線。



(可能會導致冒煙、起火或觸電。)

- 電源插頭及電源線過熱。
- 電線源損壞或觸碰後出現電源故障。
- 主機身變形或過熱。
- 電器冒煙或發出燒焦味。
- 電器出現裂痕、鬆動或搖晃現象。
- 鑄封加熱器彎曲或內鍋變形。

→ 需要檢查或修理時請立刻向 Panasonic 授權服務中心諮詢。

- 請勿用濕手插入或拔出電源插頭。



(可能會導致觸電。)

- 請勿將臉部靠近蒸氣帽，雙手請勿碰觸蒸氣帽。兒童應遠離蒸氣帽。



蒸氣帽

(也可能會導致燙傷。)



- 請勿修改、拆卸或修理此電器。



(可能會導致起火、觸電或人身傷害。)

- 請向店鋪或授權經銷商修理部門諮詢。

- 請緊固插入電器插頭及電源插頭。



(否則可能會由於電器插頭或電源插頭周圍過熱而導致觸電或起火。)

 
- 請勿使用損壞的電源插頭或鬆動的插座。

安全注意事項

必須遵循！

⚠ 注意

■ 請勿在以下地方使用電器。

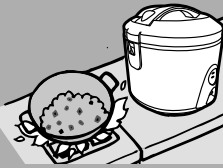

- 可能會被水濺到或接近熱源的位置。(可能會由於短路造成起火或觸電事故。)
- 不穩固的表面或地毯、電熱毛毯、桌布(乙烯)或其他不耐高溫的物體之上。(可能會導致人身傷害、燙傷或起火。)
- 接近牆壁或傢俱。(可能會導致褪色或變形。)

■ 請勿在電器使用時或烹調後觸碰加熱元件。



特別是鑄封加熱器。
(也可能會導致燙傷。)

■ 移動電飯煲時請勿按開蓋鈕。



(可能會導致外蓋開啟,造成燙傷。)

■ 電源插頭請勿接觸蒸氣, 電源轉換插頭避免進水。



- 電源插頭接電時請勿接觸蒸氣。(可能會由於短路導致起火。)
- 使用帶滑動台的櫥櫃時,請將電器放置在電源插頭不會接觸蒸氣的位置。

■ 拔出插頭時,請確保握緊電器插頭或電源插頭。



(否則可能會因為短路而導致觸電或起火。)

■ 請勿使用非此電器專用的電源線配件(電器插頭及電源插頭)。請勿轉換插頭。



(可能會導致觸電、漏電及起火。)

■ 烹飪中打開子蓋時請小心謹慎。



(也可能會導致燙傷。)

■ 電器不使用時,請從插座拔出電源插頭。



(否則可能會由於絕緣損壞造成短路,從而導致觸電或起火。)

■ 加熱元件使用後仍有餘熱。請待電器冷卻後再清潔。



(觸碰高溫元件可能會導致燙傷。)

■ 請勿使用非指定內鍋。



(可能會由於過熱或故障導致燙傷或人身傷害。)

使用注意事項

請放入適量米及水,並根據操作說明正確選擇功能。

(以避免出現米水溢出、米飯不熟或米飯燒焦等問題。)

請勿在未放入內鍋的情況下,將烹調食材直接放入電器。未放入內鍋時,請勿烹調。

(以避免任何異物導致電器故障。)

避免在直射陽光下使用電器。

(以避免電器褪色。)

使用電器之前,應先取出內鍋及鑄封加熱器間的防鏽紙。

(以避免烹調效果不佳或起火。)

電器使用時,請勿覆蓋清潔布或其他物體在外蓋上。

(以避免外蓋變形、褪色或故障。)

 
請勿將水濺到電源線插頭上。

(可能造成觸電。)

請勿使用任何金屬物體鏟出米飯。

(以避免刮傷內鍋塗層及導致塗層剝落。)

請確保內鍋、鑄封加熱器及溫度感應器沒有殘留米飯等雜質。

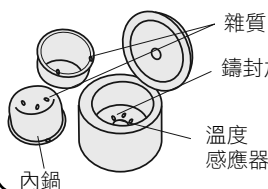

- 請勿傾斜或倒置電器。
- 清潔之前,請先關閉電源開關並拔出電源插頭。

 
蒸氣套溢出米水時,請立即拔出電源插頭以斷開電源。用乾布清潔電源插頭及電器插頭上的米水後,再重新使用。

此電器僅限家庭使用。請勿將電器用於任何商業或工業目的,也勿用於烹調以外的其他目的。


如果在操作電器過程中出現電源故障,則可能會影響烹調效果。

部件名稱

部件名稱

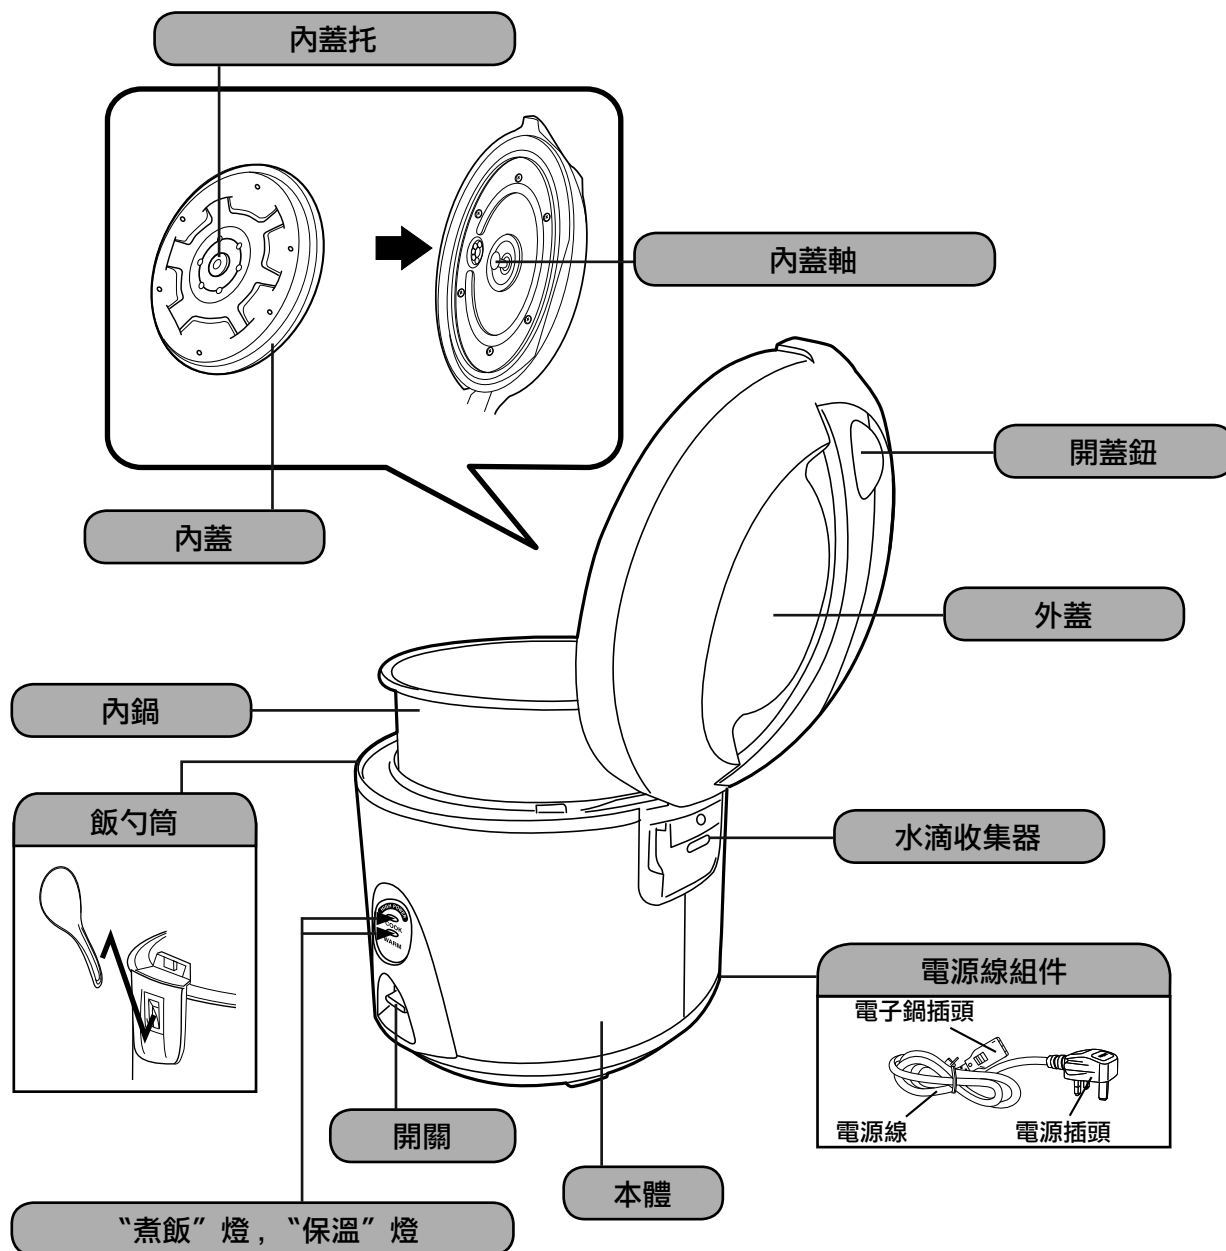

附件

 


功能

煮飯方法 • 保溫


1 用本鍋量杯來量米的份量。

 - 量杯容量約為 180 mL。

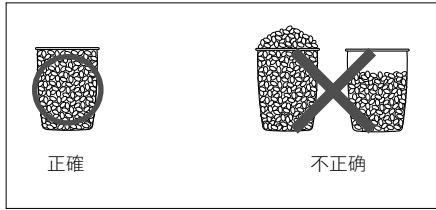

2 清水清洗。

 
- 用其他盆碗來洗。
- 不要用隨附的內鍋洗米,否則防黏塗層會受損。
- 把洗淨的米倒入內鍋。

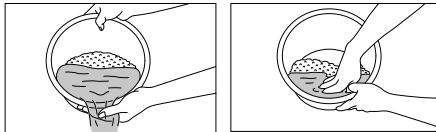

用清潔的水洗米可除異味。沖洗米直到洗米水清澈。


3 加入適量的水。

 - 倒水時,將內鍋放在平穩堅固的平面上。
- 按內鍋上標記的刻度加入適量的水。
- 請勿加熱水,熱水會使飯煮得很爛(軟)。

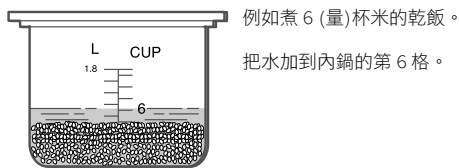


4 將內鍋放入電飯煲中。

 - 把內鍋外面的水擦乾,再放進煲中,否則,可能會引起使用過程中出現噪音。
- 確保內鍋直接與電熱板接觸。
- 內鍋與電熱板間接觸不良可能會導致米飯溢出或夾生。

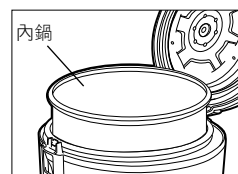

5 蓋上外蓋,把交流電線插到鍋身的電插座中,把另一頭插入電源插座。

 - 外蓋要蓋好。(如果外蓋沒蓋好,烹煮效果會受影響。)

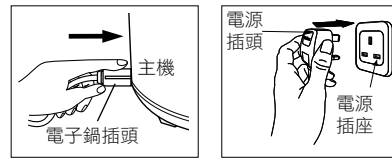

6 按下開關

 
- 煮飯時請勿打開外蓋或拔插頭。
- 請確認已按下開關,「煮飯」燈正確亮起。(在保溫模式下無法進行烹煮。)



請按下開關開始煮飯。「煮飯」燈亮起。

7 飯煮好後

- 鍋會自動保溫。
- 請勿打開外蓋。先讓飯保溫 15 分鐘。
- 然後再好好翻攪一下。
- 不使用時,請把插頭拔出收好。

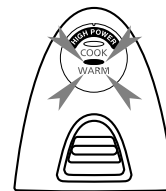

「保溫」燈是表示正在保溫中。

 
保溫

- 烹調結束時,電飯煲會自動切換至保溫功能及「保溫」燈亮起。
- 米飯最多可保溫 5 小時,以免影響口感或產現異味。
- 米飯煮好並處於保溫後,再稍微翻攪一下。
- 請勿把飯勺子留在內鍋裡。
- 請勿將其他食品放入保溫。只適合米飯保溫。
- 請勿將冷米飯直接保溫。
- 室溫的變化可能導致米變色和變味。

功能

蒸煮食物的方法 (使用蒸籠)

1 用量杯取 2 杯水加入內鍋。

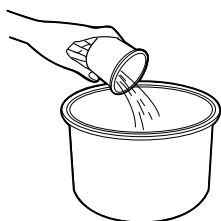

2 將蒸籠放入內鍋裡,再把食物放進去。

- 請勿放入過多食物,以免外蓋不能正常合上。



 
 
3 將內鍋放入電飯煲中。

- 把內鍋外面的水擦乾,再放進煲中,否則,可能會引起使用過程中出現噪音。
- 確保內鍋直接與電熱板接觸。
- 內鍋與電熱板間接觸不良可能會令水溢出或食物不能煮好。



4 蓋上外蓋,把交流電線插到鍋身的電插座中,把另一頭插入電源插座。

- 外蓋要蓋好。(如果外蓋沒蓋好,烹煮效果會受影響。)

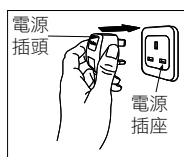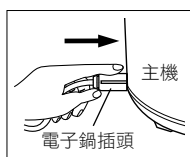

5 按下開關

 
- 煮飯時請勿打開外蓋或拔插頭。
- 請確認已按下開關,「煮飯」燈正確亮起。(在保溫模式下無法進行烹煮。)




請按下開關開始煮飯。「煮飯」燈亮起。

6 蒸煮時,不時手動檢查食物狀態確保完成。

- 當內鍋內的水分完全蒸發時,電飯煲將自動開啟保溫功能。
- 緩慢打開外蓋避免水從外蓋漏出。

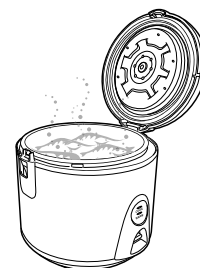

7 食物蒸煮完畢,拔下插頭,打開外蓋,並取出食物。

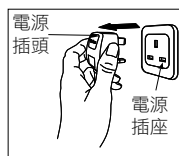 

注意

- 要在同時煮飯,最大煮飯量如下圖所示。

烹調容量	米(杯)
1.8 L	5
1.0 L	2

- 請等到溫度稍降,沒有蒸氣了,再打開外蓋檢查食物是否蒸好了。
- 當同時煮飯與蒸煮食物時。
- 要等到飯煮好了才能把外蓋打開。(建議:選擇需要蒸煮時間與煮飯差不多的食物一起蒸煮)

清潔及維護

- 請務必在電子鍋冷卻後，先拔出電源插頭，再進行清潔和保養。
- 每次使用後都需清洗部件。
- 請勿使用汽油、天拿水、去污粉或金屬洗滌器等用品。

煲體 / 蓋子 / 頂架

- 使用擰乾的濕布擦拭。
- 請勿使用餐具洗滌劑。

內鍋

 
- 使用稀釋的餐具洗滌劑和海綿清洗，拭擦內鍋的外表面。

溫度感應器 / 鑄封加熱器

- 若有物體卡在溫度感應器 / 鑄封加熱器上，請使用砂紙輕輕磨掉（約 # 600）。然後使用擰乾的濕布擦拭。

水滴收集器

- 抓住兩側，並按照箭頭所示方向拆卸 / 安裝。
- 每次使用完畢後，都要拆下水滴收集器，清空積水。

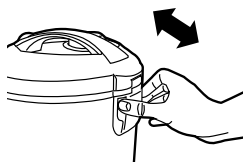


配件



量杯





 飯勺子



蒸籠

  
- 使用稀釋的餐具洗滌劑和海綿清洗。

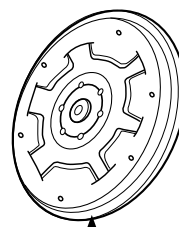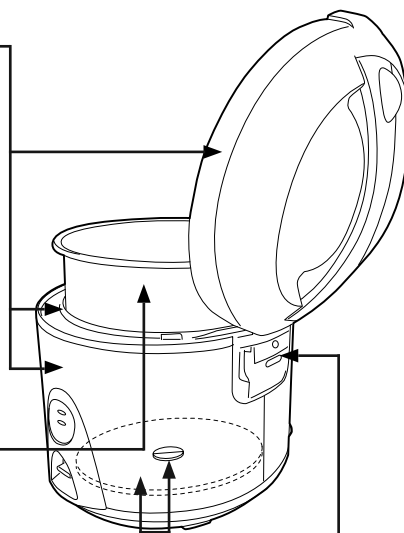

內蓋

■ 拆除

 
- 按照箭頭的方向拆下並取出內蓋。



- 須用海綿清洗。請勿使用具有磨蝕性的清潔劑或鋼絲球。

■ 安裝

 - 將內蓋小心地滑入內蓋軸上。
- 把中間內蓋托的較大橡膠緣朝向外蓋。



- 外蓋打開時，中間內蓋托的較小一側面向您。

每次使用完畢，請清洗乾淨。

故障排除

請檢查以下項目

烹調米飯

詳情	烹調問題					保溫問題			沒有電源	發出異響
	米飯過硬	米飯煮不熟	米飯過軟	溢水	內鍋底部米飯燒焦	變色	臭味	過乾		
米與水的比例有誤。	●	●	●	●	●			●	拔出插頭並檢查斷路器。若線路沒有問題請把電飯煲送到附近服務中心維修。	若內鍋和電熱板盤之間有水會產生噪音。
洗米方式不當。				●	●	●	●			
內鍋及鑄封加熱器間有雜質。	●	●	●		●					
使用大量油進行烹調。	●	●			●	●	●			
米飯保溫時間已經超過 5 小時。						●	●	●		
蓋子沒有緊固關閉。	●			●		●	●	●		
內鍋沒有充分清洗。					●		●			
電源線沒有緊固連接插座。		●					●			

技術規格

型號		SR-TEM10	SR-TEM18
電源		220 V ~ 50 Hz	
耗電量	使用烹調功能時	600 W	800 W
	使用保溫功能時	32 W	33 W
白米容量	使用烹調功能時 (大約)	1 - 5.6 量杯	3 - 10 量杯
	使用保溫功能時 (大約)	1 - 5.6 量杯	3 - 10 量杯
尺寸 (寬 x 長 x 高) (大約)		248 x 247 x 255 mm	276 x 274 x 278 mm
重量 (大約)		2.5 kg	3.1 kg
保溫		5 小時	

- 若要了解電源線更換及產品修理事宜，請與 Panasonic 授權服務中心聯絡。

Panasonic Manufacturing Malaysia Berhad

No. 3, Jalan Sesiku 15/2, Section 15, Shah Alam Industrial Site,
40200 Shah Alam, Selangor Darul Ehsan, Malaysia
<http://www.panasonic.com>

© **Panasonic Corporation 2016**

RZ19H9592
D0416-0
Printed in Malaysia