

Panasonic®

User Guide


Inverter Window Type Heat Pump Air Conditioner

CW-HZ120YA

This user guide is for reference only. For detailed information, please refer to the Chinese version.

MAIN UNIT / PART IDENTIFICATION

MAIN UNIT

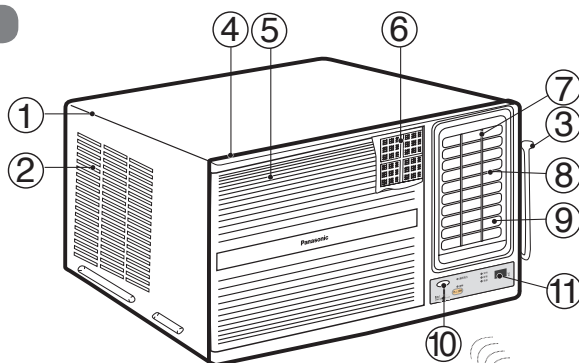

- ① Cabinet
- ② Air inlet louvre
- ③ Power wire
- ④ Front grille
- ⑤ Front intake grille
- ⑥ Air filter
- ⑦ Horizontal airflow direction vane
- ⑧ Vertical airflow direction vane

- ⑨ Airflow outlet
- ⑩ Signal receiver
- ⑪ Panel



REMOTE CONTROL
Maximum Distance: 10m

REMOTE CONTROL

Signal transmitter

Display panel

ON/OFF OPERATION button


MODE selection button

QUIET button

AIR SWING button

REMOTE CONTROL RESET button

CHECK-UP button

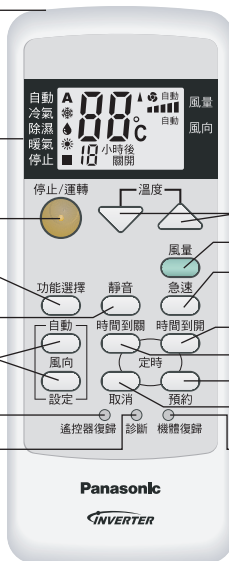

TEMPERATURE setting button
FAN SPEED selection button
POWERFUL button

ON TIMER button
OFF TIMER button
TIMER SET button
TIMER CANCEL button


MAIN UNIT RESET button

Function Sign: A: Auto ❄: Cool 💧: Dry ☀: Heat


PREPARATION BEFORE OPERATING

- 1** Connect the power supply.


- 2** Press the bottom left and right corner to open the front intake grille.

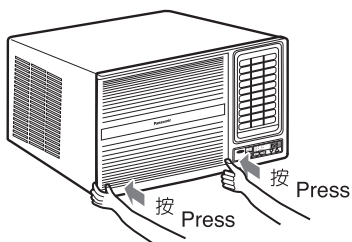


- 3** Slightly tilt up and pull out the air filter.

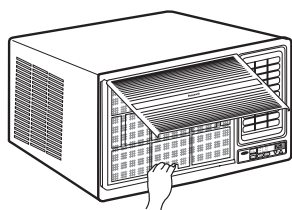

- 4** Place the 4-in-1 anti-bacterial filter at the centre.

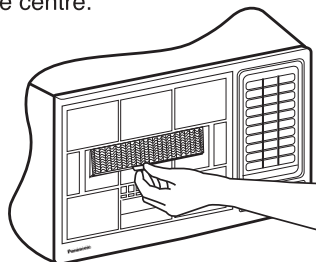


- 5** Put back the air filter and cover with the front intake grille.

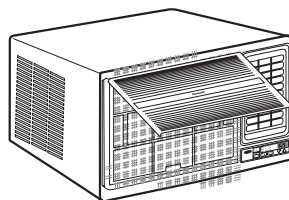

AIR CONDITIONER OPERATION

Air-Conditioner provides simple control function

If the remote control is lost or ran out of batteries, the following instructions help to control the air-conditioner.

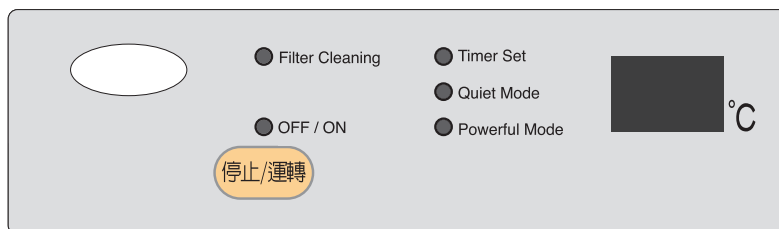

OPERATING THE UNIT

Start operation by pressing **停止/運轉** ON/OFF button.

The operation will turn on and the display panel will light up.

 
To stop the operation, press the **停止/運轉** ON/OFF button.

The unit will stop operating and the display panel light will turn off.

AIR CONDITIONER OPERATION

AUTO Mode


- ① Press  功能選擇 MODE selection button to select AUTO mode

NOTE: The cycle of Mode selection button 

- ② Press  停止/運轉 OFF / ON button to start operation

During AUTO operation, the air conditioner will select the desired operation mode automatically according to the indoor / outdoor temperature and the temperature setting by remote control.

③ Press  風量 FAN SPEED selection button to choose fan speed level

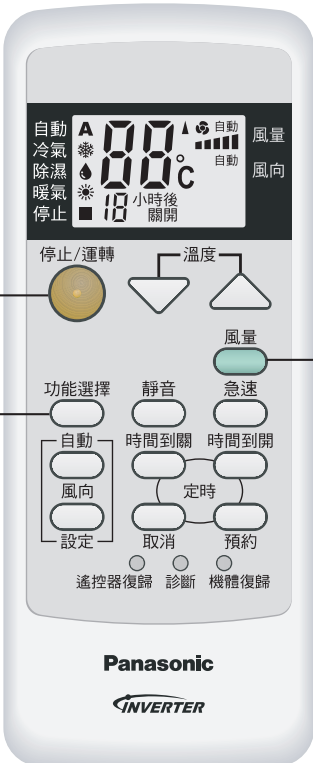

風量
自動 AUTO

If air conditioner automatically selects COOL or DRY mode and the fan speed is at AUTO speed, it will operate the “Self-cleaning” function to clear the dust on Heat exchanger.
(Defer airflow for 40 seconds or intermittently operate)

AIR CONDITIONER OPERATION

COOL Mode

- ① Press  功能選擇 MODE selection button to select COOL mode



NOTE: The cycle of Mode selection button 

- ② Press  停止/運轉 OFF / ON button to start operation

- ③ Press  溫度

TEMPERATURE setting button to set room temperature to your preference of cooling comfort.

- ④ Press  風量 FAN SPEED selection button to choose fan speed level

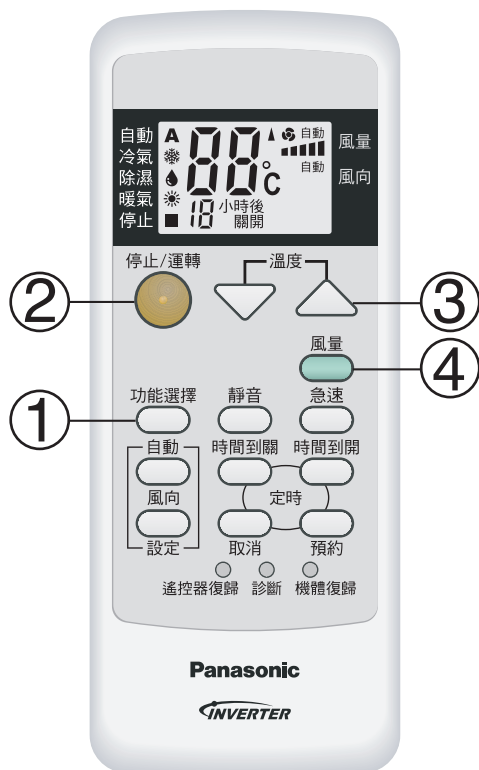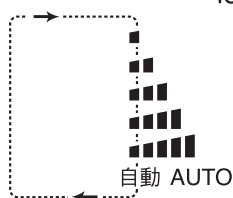


If air conditioner automatically selects COOL or DRY mode and the fan speed is at AUTO speed, it will operate the “Self-cleaning” function to clear the dust on Heat exchanger.
(Defer airflow for 40 seconds or intermittently operate)

AIR CONDITIONER OPERATION


DRY Mode

 - ① Press  功能選擇 MODE selection button to select DRY mode

NOTE: The cycle of Mode selection button 

During DRY mode, the normal operation condition of indoor side is 32 ~ 16°C and outdoor side is 43 ~ 16°C

- ② Press  停止/運轉 OFF / ON button to start operation

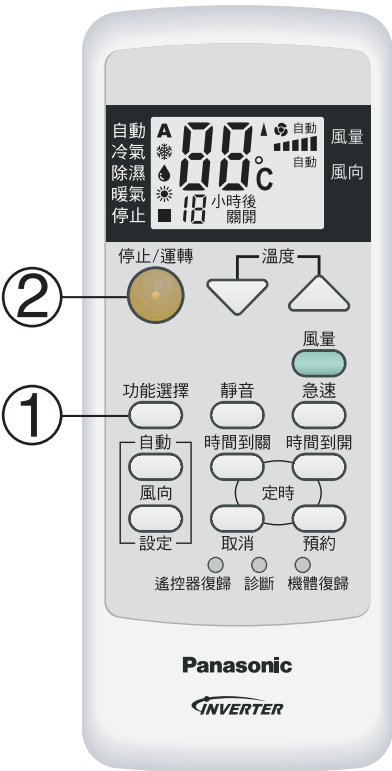


DRY mode is to give a gentle cooling operation at low fan speed to reduce the humidity in the room.

If air conditioner automatically selects COOL or DRY mode and the fan speed is at AUTO speed, it will operate the “Self-cleaning” function to clear the dust on Heat exchanger. (Defer airflow for 40 seconds or intermittently operate)

AIR CONDITIONER OPERATION

HEAT Mode

 - ① Press  功能選擇 MODE selection button to select HEAT mode

NOTE: The cycle of Mode selection button 

During HEAT mode, the normal operation condition is indoor side 30 ~ 16°C and outdoor side is 24 ~ 0°C



- ② Press  停止/運轉 OFF / ON button to start operation


- ③ Press  溫度

TEMPERATURE setting button to set room temperature to your preference of heating comfort

- ④ Press  風量

FAN SPEED selection button to choose fan speed level

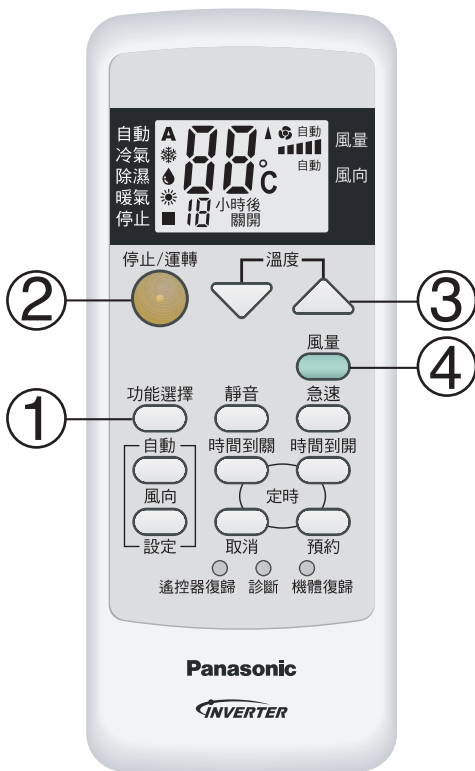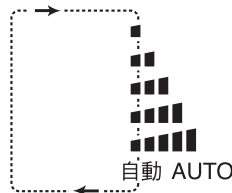

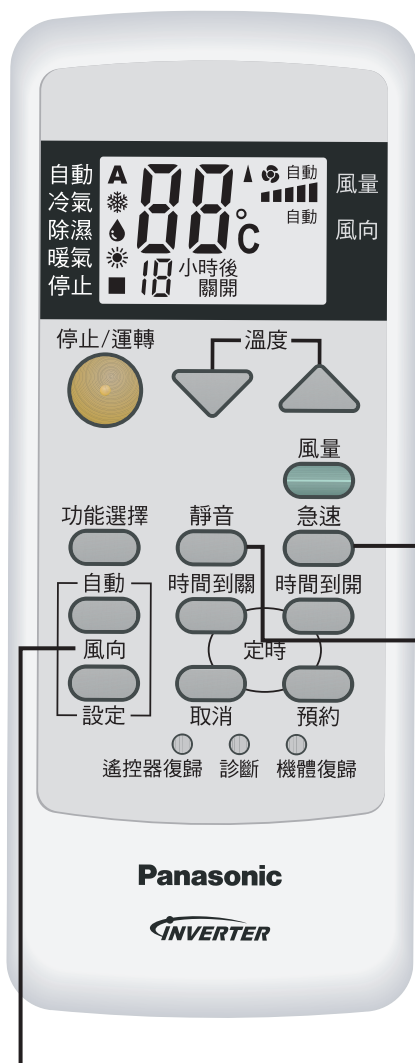

POWERFUL OPERATION

To obtain the temperature quickly:

- ① Press  POWERFUL button
- ② To cancel this operation, press  once more
- ③ After POWERFUL is selected, the operation will go on for 30 minutes, after that it will shift back to previous operation mode

QUIET OPERATION

- ① Press  QUIET button
- ② To cancel this operation, press  once more

ADJUSTING HORIZONTAL AIRFLOW DIRECTION


Press the upper AIR SWING button to adjust left and right airflow direction



Press the lower AIR SWING button to fix the airflow direction

NOTE:


Using your hands to adjust the direction may cause the louvres to malfunction. If this happens, stop operation immediately and restart.

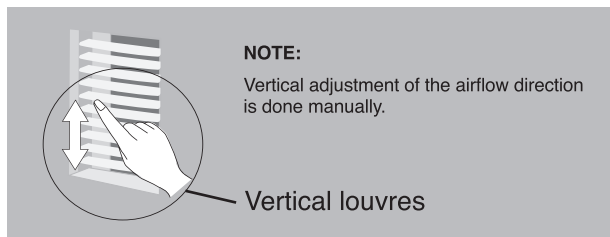

NOTE:

Vertical adjustment of the airflow direction is done manually.


SETTING THE TIMER

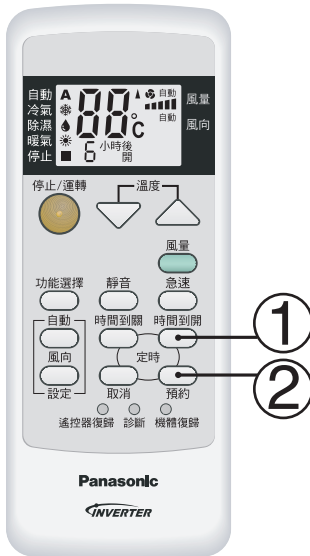

SETTING THE ON TIMER

When the air conditioner is OFF:

- ① Press  the ON TIMER button to set the timer. Press the same button until the preferred hour of operation is reached. (The Timer Set indicator light will blink to await for setting)
- ② Press  TIMER SET button to complete the setting. At this time, the Timer Set indicator light is steady instead of blinking

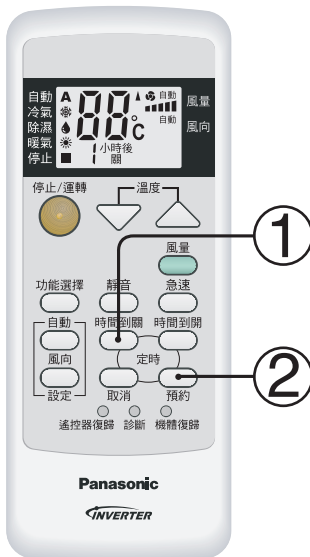

SETTING THE OFF TIMER

When the air conditioner is ON:

- ① Press  the OFF TIMER button to set the timer. Press the same button until the preferred hour of operation is reached. (The Timer Set indicator light will blink to await for setting.)
- ② Press  TIMER SET button to complete the setting. At this time, the Timer Set indicator light is steady instead of blinking.

NOTE:

It is unavailable to set ON TIMER and OFF TIMER simultaneously
The timer figure will change according to the time remaining
Press  the TIMER CANCEL button to cancel the timer setting.