

# Aftersales services 售後服務

Panasonic official website: <https://www.panasonic.hk>

Panasonic 官方網站網址: <https://www.panasonic.hk>

Panasonic Taiwan Co., Ltd.

© Panasonic Taiwan Co., Ltd. 2021

CZ45H170  
MX1221Z0  
Date of issue: December 2021  
Printed in China  
發行年月：2021 年 12 月  
中國印刷

# Panasonic®

## Operating Instructions

### 使用說明書

### Coffee Maker

### (Household Use)

### 全自動研磨咖啡機

### (家庭用)

Model No. **NC-A701**  
型號：



English

中文  
(繁體)

Thank you for purchasing the Panasonic product.

- Please read these instructions carefully to use the appliance correctly and safely.
- Before using this product **please give your special attention to "Safety Precautions" and "Important Information" (Page EN3 - EN6).**
- Please keep this Operating Instructions for future use.
- Panasonic will not accept any liability if the product is subject to improper use, or failure to comply with these instructions.



Contents	Page
Safety Precautions .....	EN3
Important Information .....	EN6
Parts Names and Handling Instructions .....	EN7
How to Use .....	EN9
How to Clean .....	EN14
Troubleshooting.....	EN17
Replacement Parts .....	EN18
Specifications.....	EN19

# Safety Precautions



Please make sure to follow these instructions.

In order to prevent accidents or injuries to the user, other people, and damage to property, please follow the instructions below.

■ The following charts indicate the degree of damage caused by wrong operation.


	<b>WARNING:</b> Indicates potential hazard that could result in serious injury or death.
	<b>CAUTION:</b> Indicates potential hazard that could result in minor injury or property damage.

■ The symbols are classified and explained as follows.

	This symbol indicates an action that must be avoided.
	This symbol indicates an action that must be carried out.

## WARNING

To avoid risk of electric shock, fire due to short circuit, burns, scalding or injury.

-  ● Do not disassemble, repair or modify this appliance.  
→ Consult the place of purchase or Panasonic service centre.
- Do not damage the power cord or power plug.  
Following actions are strictly prohibited.  
Damaging, modifying, touching on or placing near heating elements, bending, twisting, pulling, pulled over sharp edges, putting heavy objects on top, bundling the power cord and carrying the appliance by the power cord.
- Do not use the appliance if the power cord or power plug is damaged or the power plug is loosely connected to the outlet.  
→ If the power cord is damaged, it must be replaced by the manufacturer, its service centre or similarly qualified person in order to avoid a hazard.
- Do not plug or unplug the power plug with wet hands.
- Do not immerse the appliance, power cord and power plug in water or splash it with water.
- Do not let power cord hang over edge of table or worktop, or touch hot surfaces.
- Do not allow infants and children to play with packaging material. (It may cause suffocation. )
- Do not touch or get your face close to places where steam is coming out.
- Cleaning and user maintenance shall not be made by children without supervision.

# Safety Precautions

Please make sure to follow these instructions.

## WARNING



- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- Discontinue using the appliance immediately and unplug in the unlikely event that this appliance stops working properly.
  - e. g. for abnormal or breaking down
  - The power plug and the power cord become abnormally hot.
  - The power cord is damaged or the appliance power fails.
  - The main unit is deformed, has visible damage or is abnormally hot.
  - There is unpleasant smell.
  - There is abnormal turning noise while in use.
  - There is another abnormality or failure.→ Consult the place of purchase or Panasonic service centre for inspection or repair.
- Make sure the voltage indicated on the label of the appliance is the same as your local supply. Also avoid plugging other devices into the same outlet to prevent electric overheating. However, if you are connecting a number of power plugs, make sure the total wattage does not exceed the rated wattage of the outlet.
- Insert the power plug firmly.
- Dust off the power plug regularly.
  - Unplug the power plug, and wipe with a dry cloth.
- Do not use extension socket as much as possible, when it is necessary, choose an extension socket with large current capacity and over-current protection.

## CAUTION

To avoid risk of electric shock, fire due to short circuit, burns, scalding or injury.



- Do not leave the appliance unattended while in use.
- Do not use the appliance for any purpose other than those described in these instructions.
- Do not use the appliance near walls, furniture, or in enclosed spaces such as a built-in cupboard. (It may cause discoloration or deformation.)
- Do not touch the appliance with wet hands.

## CAUTION



- Do not use the appliance on following places.
  - On uneven surfaces, on carpet, non-water-resistant surface or tablecloths etc.
  - Places where it may be splashed with water or near a heat source.
  - Near any open water sources such as sinks, or the like.
  - Near a wall or furniture.→ Place the appliance on a stable, dry, clean, firm, heat-proof and general height worktop.
- The coffee maker shall not be placed in a cabinet when in use.
- Do not touch, block or cover the steam vent during use.
- Do not use an external timer etc.
  - This appliance is not intended to be operated by means of an external timer or separate remote - control system.
- Do not place or insert anything on the top or under the appliance.
- Do not put your hand in the grinding cavity to avoid accident occurred such as cuts.
- Do not touch hot surfaces such as warming plate, the area around steam vent or the surface of coffee jug while the appliance is in use or immediately after use. The appliance becomes hot easily during use and the surface temperature becomes very high. Clean the surfaces after cooling down.
  - Be careful with the residual heat source especially after use.
- Do not open any parts when the appliance is in use (including in Preset Timer Mode).
- Do not use the appliance before coffee jug, bean container, water tank, drip lid, coffee basket and filter are installed properly. Do not use other coffee jugs except the coffee jug provided by this appliance.
- Do not pour water into the water tank once it enters the heat preservation state.
- Do not carry the appliance by gripping bean container, coffee basket rack or water tank.
- Do not open the coffee basket during the coffee dripping process or just after the completion of dripping.
- Do not open the jug lid when the coffee jug still has hot coffee. Hot liquid may spurt out or drop on your hand.
- Do not immerse the coffee jug into the water or spray water on it, and do not place it on a wet place while the coffee jug is hot.
- Unplug the power plug when replacing the accessories or approaching to the moving part.
- Use the brush provided for cleaning.
- Always ensure the appliance is switched off and unplug the power plug from outlet when the appliance is not in use, before moving and cleaning. Dry the appliance before use again.
- Make sure the appliance is cool down before carrying, moving, and cleaning.
- Beware not to be tripped over or get caught in the power cord while in use.

# Safety Precautions

Please make sure to follow these instructions.

## CAUTION



- Make sure to hold the power plug when unplugging the power plug. Never pull on the power cord.
- Ensure to clean the appliance especially surfaces in contact with food after use. (See Page EN14-EN16 "How to Clean".)
- Consult the place of purchase or Panasonic service centre for inspection and maintenance to enhance the appliance usage safety when it has been used for a long time.
- This appliance is intended for household use only.

## Important Information


- Do not use the appliance outdoors.
- Do not fill the water tank other than water, such as milk or hot water.
- Do not fill other objects except coffee bean into the bean grinding cavity.
- Do not place the coffee jug on any heat sources or in microwave.
- Do not brew coffee while there is no water in the water tank.
- Do not use this appliance for commercial purpose.




This symbol on the products indicates "Hot surface and should not be touched without caution".

## Parts Names and Handling Instructions


Main Unit

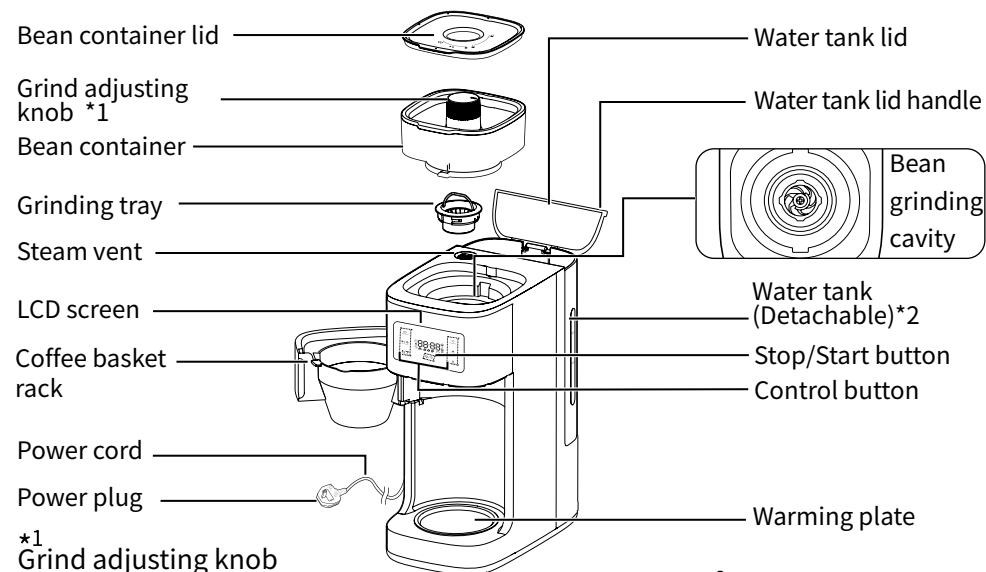

\*1 Grind adjusting knob

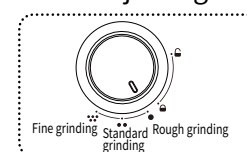

\*2 Water tank

 

### Accessories

■ Coffee jug

■ Coffee basket

■ Drip lid

Jug lid

Jug handle


Glass jug

■ Filter

■ Cleaning brush/ Measuring spoon

# Parts Names and Handling Instructions

## Control Panel

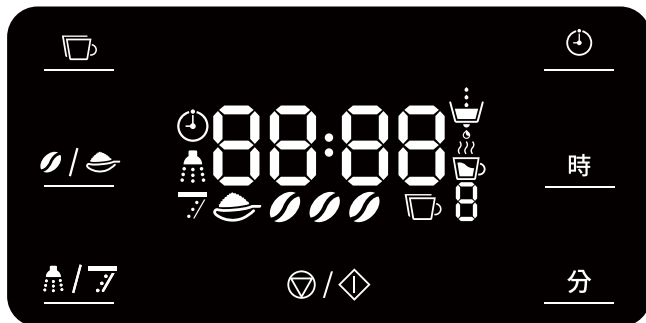

### Coffee Amount (Cups)

Set the coffee amount for 2, 4 or 6 cups.

### Bean/ Powder Mode /

Choose coffee bean mode or ground coffee mode , and set the strength level (Page EN12).

### Cleaning Mode /

Start the internal pipeline cleaning or the powder port cleaning (Page EN16).

### Preset Timer Mode

Preset the coffee brewing time (You need to set the current time first (Page EN13) and then set the Preset Timer Mode). If no reservation is required, press button again to exit.

### Time Setting ( 時 )

Click to set the current time on the LCD screen/hours of the Preset Timer Mode, and long press to fast forward.

### Time Setting ( 分 )

Click to set the current time on the LCD screen/minutes of the Preset Timer Mode, and long press to fast forward.

### Stop/Start Button /

Stop : For canceling the related actions.

Start : flashing during operation. ( is not displayed in the case of internal pipeline cleaning or the powder port cleaning).

#### Note

- When the power plug is unplugged, the LCD screen lights off.

## Preparation before Use

When this product is used for the first time or has not been used for a long time, users should remove the package and follow the following steps:


1. Clean all detachable parts and wipe them clean.
2. Assemble the coffee jug, coffee basket, filter and bean container (Do not fill with ground coffee).
3. Open the water tank lid, pour water into the water tank to scale 4 and close the water tank lid.
4. Plug in the power plug. Press / button, and on the LCD screen will light up and flash. Press / button, and the will light up for a long time showing the start of cleaning; you will hear "Beep" for 8 times when cleaning is finished.
5. After cleaning, unplug the power plug and pour out the hot water from the coffee jug.

### < Warm Prompts >

All coffee makers have been tested before leaving the factory. Although they have been thoroughly cleaned, there may still be a little residual ground coffee. We guarantee that the coffee maker is brand new, so please be at ease to use it.


## How to use

- 1 Please place the coffee basket, filter and drip lid in the coffee basket rack in order.

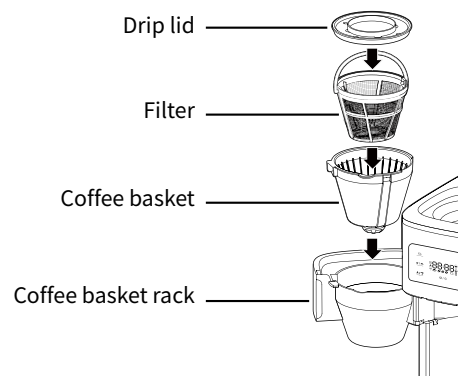

#### Note


- Align the coffee basket rack with the clips of the coffee basket.

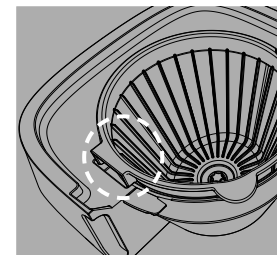

- 2 Cover the coffee basket rack in the direction shown in the illustration and you will hear a "click" sound.


#### Note

Make sure it is fully closed to prevent liquid from escaping and causing stains on the table or burns.

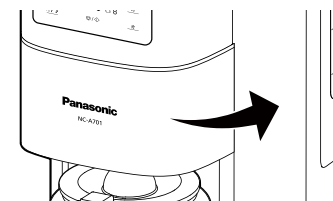

# How to use

## 3 Attach the bean container securely.

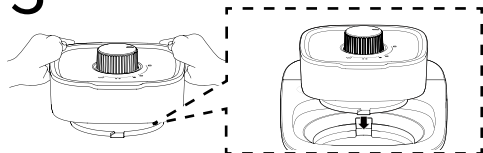

When the ground coffee mode is selected



Add the appropriate amount of ground coffee into the filter of the coffee basket rack.

**Note**

After putting in the ground coffee, make sure to close the coffee basket rack to prevent liquid from escaping during operation.



- Attach the bean container lid to the bean container, adjust the grind adjusting knob to the position and press the recessed part of the bean container against the raised top of the main unit until it is secure.
- When the coffee bean mode is selected, open the bean container lid and place the appropriate amount of coffee beans into the bean container, then close the bean container lid.
- When you take out the bean container with unused coffee beans, there will be residual coffee beans on the grinding tray. It is necessary to clean the bean residue before putting the grinding tray into the bean container. Otherwise, the beans may be crushed and fall into the crevices of the grinding tray when the bean container is installed.
- Please make sure that the grinding tray is installed before installing the bean container.

Reference table for the amount of coffee beans and ground coffee to be used  
(Approx. 120 mL for one cup. You can adjust the amount of coffee beans and powder according to your personal preference.)


Number of cups of drip coffee	Flat scoop of coffee beans (approx.)	Flat scoop of ground coffee (approx.)
2 cups	2.5 ( 19 g )	2.5
4 cups	3.5 ( 30 g )	4
6 cups	5.5 ( 45 g )	6

**Note**


- How to remove the grinding tray (Remove the bean container before removing the grinding tray).
- Before removing the grinding tray, please use up the bean residue first. Otherwise, the bean residue will spill out when the grinding tray is lifted.

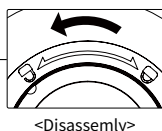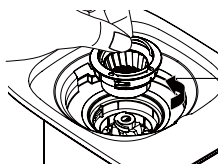

<Disassembly>

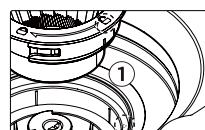

<Assembly>

 

<Disassembly>

- Hold the grinding tray handle and turn it towards the direction on the grinding tray to remove the grinding tray from the bean grinding cavity.

<Assembly>

- Hold the handle of grinding tray and align position on the grinding tray with position on the bean grinding cavity. Assemble the grinding tray into the bean grinding cavity and turn the grinding tray clockwise in the direction until a "click" sound is heard.

## 4 Assemble the coffee jug properly on the warming plate.


**Note** If it is not positioned correctly or not positioned at all, the liquid may drip directly onto the warming plate and cause stains or burns.

<Assembly>

- Place the coffee jug in the direction of the arrow ①, making sure that it is aligned with the recess of the warming plate.

<Disassembly>

- Remove the coffee jug by pulling it out in the direction of the arrow ②.

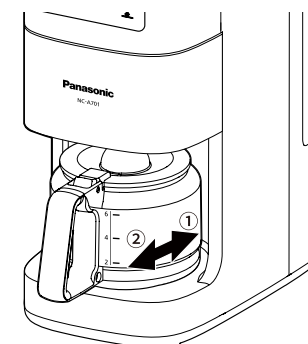


## 5 Fill the water tank with the appropriate amount of water for the number of cups of coffee to be brewed, and then close the water tank lid.

- The water tank is graduated to 2, 4 and 6, corresponding to the number of cups of coffee. Please select the amount of water to be added according to your needs.
- You can add water directly to the water tank, or you can disassemble it to add water before reassembling it.

**Note**

- The amount of water added to the water tank is a one-off brewing amount. Please make sure to add water according to the number of cups to be brewed to avoid affecting the taste of the coffee.
- Do not fill with more water than the water tank scale 6. Otherwise, water may spill out of the tank overflow (back of the tank).

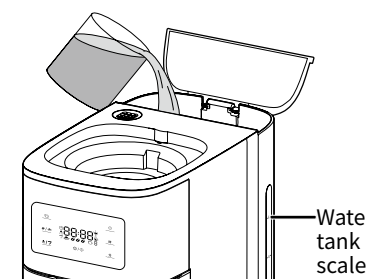


Water tank scale

<Assembly>

- Align the recessed part of the back of the water tank with the raised part of the main unit and assemble it on the main unit in the direction of the arrow ②.

<Disassembly>

- Remove the water tank from the main unit by holding the recess on the front of the tank and pulling it out in the direction of the arrow ①.

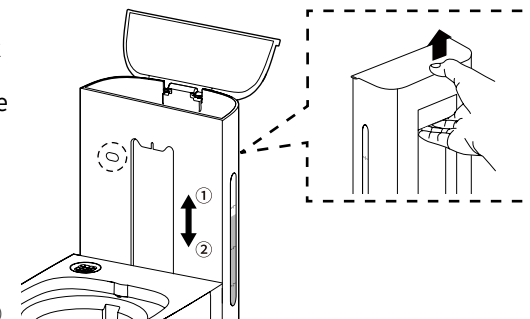



# How to use

## 6 Plug in the power plug.


Warm Reminder:

To use the Preset Timer Mode function, please first set the current time as follows: Press and hold the "時" or "分" button to enter the setting screen. The corresponding hour or minute number on the LCD screen will flash. And then press and hold or tap to adjust the time.




After setting, the setting screen will flash for about 4 seconds to exit.

If there is no operation, it will flash for about 8 seconds to exit the setting screen.
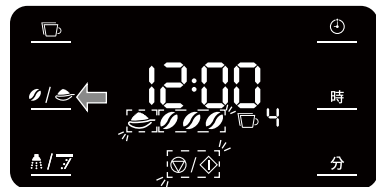
## 7 Function setting - Bean/ Powder Mode




Coffee Bean Mode

Press the  /  button, when  is displayed on the LCD screen that means you select the coffee bean mode.



The more coffee bean images appear on the LCD screen, the higher the strength level is.


 ————— Low strength

 ————— Medium strength

 ————— High strength


Ground Coffee Mode

Press the  /  button to select the ground coffee mode.


When the LCD screen shows , the ground coffee mode is selected. The ground coffee mode does not allow you to select the number of cups and you do not need to set the grinding level.


## 8 Set the grinding level(only for the coffee bean mode).

- Make sure that the grind adjusting knob is turned to the lock position. And then turn the grind adjusting knob to the grind range (Otherwise, the appliance cannot be activated).

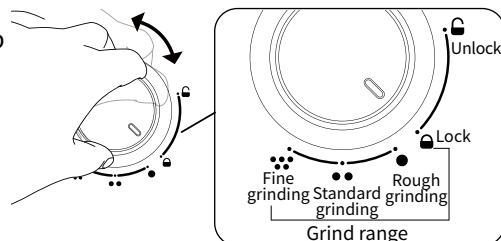


## 9 Function setting - Number of coffee cups (only available in coffee bean mode).

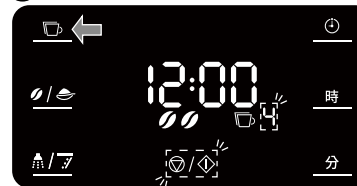

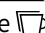
- Press the  button to select the number of cups of drip coffee required.

## 10 Function setting - Preset Timer Mode.

(Reserve a time to start brewing. This step can be omitted if no reservation is required).

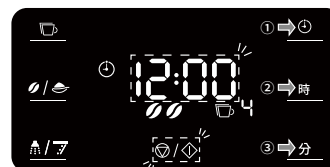

### Preset Timer Mode Setting Steps


- Press the  button to enter the Preset Timer Mode. The LCD screen displays "⌚".
- Press "時" to set the hour time.
- Press "分" to set the minute time.


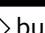

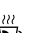
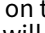
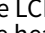
Warm Reminder:

If you did not the current time after plugging in the power, please follow the steps below to set the current time.

- In the Preset Timer Mode, press the "⌚" button once to cancel the reservation and return to the current time screen.
  - Press and hold the "時" or "分" button to enter the current time setting screen. The corresponding hour or minute number on the LCD screen will flash. Then press and hold or tap to adjust the time. After setting, the setting screen will flash for about 4 seconds to exit. If there is no operation, it will flash for about 8 seconds to exit the setting screen.
- The time will return to the default value when the product is restarted. (Unplug the power plug for a period of time and plug it back in.) Please reset to the current time after each start-up. In the Preset Timer Mode, it will run according to the set current time.

## 11 Press the / button to start (to enter the drip coffee program).

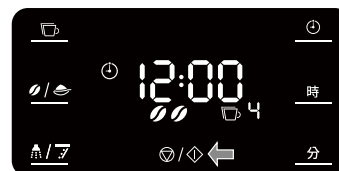


- Press the  /  button to enter the drip coffee program, the LCD screen will show  and flash. 4 beeps will be heard when the drip is complete.
- When the drip is complete, it will automatically enter the Keep-Warm Mode with  flashing on the LCD screen (Keep-Warm Mode will run for 40 minutes by default, and 8 beeps will be heard when the Keep-Warm Mode is finished). Press  /  to cancel it if you don't need to keep it warm.

## 12 After use, please unplug the plug.

## How to Use

### Precautions

- When taking out the coffee jug, please hold the coffee jug handle and pull it, avoiding touching the glass part.
- When pouring out coffee, please do not touch the movable part of the coffee jug lid.
- Do not unplug the power plug during Keep-Warm Mode.
- During Keep-Warm Mode, the temperature on the surface of the warming plate is high, so please do not touch it.

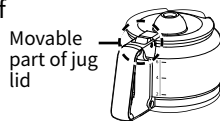

### In the case of discarding ground coffee

1. Plug out the power plug.
2. Open the coffee basket rack and take it out after the ground coffee cools.
3. Take out the coffee basket together with the filter.
4. Pour out the ground coffee from the filter.

### In the case of choosing wrong mode

- Follow the steps of "In the case of discarding ground coffee".

(If the power is cut off when the coffee bean grinding is incomplete, it is recommended to discard the coffee bean that is not completely ground. If you continue to grind those beans, the powder particles may be too fine, which may make the coffee too strong or cause ground coffee overflow, resulting in poor taste.)

### In the case of the machine not used for a long time

- To prevent residual coffee beans from deteriorating due to oxidation, it is recommended to take out the coffee beans in the bean container and clean after the coffee beans in the bean grinding cavity are completely ground (Page EN14-EN16).

#### Note


- To prevent the coffee jug from being damaged, please pay attention to the following items and use the coffee jug safely:
  - Never put the coffee jug on any heat source or in the microwave oven.
  - Do not use any coffee jug with broken or loose handles.
  - When the temperature of the coffee jug is high, please do not put it in water, spray it with water or place it in a damp place.

## How to Clean

- Make sure to clean the appliance after each use.

### Inside

- After each use, please press the button, and then press button to clean the internal pipeline or powder port.

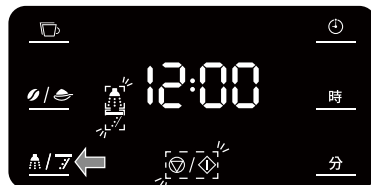


#### Note

- This mode involves two independent functions; The cleaning mode only for the pipeline cleaning, so the powder port needs to be cleaned separately (Page EN16).

## How to Clean

### Parts


- Before cleaning, be sure to disconnect the power plug from outlet and cool down the appliance.
- Below parts can be cleaned with diluted dish soap (neutral), but can not be washed in a dishwasher.
- After cleaning, please dry all parts and store them in the cool place, wait for them to be dried before using.

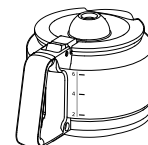


Coffee jug



Grinding tray

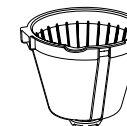


Coffee basket

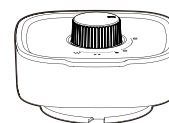

Bean container



 Filter



Water tank

#### Note

- Do not use benzine, thinner, alcohol, bleach, polishing powder, metal brushes or nylon face of sponge etc. (It may damage the surfaces.)
- Do not clean the appliance with pointed object such as a toothpick or pin. Please clean with cleaning brush.
- Do not use the glass jug if it has chipped off or cracked.


### Outside

- Wipe the appliance surface with a well-wrung cloth.
- To avoid damaging surfaces of the main unit, the warming plate, bean container lid and water tank, do not hit them with hard objects or rub them with metal brush.



### Bean grinding cavity


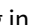
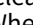


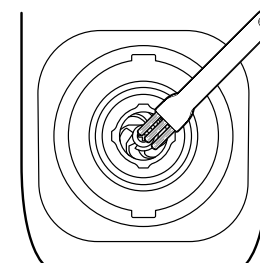- Please remove the grinding tray (Page EN10) and then clean with cleaning brush. Wipe with a well-wrung cloth. (Be careful the grinding blade to avoid injury.)







# How to Clean






## Pipeline Cleaning


1. Install coffee basket, coffee jug, bean container and other accessories (Please do not put ground coffee or beans in).
2. Pour water into the water tank until it reaches the position of scale 4.
3. Pour 20 g citric acid into the water tank and stir it with a sponge cleaning brush (Self-provided).
4. Cover with the water tank lid and wait for 30 minutes.
5. After plugging in the power plug, press the  /  button to select the cleaning mode for the internal pipeline cleaning. When the  on LCD screen is on, press the  /  button to start cleaning.

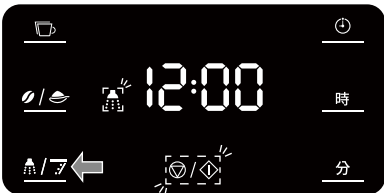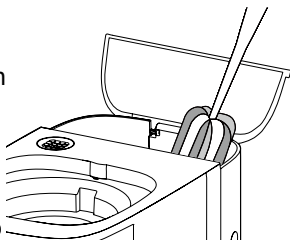



  
6. After "Beep" for 8 times, the internal pipeline cleaning has finished.
7. After use, it is recommended to repeat steps 2-6 with clear water to remove the odor of citric acid.
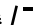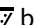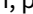
## Powder Port Cleaning

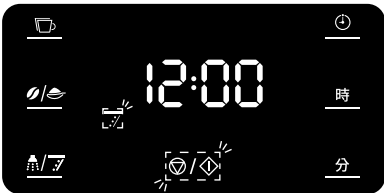1. Press the  /  button to select the Powder Port Cleaning Mode. When the  on LCD screen is on, press the  /  button.



2. After the "beep" sounds, the powder port will open automatically. There will be ground coffee falling, please pay attention.
3. Open the coffee basket rack.
4. Clean the powder port properly with a cleaning brush. Water droplets around the powder port together with the ground coffee should be cleaned.
5. Close the coffee basket rack and press the  /  button to close the powder port.

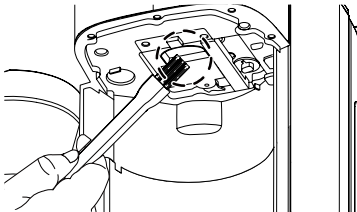

# Troubleshooting

Please check the following points before arranging for service.

Problem	Cause and Action
Brewing speed is slow or coffee is not coming out.	●Is there incrustant attached inside the machine? →Clean the pipeline with 20 g citric acid. (Page EN16)
Button operation is invalid.	●Is the power plug loose? →Be sure to plug in the power plug.
Coffee cannot be filtered.	●Is the tank container filled with water? →Please fill the water tank container with the water volume according to the number of coffee cups. ●Is the coffee basket put in? →Please put the coffee basket in. ●Is the filter put in? →Please put the filter in. ●Is the coffee jug installed correctly? →Please install the coffee jug in the correct position.
Ground coffee is spilled from the filter.	●Too much ground coffee has been put in. →Ground ground coffee should not be put in more than 7 level spoons.
Coffee is spilled from the coffee jug.	●Excessive water has been injected into the water tank. →Water filled in the tank should not exceed scale 6.
There are coffee grounds in the coffee jug.	●The filter is damaged. →Replace the filter.
Display shows "U11".	●Bean container is not installed correctly. →Please reinstall the bean container.
Display shows "U12".	●The motor is locked. →Please pull out the power plug and clean the bean grinding cavity. →If the above actions cannot help troubleshooting, please contact Panasonic's direct service centre.
Display shows "U13".	●Water tank is not filled with water. →Please pour proper water volume in the tank.
Display shows "H04".	●There may be ground coffee in the powder port. →Please pull out the power plug and clean the powder port. (Page EN16) →If the above actions cannot help troubleshooting, please contact Panasonic's direct service centre.

# Troubleshooting

Problem	Cause and Action
Coffee tastes too weak/strong.	<ul style="list-style-type: none"><li>●Is the bean container feeding beans normally? →There is grease on the surface of the bean container. Please clean the bean container completely. →Please gently pour coffee beans into the bean grinding cavity with a utensil.</li><li>●The water volume for brewing is not in line with the requirements of the corresponding number of cups. →Please pour proper water for brewing in line with the corresponding number of cups. (Page EN10).</li></ul>
The bean grinding cavity does not run normally or makes abnormal (rattling) sounds.	<ul style="list-style-type: none"><li>●There are foreign bodies in the bean grinding cavity. →Please remove the grinding tray (Page EN10) first and then remove the foreign bodies inside. Then, reassemble the grinding tray.</li></ul>

# Replacement Parts

Replacemet parts are available at your dealer or Panasonic Service Centre.

Parts name	Coffee jug
	Coffee basket
	Filter
	Drip lid
	Bean container lid
	Bean container (without bean container lid)
	Cleaning brush
	Measuring spoon

# Specifications

Power supply	220 V ~ 50 Hz
Power consumption	750 W
Dimensions (W × D × H) (approx. )	28.4 x 16.1x 42.0 cm
Mass (approx. )	4.3 kg
Length of the power cord (approx. )	1.1 m

非常感謝您購買 Panasonic 的產品。

- 請仔細閱讀本使用說明書，以確保正確安全使用本產品。
- 使用本產品前，**請務必仔細閱讀「安全注意事項」和「重要資訊」（第TC3～TC6 頁）。**
- 請妥善保管本使用說明書以備將來之用。
- 對於不當使用本產品，或未遵守使用指示而導致的問題，Panasonic 概不負責。

## 目錄

	頁碼
安全注意事項 .....	TC3
重要資訊 .....	TC6
各部件名稱及操作說明 .....	TC7
使用方法 .....	TC9
清潔方法 .....	TC14
疑難排解 .....	TC17
替換零件 .....	TC18
規格 .....	TC19

## 安全注意事項

請務必遵守。

為了避免危害使用者以及給他人造成財產損失，特此說明下列務必遵守的事項。

■因錯誤操作產生的危害以及損失的程度，予以區分說明。



**警告：** 有可能導致重傷或死亡的潛在危險。



**注意：** 有可能導致輕傷或財物損壞的潛在危險。

■針對務必需要遵守的事項，用以下符號予以區分說明。



此符號表示必須避免的行為。



此符號表示必須遵從的行為。



**警告**

為避免發生觸電、短路引起的火災、灼傷、燙傷或其他人身傷害的危險。



- 絕對不可自行分解、修理或改造本產品。

→ 請至購買點或 Panasonic 服務中心諮詢維修事宜。

- 請勿損壞電源線或電源插頭。

嚴禁執行下列動作：

損傷、加工或將其放置在發熱品附近、強行彎曲、扭轉、拉扯、從尖銳邊緣拉過電源線，在電源線上放置重物、捆紮電源線或以使用電源線提拉本產品。

- 電源線或電源插頭受損或插入插座鬆動時，切勿使用本產品。

→ 如電源線損壞，必須由製造商、製造商的服務代理商或有同等資格的人員更換，以避免產生危險。

- 切勿在雙手潮濕時，插入或拔下電源插頭。

- 切勿將本產品、電源線及電源插頭浸入水中或用水將其澆濕。

- 切勿讓電源線懸掛在桌子或工作檯邊緣，或者接觸灼熱表面。

- 請勿讓嬰孩和小童將包裝當作玩具（有可能造成窒息）。

- 切勿碰觸或將臉部靠近蒸氣出口處。

- 請勿讓孩童在無監護的情況下進行清潔和保養。

# 安全注意事項

請務必遵守。

## 警告



- 本產品不打算由兒童或有體力、感官或精神缺陷的人或缺乏經驗知識的人使用，除非有負責他們安全的人對他們進行產品使用有關的監督和指導。  
請監督兒童，確保不讓他們把本產品當作玩具。
- 若本產品發生運作異常時，請立即停止使用本產品，並拔下電源插頭。  
異常或故障事例：
  - 電源插頭和電源線異常發熱。
  - 電源線損壞、無法通電。
  - 機身變形、有明顯可見的損壞或異常發熱。
  - 飄出異味。
  - 使用過程中有異常的聲響。
  - 發生其他異常或故障。→ 請立即拔掉電源插頭，並聯絡購買點或 Panasonic 服務中心諮詢維修事宜。
- 請務必確保本產品的標籤上指示的電壓與當地電源電壓一致。  
還應避免在同一電源插座中插入其它設備，以免電路過熱。但如果連接多個電源插頭，應確保總功率不超過電源插座的額定功率。
- 電源插頭須完全插入插座內。
- 定期清理電源插頭上的塵埃。  
→ 拔除電源插頭，以乾布擦拭。
- 盡可能不要使用排插，必要使用排插時，請選用大電流容量並附有過電流保護器的排插。

## 注意

為避免發生觸電、火災、出煙、灼傷、燙傷、人身傷害或財物損壞的危險。



- 本產品運作期間，切勿讓產品處於無人看管的狀態。
- 請勿將本產品用於本說明書所示以外的其他用途。
- 切勿在接近牆壁、傢俬或封閉的空間（例如嵌入式櫥櫃）內使用本產品（可能導致染色或變形）。
- 請勿用潮濕的手觸摸本產品。

## 注意



- 不得在以下地方使用本產品。
  - 不平穩的表面、地毯、非防水表面或鋪有桌布等地方。
  - 可能被水噴到或靠近熱源的地方。
  - 接近任何開放式水源等地方。
  - 靠近牆壁或傢俱。→ 請將本產品放置在平穩、乾燥、乾淨、平坦、耐熱的一般高度的工作檯上。
- 使用中請勿將咖啡機放置於櫥櫃中。
- 使用中請勿觸碰、堵塞或蓋住蒸汽排氣口。
- 請勿使用外接定時器等。
  - 本產品不能在外接定時器或外接獨立遙控系統的方式下運行。
- 請勿在本產品頂部放置或在底部插入任何物品。
- 請勿將手伸進磨豆腔，避免造成割傷等意外發生。
- 切勿在使用本產品時或剛使用後觸碰灼熱表面，如保溫板、蒸汽排氣口周圍或咖啡壺表面，本產品在使用時容易變熱，使用期間表面溫度很高，待冷卻後再進行使用後的清潔。
  - 請特別小心使用後的餘熱。
- 請勿在本產品工作時，包括在預約模式下工作時打開任何部件。
- 請勿在咖啡壺、儲豆盒、水箱、滴漏蓋、咖啡籃及濾網未安裝好時使用本產品。請勿使用其他非本產品所配的咖啡壺。
- 進入保溫狀態時，水箱內請勿加水。
- 切勿以握住儲豆盒、濾網籃架或水箱的方式來移動本產品。
- 請勿在瀘滴咖啡過程中或剛瀘滴完時打開咖啡籃架。
- 咖啡壺還裝有熱咖啡時，請勿打開壺蓋。熱的液體可能會噴出或滴到手上，導致意外發生。
- 咖啡壺溫度尚高時，請勿將其放入水中或對其噴水或放置在潮濕有水的位置。
- 在更換配件或接觸運動部件前要關掉開關。
- 清潔時，請使用附帶的清潔刷。
- 不使用本產品時，在移動或清潔前，必須確保本產品已關閉電源，並已從插座中拔出電源插頭，再次使用前必須把本產品擦乾。
- 請先讓本產品冷卻後，再予以搬動、移動或清潔。
- 使用時，請小心不要踩踏電源線或被絆倒。



# 安全注意事項

請務必遵守。

## ⚠ 注意



- 拔出電源插頭時，務必拿住電源插頭，禁止用力拉電源線。
- 請確保每次使用後清潔本產品，尤其與食物接觸的表面。(第TC14-16頁“清潔方法”)
- 長期使用的本產品，應主動聯繫購買點或Panasonic 服務中心進行檢修及保養，以提高商品使用安全性。
- 本產品僅限於家庭使用。

## 重要資訊


- 請勿在室外使用本產品。
- 請勿將水以外的液體（如牛奶或熱開水）注入水箱。
- 請勿裝入咖啡豆以外的任何物品至磨豆腔處。
- 請勿將咖啡壺放在任何熱源上或是微波爐中。
- 水箱無水時，請勿煮製咖啡。
- 請勿使用於商業用途。



此符號表示：產品表面高溫，觸碰時請小心謹慎。

# 各部件名稱及操作說明

機身

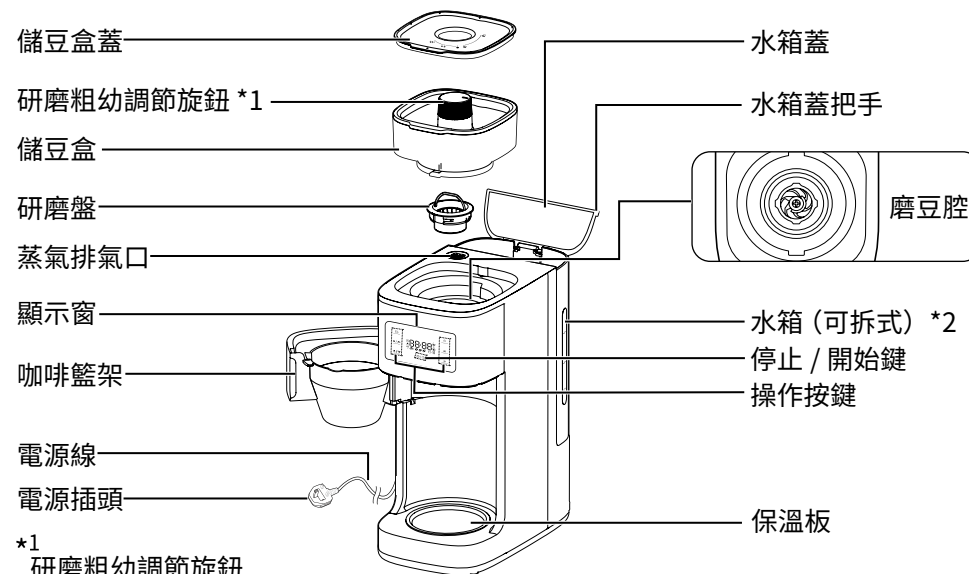


\*1 研磨粗幼調節旋鈕



\*2 水箱




## 配件

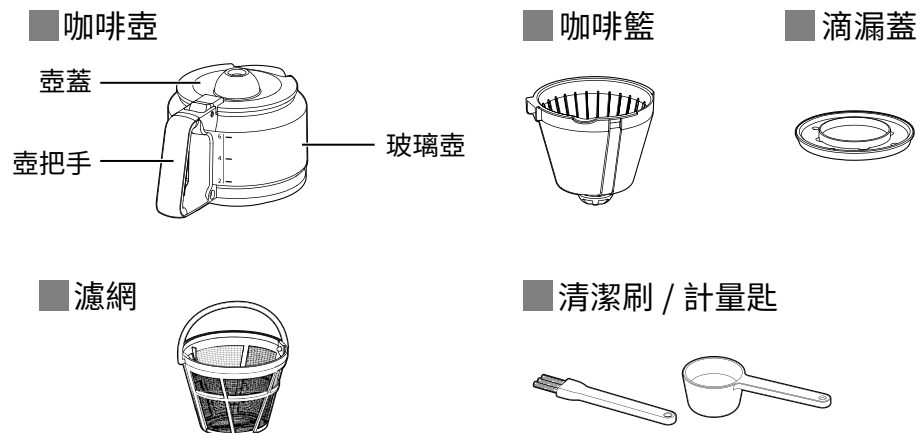

# 各部件名稱及操作說明



## 操作部

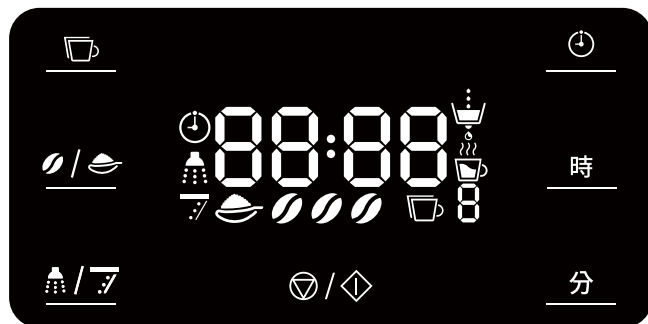


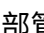
### 咖啡數量 (杯)

設定咖啡煮製杯數，可設定範圍 2、4、6 杯。


### 豆 / 粉模式 /

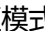可選擇咖啡豆模式  或咖啡粉模式 ，也可以進行咖啡豆濃度選擇 (第 TC12 頁)。

### 清潔模式 /

可以進行機體內部管路清潔  或是落粉口清潔  (第 TC16 頁)。

### 預約模式

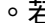可預約咖啡煮製的時間 (需先做當前時間設定 (第 TC13 頁) 再進行預約模式設定)。若不需要預約，再次按下  鍵，可退出預約模式。

### 時間設定 (時)



點按設定顯示窗上的當前時間 / 預約模式的小時，長按快進。

### 時間設定 (分)

點按設定顯示窗上的當前時間 / 預約模式的分鐘，長按快進。

### 停止 / 啟動鍵 /

停止：相關動作取消。




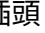
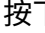

啟動：運轉中  閃爍 (管路清潔、落粉口清潔運轉中  不顯示)。

#### 注意

- 拔出電源插頭時，顯示窗熄滅。

## 使用前的準備工作

首次使用本產品或長時間未使用時，請先取下包裝材料並依照以下步驟：

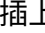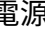
1. 清洗所有可拆卸部件並擦拭乾淨。
2. 裝妥咖啡壺、咖啡籃、濾網、儲豆盒 (請勿放入咖啡粉)。
3. 打開水箱蓋，將水注入水箱中，直到刻度 4 的位置並蓋上水箱蓋。
4. 插上電源插頭，按下  /  鍵，顯示窗亮  並閃爍，按下  /  鍵， 長亮，即開始清洗；清洗完成 " 嗶 "8 聲。
5. 清洗完成後，拔掉電源插頭並將咖啡壺中的熱水倒出。

### < 溫馨提示 >

所有咖啡機出廠前均經過試機測試，儘管已對其進行深度清潔，但咖啡機中可能還會有少許咖啡粉殘留，我們保證咖啡機是全新，請放心使用。


## 使用方法

### 1 請將咖啡籃、濾網及滴漏蓋依序放入咖啡籃架中。

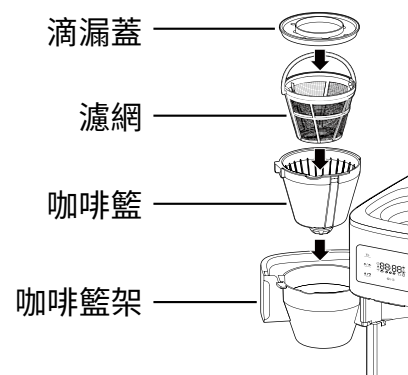

#### 注意


- 將咖啡籃架與咖啡籃的卡扣對齊。

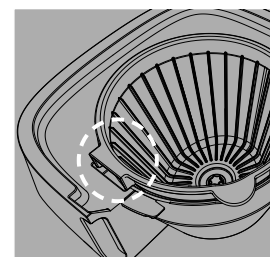

### 2 將咖啡籃架依照圖示中的方向蓋好，您會聽到"咔嚓"聲。

#### 注意


請確保完全蓋上防止液體流出，導致桌面髒污或燙傷。

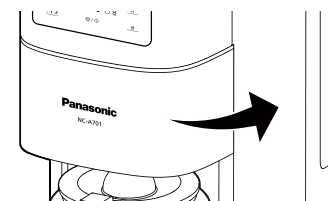



# 使用方法

## 3 將儲豆盒確實安裝。

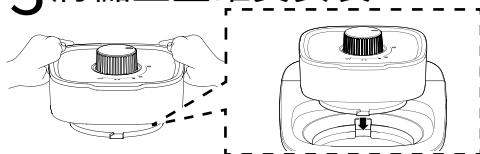

### 選擇咖啡粉模式時



將咖啡粉適量加入放進咖啡籃架濾網中。

**注意** 放好咖啡粉後，請務必蓋好咖啡籃架，以防工作時液體流出。

- 將儲豆盒蓋安裝於儲豆盒上，粗細調節旋鈕調節至 的位置，將儲豆盒凹槽部分對準機身頂部凸起位置按壓至穩固。
- 選擇咖啡豆模式時，打開儲豆盒蓋將適量的咖啡豆放入儲豆盒中，然後蓋上儲豆盒蓋。
- 當儲豆盒內有咖啡豆未使用完取出儲豆盒時，研磨盤上會有殘留咖啡豆，需要將殘留咖啡豆清理完後再放入儲豆盒。不然安裝儲豆盒時可能會將咖啡豆壓碎掉入研磨盤縫隙中。
- 安裝儲豆盒前，請確認研磨盤是否確實安裝。

 

### 咖啡豆、咖啡粉用量參考表

(一杯約120 ml，可依據個人喜好，自行調整咖啡豆與粉量)。



濾滴杯數	咖啡豆量平勺 (約)	咖啡粉量平勺 (約)
2杯	2.5(19 g)	2.5
4杯	3.5(30 g)	4
6杯	5.5(45 g)	6

### 注意

- 研磨盤的拆卸方式 (研磨盤拆卸前，請先將儲豆盒拆下)。
- 拆下研磨盤前，請先將殘豆使用完畢，否則提起時殘豆會撒出。

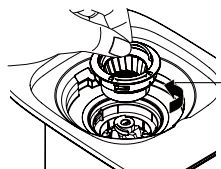

< 拆卸 >

 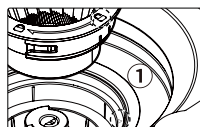

< 組裝 >

### < 拆卸 >

- 握住研磨盤把手，朝研磨盤上的 方向旋轉，將研磨盤從磨豆腔內取出。

### < 組裝 >

- 握住研磨盤把手，將研磨盤上的 位置與磨豆腔上 的位置對齊，將研磨盤組裝到磨豆腔內，朝着 方向順時針旋轉研磨盤直到聽到咔嚓聲。

## 4 將咖啡壺妥善組裝在保溫板上。


**注意** 若未正確放置或無放置則可能導致液體直接滴落至保溫板導致髒污或燙傷。

### < 組裝 >

- 朝箭頭①方向放入咖啡壺，確保咖啡壺與保溫板凹處對齊放入。


### < 拆卸 >

- 朝箭頭②方向拉出，取出咖啡壺。

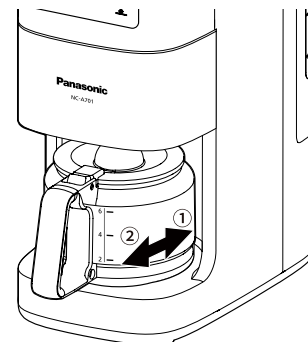

## 5 水箱加入所需煮製咖啡杯數的對應刻度水量，然後將水箱蓋蓋好。

- 水箱刻度為 2、4、6，對應咖啡杯數為 2、4、6，請根據不同的需求選擇加水量。
- 可以直接往水箱裡面加水，也可以拆卸下來加水之後再組裝。

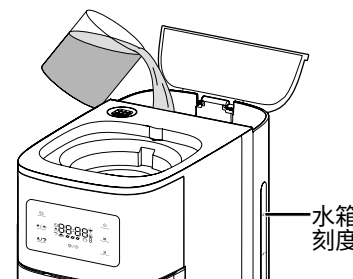

### 注意


- 加入水箱的水量為一次性煮製量，請務必按照需要煮製的杯數加水，以免影響咖啡口感。
- 注入的水量請勿超過水箱刻度 6，否則水可能會從水箱溢水口溢出 (水箱背面)。

### < 組裝 >

- 將水箱背面的凹槽部分與機身凸起部分對齊，朝箭頭②方向將其組裝在機身上。

### < 拆卸 >

- 握住水箱正面的凹處朝箭頭①方向拉出，將水箱從機身上拆卸下來。

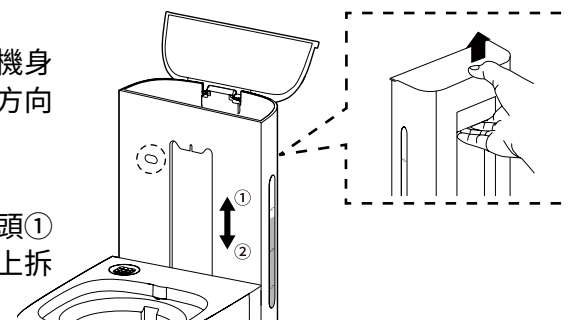

# 使用方法

## 6 請插上電源插頭。

溫馨提示：

如需使用預約功能，請先設定當前時間

方法如下：


長按 "時" 或 "分" 鍵，進入設定畫面，LCD 畫面對應的小時或分鐘的數字

閃爍，然後長按或點案進行時間調整即可；

設定完成後，閃爍約 4 秒退出設定畫面。

如無操作，閃爍約 8 秒退出設定畫面。

## 7 功能設定-豆/粉模式。

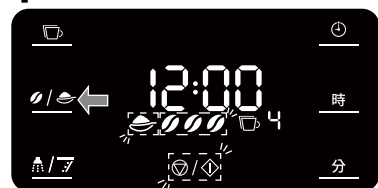

咖啡豆模式

按下 / 鍵，LCD上顯示 即選擇咖啡豆模式。

咖啡豆圖示越多表示咖啡濃度越高。

———— 低濃度

———— 中濃度

———— 高濃度


咖啡粉模式

按下 / 鍵，選擇咖啡粉模式。


LCD上顯示 即為選擇咖啡粉模式，咖啡粉模式無法選擇咖啡杯數，且無需設定研磨粗幼。

## 8 設定研磨粗幼（僅限咖啡豆模式可設定）。

- 確認粗幼調節旋鈕旋至鎖定位位置後，將粗幼調節旋鈕旋至研磨檔位範圍（否則無法啟動本產品）。

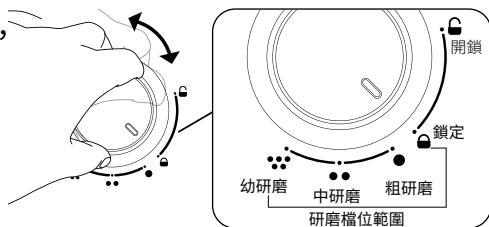


## 9 功能設定-咖啡杯數（僅限咖啡豆模式可設定）。

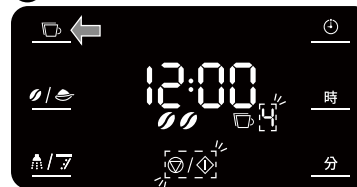

- 按下 鍵，選擇所需濾滴咖啡的杯數。

## 10 功能設定-預約模式（預約開始煮製的時間，若無需預約則可省略本步驟）。

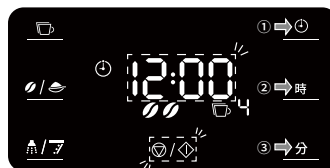

預約設定步驟


- ① 按下 鍵 進入預約模式。LCD 畫面顯示 " "。
- ② 按壓 "時" 設定小時時間。
- ③ 按壓 "分" 設定分鐘時間。

溫馨提示：

若插上電源後未設定當前時間，請按下列步驟進行當前時間設定。

- ① 預約模式下，按下 " " 鍵一次取消預約，返回當前時間畫面。
  - ② 長按 "時" 或 "分" 鍵，進入當前時間設定畫面，LCD畫面對應的小時或分鐘的數字閃爍，然後長按或點按進行時間調整即可；設定完成後，閃爍約4 秒退出設定畫面。如無操作，閃爍約8秒退出設定畫面。
- 當重啟本產品（電源插頭拔出一段時間後重新插入）後時間會回歸預設值，每次開機後請重設成當前時間，預約模式會按照設定的當前時間進行運轉。

## 11 按下 / 鍵開始（進入濾滴咖啡程式）。

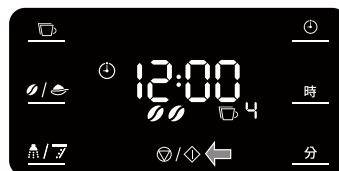


- 設定完成按下 / 鍵進入濾滴咖啡程式，顯示窗顯示 並閃爍，" 嗶 "4 聲後濾滴完成。
- 濾滴完成後，將自動進入保溫模式，顯示窗顯示 並閃爍，（保溫默認 40 分鐘，保溫結束時會 " 嗶 "8 聲）。如無需保溫，按下 / 鍵即可取消。

## 12 使用完畢後，請拔出插頭。

# 使用方法

## 注意事項

- 取出咖啡壺時，請握住咖啡壺的壺把手拉動且注意避免觸摸到玻璃部分。
- 倒出咖啡時，請勿觸摸咖啡壺的壺蓋活動部
- 保溫期間，請勿拔下電源插頭。
- 保溫期間，保溫板表面仍有高熱，請勿觸摸。

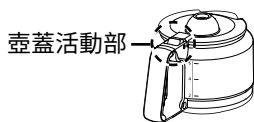

壺蓋活動部

## 若要丟棄咖啡粉

1. 拔下電源插頭。
2. 打開咖啡籃架，待咖啡粉冷卻後取出。
3. 將咖啡籃與濾網一起取出。
4. 倒出濾網中的咖啡粉。

## 若選擇了錯誤的模式

- 遵循「若要丟棄咖啡粉」的步驟。  
(若咖啡豆研磨未完成時切斷電源，建議您丟棄未完成研磨的咖啡豆。若繼續使用其進行研磨可能會造成研磨咖啡粉顆粒過細，會使咖啡過濃或咖啡粉溢出造成口感不佳)。

## 若長時間不使用

- 為防止殘留的咖啡豆因氧化變質，建議將儲豆盒的咖啡豆取出，並將磨豆腔的咖啡豆研磨完畢後進行清潔 (第 TC14-TC16 頁)。

## 注意


- 為了防止咖啡壺破損，請注意下列事項並安全使用咖啡壺：
  - 切勿將咖啡壺置於任何熱源上或放入微波爐中。
  - 請勿使用破裂或把手鬆動的咖啡壺。
  - 咖啡壺溫度尚高時，請勿將其放入水中、或對其噴水或放置在潮濕場所。

# 清潔方法

- 每次使用完畢時，請務必清潔本產品。

## 產品內部

- 每次使用後請按下 鍵，再按下 鍵，即可清洗本產品內部管路或是落粉口。

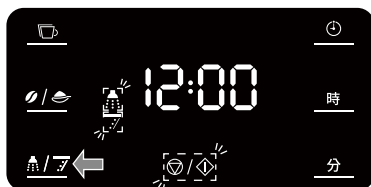


## 注意

- 此模式是兩個分別獨立的功能；清洗模式只會清洗管路落粉口需另外清潔 (第 TC16 頁)。

# 清潔方法

## 產品部件


- 清潔前，請確保電源插頭已從電源插座拔除，請確保本產品已完全冷卻。
- 以下部件可使用中性清潔劑清洗，但不可使用洗碗機清洗。
- 清洗後，請擦乾所有部件並放置陰涼處，待晾乾後再使用。

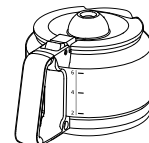


咖啡壺



研磨盤

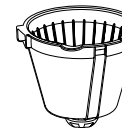


咖啡籃

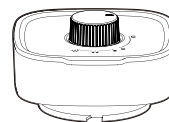

儲豆盒



 濾網



水箱

## 注意

- 請勿使用揮發油、稀釋劑、研磨粉、漂白劑、金屬刷或尼龍刷進行清潔。(其可能會損壞本產品表面)。
- 請勿使用尖銳物品(如牙籤或別針)來清潔本產品。
- 請小心使用咖啡壺，若咖啡壺損壞或破裂時，請勿使用。


## 產品外觀

- 請以擰乾的布擦拭本產品表面。
- 為避免機身、保溫板、儲豆盒蓋和水箱受損，請勿用硬質物品敲打或用金屬刷擦拭。



## 磨豆腔



- 請先拆下研磨盤 (第 TC10 頁)，再使用清潔刷清潔，且以擰乾的布擦拭。  
(請小心研磨刀片，以防受傷)

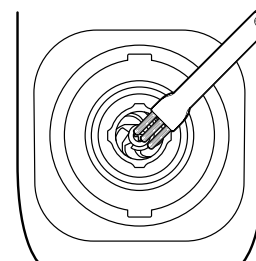

# 清潔方法

## 管路清潔


1. 將咖啡籃、咖啡壺及儲豆盒等配件確實安裝（請勿放入咖啡粉或咖啡豆）。
2. 將水注入水箱中，直到刻度 4 的位置。
3. 將 20 g 的檸檬酸倒入水箱中，並用海綿清潔刷（顧客自備）攪拌。
4. 蓋上水箱蓋並靜置 30 分鐘。
5. 插上電源插頭後，按下 / 鍵，選擇機體內部管路清潔模式，顯示窗亮 後，按下 / 鍵，開始清洗。

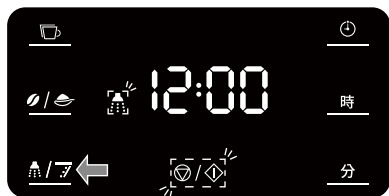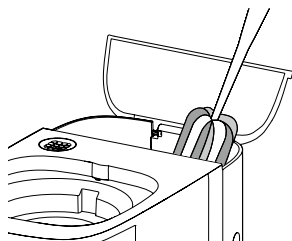


6. " 嗶 " 8 聲後，內部管路清洗完畢。
7. 使用後，建議可用清水重複 2-6 步驟去除檸檬酸的氣味。

## 落粉口清潔

1. 按下 / 鍵，選擇落粉口清潔模式，當顯示窗 亮後，按下 / 鍵。

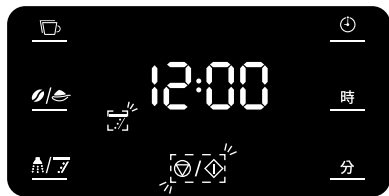

2. " 嗶 " 聲後，落粉口自動開啟，開啟時會有咖啡粉掉落，請注意。
3. 打開咖啡籃架。
4. 用清潔刷妥善清理落粉口，落粉口周圍的水滴與咖啡粉也請一併清潔。
5. 關閉咖啡籃架並按下 / 鍵，即可關閉落粉口。

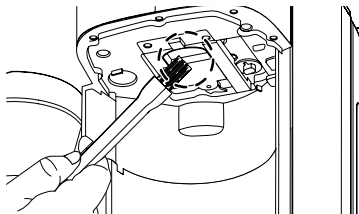

# 疑難排解

安排維修前，請先檢查下列要點。

## 問題

## 原因和解決方法

咖啡濾滴速度變慢  
或咖啡無法沖出

- 機體內部是否有水垢附著？  
→使用 20 g 的檸檬酸進行管路清潔。(第 16 頁)

無法進行按鍵操作

- 電源插頭是否鬆脫？  
→確實插入電源插頭。

咖啡無法濾滴

- 水箱容器是否有注入水？  
→請在水箱容器中注入咖啡杯數所需份量的水。
- 咖啡籃是否有放入？  
→請將咖啡籃放入。
- 濾網是否有放入？  
→請將濾網放入。
- 咖啡壺是否正確安裝？  
→請將咖啡壺裝至正確位置。

咖啡粉從濾網濺出

- 裝入過多的咖啡粉。  
→使用配件的計量勺時，請勿超過 7 平勺的研磨咖啡粉。

咖啡從咖啡壺中  
溢出

- 水箱容器中注入過量的水。  
→注水時請勿超過刻度 6。

咖啡壺中出現咖  
啡渣

- 濾網破損。  
→更換濾網。

顯示窗出現 U11

- 儲豆盒未正確安裝。  
→請重新裝好儲豆盒。

顯示窗出現 U12

- 馬達堵轉。  
→請將電源插頭拔出並清潔磨豆腔。  
→若上述動作仍無法排除，請聯絡 Panasonic 直屬服務站。

顯示窗出現 U13

- 水箱未加水。  
→請加入適當的水量。

顯示窗出現 H04

- 落粉口可能殘留咖啡粉。  
→請將電源插頭拔出並清潔落粉口。(第 16 頁)  
→若上述動作仍無法排除，請聯絡 Panasonic 直屬服務站。

## 疑難排解

問題	原因和解決方法
咖啡口感太淡 / 太濃	<ul style="list-style-type: none"> <li>●儲豆盒是否正常進豆？               <ul style="list-style-type: none"> <li>→儲豆盒表面含有油脂，請將儲豆盒妥善清潔。</li> <li>→請使用器具將咖啡豆輕輕撥入磨豆腔。</li> </ul> </li> <li>●未參照建議杯數的水量進行煮製。               <ul style="list-style-type: none"> <li>→請參照杯數與相應的水量進行煮製。(第TC10頁)</li> </ul> </li> </ul>
磨豆腔未正常運轉或發出異常聲響(發出噠噠聲)。	<ul style="list-style-type: none"> <li>●磨豆腔內部有異物。               <ul style="list-style-type: none"> <li>→請先拆下磨豆腔的研磨盤(第TC10頁)，清除內部的異物後，重新安裝。</li> </ul> </li> </ul>

## 替換零件

若部件損壞，您可以從經銷商或 Panasonic 服務中心處購買。

零件名稱	咖啡壺
	咖啡籃
	濾網
	滴漏蓋
	儲豆盒蓋
	儲豆盒 (不含儲豆盒蓋)
	清潔刷
	計量勺

## 規格

電源	220 V ~ 50 Hz
功率	750 W
尺寸 (約)	長 28.4 x 寬 16.1x 高 42.0 (cm)
重量 (約)	4.3 kg
電源線長度 (約)	1.1 m

Memo

Memo