 




Panasonic®

Operating Instructions (Household use) Hair Dryer Model No. EH-NA0J

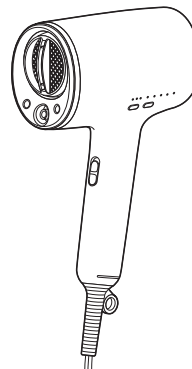

English.....	3
中文	23



BLACK



SIZE : 148x105 mm.



**Panasonic**[®]

English

Operating Instructions
(Household use) Hair Dryer
Model No. EH-NA0J

Contents

Safety precautions.....	4	Maintenance of the hair dryer.....	17
Parts identification	8	Troubleshooting	19
About nanoe™ MOISTURE+ and mineral	11	Specifications	21
How to use the hair dryer	12		

Thank you for purchasing this Panasonic product.

Before operating this unit, please read these instructions completely and save them for future use.



- nanoe™ is a trademark of Panasonic Holdings Corporation.
- A nanoe™ MOISTURE+ is a nano-sized ion particle coated with water particles.

Safety precautions

Make sure to follow these instructions.

- To prevent accidents, injuries or damage to property, please follow the instructions below.



WARNING

Indicates potential hazard that could result in serious injury or death.



CAUTION

Indicates potential hazard that could result in minor injury or property damage.

Some parts of the safety precaution illustrations differ from the actual product.



WARNING

► Plug and Cord

- Do not use with the cord bundled.
- Do not damage the cord or plug.
Do not deface, modify, forcefully bend or pull the cord or plug. Also, do not place anything heavy on, twist or pinch the cord.
- Do not use when the plug or cord is damaged or hot.
- Do not wrap the cord around the main body when storing.



- Do not store or use the cord in a twisted state.
- Disconnect the plug by holding onto it instead of pulling on the cord.
- Always turn off the power switch and disconnect the plug from the household outlet after use.
- Insert the plug into the household outlet directly:
Do not use with an extension cord.
- Fully insert the plug into a household outlet. Never use the appliance if the plug fits loosely.
- Always ensure the appliance is operated on an electric power source matched to the rated voltage indicated on the appliance.
- When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.



WARNING

- For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent (described in the warranty), or similarly qualified persons in order to avoid a hazard.

► In case of an abnormality or malfunction

- Immediately stop using and remove the plug if there is any abnormality or malfunction.

<Abnormality or malfunction cases>

- Air is not emitted
- Unit stops sporadically
- Interior becomes red hot and smoke is emitted
- The appliance is damaged or deformed, or strange noise is emitted.

Immediately request inspection or repair at an authorized service center.

► Maintenance

- When you see sparks around the air outlet while using the hot air setting, stop use and remove the lint on the air outlet and air inlet.

► This appliance

- Do not block or insert hair pins or other foreign objects into the air inlet, air outlet, or nanoe™ MOISTURE+ and mineral outlet.
- Do not leave the product with power switch on.
- Do not keep within the reach of infants or young children.
Do not let them use the appliance. MOISTURE+ and mineral outlet
- Do not use in proximity of flammable materials (such as alcohol, benzine, thinner, spray, hair care product, nail polish remover).
- Never modify, disassemble, or repair.
 - Doing so may cause ignition or injury due to abnormal operation.
Contact an authorized service center for repair.
- Do not handle any part of the plug or appliance with wet hands.
- This appliance is not designed for commercial use, and is not intended for use without appropriate maintenance.
- Do not immerse the appliance in water.
- Do not use or store the appliance near water.
- Do not use or store the appliance near bathtubs, showers, basins or other vessels containing water.



nanoe™

MOISTURE+ and mineral outlet



⚠ WARNING



 
This symbol with prohibition sign in red on the appliance means “Do not use this appliance near water”.

- If you feel pain or abnormality on your skin or other part of your body, immediately stop using this product.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

⚠ CAUTION

► To protect your hair

- Be sure to keep a distance of over 3 cm between the air outlet and your hair.
- Be sure to keep your hair at least 10 cm away from the air inlet to avoid hair getting tangled.

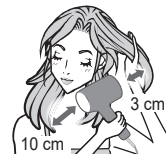

► Note the following precautions

- Do not drop or subject to shock.
- Do not use on children under 6 years old.
- Do not touch the air outlet, concentrator nozzle and diffuser which will become very hot.
- Do not use the appliance for any other purpose than drying hair.

 
► Notes

- This hair dryer is equipped with an automatic overheating protective device. If the hair dryer overheats, it will switch to Cold Air mode. Switch off the hair dryer and unplug it from the household outlet. Allow it to cool down for a few minutes before using it again. Check that no fluff, hair etc. is in the air inlets and outlets before switching it on again.
- You may notice a characteristic odor when using this hair dryer. This is the characteristic odor of nanoe™ MOISTURE+, mineral ions, or ozone, and is not harmful to the human body.



Parts identification

English

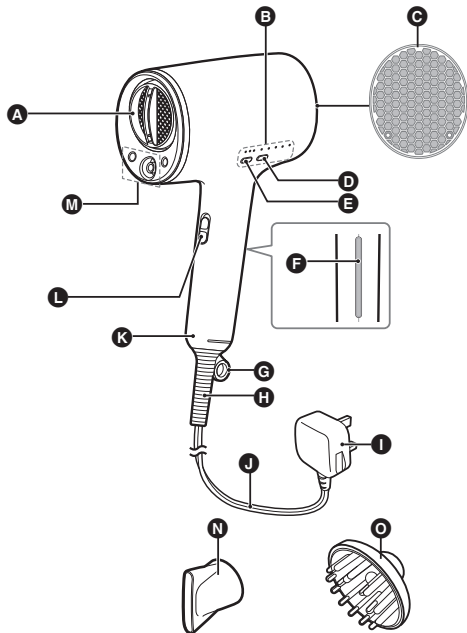

- A** Air outlet
Quick-dry nozzle
- B** Mode indicator
- C** Air inlet
- D** Mode switching
button
- E** Airflow switching
button
- F** Ion charge plus panel
- G** Ring for hanging

- H** Bushing
- I** Plug
- J** Cord
- K** Handle
- L** Power switch [I/O]
- M** nanoe™ MOISTURE+
and mineral outlet
- N** Concentrator nozzle
- O** Diffuser

How to attach



Place the nozzle to the air outlet and firmly insert it into position until locked.

(The illustrations above show the concentrator nozzle.)

How to remove



Twist and pull up the nozzle away from the air outlet.

► Concentrator nozzle

For precise styling and blow drying, attach the concentrator nozzle to the hair dryer.

 
Concentrator nozzle helps to focus and direct the airflow straight to hair for giving more control.

- Attaching the concentrator nozzle may reduce the performances under the Hot/Cold Alternating mode or the Hair Tip Care mode.

► Quick-dry nozzle

You can increase the drying rate by using the vertical strong and weak airflows to dry and loosen bundles of damp hair.

- Attaching the concentrator nozzle may reduce performance of the quick-dry nozzle.

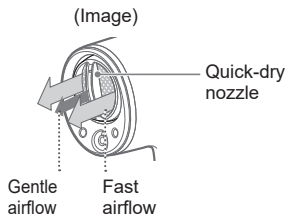

► Diffuser

 
For creating full-bodied hair with lots of volume and styling.

Control indicator and mode explanation

When the power switch is turned on, the dryer will start at the fast airflow setting / Hot Air mode.

- On all modes, an airflow enriched with nanoe™ MOISTURE+ and minerals will be provided.

Control Indicator

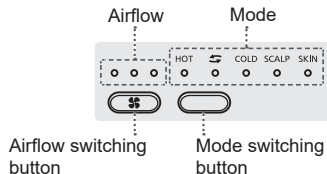

Airflow control

To change the airflow, press the airflow switching button.





English

Mode control

To change the mode, press the mode switching button.



► Intelligent sensing

Two sensors monitor environment conditions and your way of using the dryer, and automatically control the temperature to prevent extreme heat.
(The air and room temperature are constantly monitored.)

Mode explanation

Air temperature varies in each mode. Select your desired temperature mode.

Hot Air mode [HOT]

Air temperature is automatically controlled based on the actual room temperature. You can comfortably dry your hair even in the summer heat with automatically reduced air heat.

Hot/Cold Alternating mode [] < Airflow is [Fast] or [Medium] >

Automatically alternate between hot and cold air. The hot air lengthens unruly hair, while the cold air keeps your hair style in place. Smoothened hair surface reflects light, and give you a sleek, shiny finish.

10

Hair Tip Care mode [] < Airflow is [Gentle] >

Automatically alternate between hot and cold air with the most effective cycle and airflow for the hair ends finishing based on the ambient temperature constantly detected by the sensors. The gentle airflow does not tend to separate hair ends, so you can easily blow and style your hair ends.

Cold Air mode [COLD]

Finishing with cold air helps keep your hair style in place longer.

Scalp Care mode [SCALP]

Water remaining on your skin (scalp) may lead to uncomfortable feeling such as stickiness. Dry your hair comfortably with the airflow of the temperature around 60 °C, which is kind to your skin (scalp).

Skin Care mode [SKIN]

The airflow enriched with nanoe™ MOISTURE+ and minerals helps prevent dehydration and leaves your skin moisturized after cleansing.

- About 1 minute of face blowing will help keep your skin moisturized.
- When selecting [SKIN] at the [Fast] or [Medium] setting, the airflow will change to [Gentle].
To return to previous airflow, press the airflow switching button.
- When pressing the airflow switching button during the Skin Care mode, the airflow lamp will blink twice, while the airflow won't change.



About nanoe™ MOISTURE+ and mineral

nanoe™ MOISTURE+ and mineral effect

Controls waviness by balancing hair moisture content, making hair glossy and silky smooth to the touch. Makes hair strong against damage from brushing etc., and leads to beautiful hair.



What is nanoe™ MOISTURE+, mineral?

nanoe™ MOISTURE+

nanoe™ MOISTURE+ are "nanoe™" ion particles wrapped in water with increased moisture which makes them highly penetrative into hair.

nanoe™ MOISTURE+ are generated by collecting the available moisture in the air, so depending on the usage environment, nanoe™ MOISTURE+ may not be generated. In environments of low temperature and low humidity, moisture in the air becomes difficult to collect. When this occurs, negative ions are generated.

Mineral

 
"Mineral" means mineral ions generated by the discharge unit containing the zinc electrode.

"nanoe™ MOISTURE+" and "Mineral" are invisible to the human eye.

Ion charge plus

Hair is negatively charged when nanoe™ MOISTURE+ and mineral ions are continuously applied. Negatively charged hair repulses nanoe™ MOISTURE+ and mineral ions, making it hard for nanoe™ MOISTURE+ and mineral ions to be applied to the hair.

When this occurs, simply by holding the ion charge plus panel together with the handle, the negative charge accumulated on hair is released.

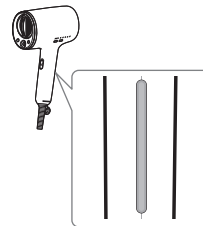



By doing this, nanoe™ MOISTURE+ and mineral ions can continue to penetrate the hair, supplying moisture and moisturizing the hair thoroughly right up to the tip.

 
How to use the hair dryer

Preparation

- 1 Use a towel to partially dry your hair.
- 2 Then brush or comb your fingers to remove tangles.
- 3 Plug into the household outlet.

Dry your hair

- 1 Turn the power switch on. Press the airflow switching button and select the [Fast] or [Medium] setting.



- Select [I] with the power switch.
- When turning the power switch on, it may pause a moment before the hot air will come out.

- 2 Direct warm air throughout your hair.

- Your hair will dry quickly if you direct the warm air towards the roots.



- 3 When the hair is about 90% dry, use the Hot/Cold Alternating mode to finish it well, making the hair shiny.

- Select [⇄] with the mode switching button.



In order to thoroughly apply hot and cold air, part your hair to the left and right to dry it.

1. Apply the Hot/Cold Alternating mode while running your fingers through your hair from the inside. (One side)





2. Apply the Hot/Cold Alternating mode while running your fingers through your hair from the top of your head to the tip of your hair. (One side)
3. Also perform step 1 and 2 on the opposite side.



If you are concerned about damaged ends, use Hair Tip Care mode.

1. Select [Gentle] with the airflow switching button and select [↔] with the mode switching button.
2. While combing your hair with your finger comb, blow-dry the inside and outside of your hair to the ends.



3. Perform Step 2 to the opposite side.

4 Turn the power switch off.

5 Remove the plug from the household outlet.

- When drying is complete, finish with a brush or your fingers.
- After the hair dryer has cooled down sufficiently, keep it in a place with low humidity.

Scalp Care mode

Do this after drying your hair by about 70% following procedure 2 on P.12

1 Select [SCALP] with the mode switching button.



2 Lift your hair by hand and dry your scalp.

- You may feel cold depending on the ambient temperature. In this case, move the appliance further away from your scalp on [HOT] and apply air.



- 3** Select [HOT] with the mode switching button and dry your hair overall.

 


Skin Care mode

Do this after drying your hair following procedure 3 on P.12

- 1** Select [SKIN] with the mode switching button.

• The airflow settings will automatically adjust to the [Gentle].



- 2** Place the air outlet at a distance of about 20 cm from your chin and apply air for about 1 minute, moving the appliance to the left and right.

- Use with your eyes closed.
- Perform skin care using lotion or milky lotion, in the same way and timing as normal.



To increase hair volume

Lift the base of your hair and apply the hot air from the bottom to the top.

For top



For inner hair





To decrease hair volume

Run your hand through your hair in the same direction as the hair flow, and apply hot air from the top to bottom.



To define the curls and waves with a diffuser

1. Gently place the tip of your hair on the diffuser.
2. Lift your curls up and down from your scalp whilst they are drying.
3. Repeat all sections.
4. Finally, adjust the overall finished look with your hands.



To increase hair volume with a diffuser

Attain volume by moving the diffuser in a circular motion over the scalp. Keep the diffuser held on specific areas of your head for a few seconds to attain volume as you wish. Repeat until your desired look is achieved.



To adjust hair flow with a diffuser

Comb the hair with a diffuser to dry the hair from the roots to the tips while pulling the ends of the hair.



To set your hair

1. Dampen the area of your hair you want to set with water etc.
2. Select [Gentle] with the airflow switching mode.
3. Select [HOT] with the mode switching button and apply hot air.





To make your hair setting last longer



Apply cold air to the area of your hair you want to set after applying hot air.

English

► Notes

- Be careful not to bump the air inlet such as on the corner of a desk.
- Do not look into the air outlet while in use.
- Wave perms may temporarily become easy to stretch when you apply nanoe™ MOISTURE+ and mineral ion to your hair, but return to their original state when you apply water or styling agents.
- Styling and treatment agents etc. can be used. However, if you use sticky substances such as oil, gel or wax, the intended effect of nanoe™ MOISTURE+ and mineral ion may become difficult to achieve.
- Since nanoe™ MOISTURE+ and mineral ions are generated, you might encounter the following.
 - Water droplets may be blown out of the nanoe™ MOISTURE+ and mineral outlet during use.
 - You may hear a noise from the nanoe™ MOISTURE+ and mineral outlet.
 - You may notice a characteristic smell during use.
- Results of nanoe™ MOISTURE+, mineral ions and each mode on hair vary according to the individual, and the following people may find it hard to experience an effect.

- People with curly hair
- People with strong wavy hair
- People with smooth hair that can be easily set
- People who have had a straightening perm within 3 to 4 months
- People with short hair

Curly hair	Wavy hair
	



 
Maintenance of the hair dryer

Always turn the power switch off and disconnect the plug from the household outlet. (Except when performing maintenance on the air outlet)

Maintaining the air outlet

Do this about once a month or more

1. Plug into the household outlet.
2. Turn the switch on and select [Gentle], [Medium] or [Fast] with the airflow switching button.
3. Select [COLD] with the mode switching button.
4. While scraping dust and hair jammed in the mesh with a cotton swab, blow them away with air.

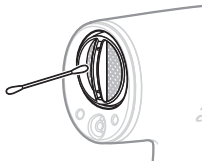

► Notes

- When performing maintenance, do not block the air inlet with your hand.
- Dust may fly out when you use the appliance for the first time after maintenance.
Use the appliance after confirming that dust no longer flies out.
(Do not look into the air outlet.)

Maintaining the air inlet

Do this about once a month or more

Wipe to clean lint, hair, or other matter from the air inlet with a tissue or toothbrush.
(If dust is attached to the inside, remove it with a vacuum cleaner.)



► Note

- Do not press or rub with your nails or sharp items.
Doing so may cause the air inlet to break.

 


Maintaining the nanoe™ MOISTURE+ and mineral outlet

At least once a month

In order to maintain the generation amount of nanoe™ MOISTURE+ and mineral outlet.

1. Prepare a commercially available new cotton swab (intended for babies) and moisten the tip of the cotton swab with water.
2. Pinch the tip of the cotton swab with clean hands and make the tip thin as shown in the figure to the right.



3. Gently insert the swab in the nanoe™ MOISTURE+ and mineral outlet until it stops (about 1 cm).
4. Turn the cotton swab 2-3 times carefully. When turned, you may sense the swab getting caught, but this is not an issue.



The tips of the needle-shaped part.

Do not put a cotton swab in any portion other than the part indicated by ○.

Maintaining the main body

Do this when dirty

To clean the hair dryer (when it is dirty), soak a cloth in the soapy water and squeeze it out firmly, then wipe with the cloth.



► Notes

- Do not use substances such as alcohol, nail polish remover or detergent (hand soap). Doing so may result in malfunction or part cracks or discoloration.
- Do not leave the appliance with hairdressing products or cosmetics on it. Doing so may cause deterioration of the plastic, leading to discoloration and cracks.





Troubleshooting

Problem	Possible cause	Action
The airflow cannot be adjusted despite pressing the airflow switching button, while the airflow lamp will turn on after blinking two times.	▶ Check that the Skin Care mode is selected.	▶ On the Skin Care mode, the airflow settings will automatically adjusted to [Gentle], and the airflow cannot be adjusted by pressing the airflow switching button. (See page 10.)
Sparks can be seen inside the product. - These sparks are caused by protective device (thermostat switch). They are not dangerous.	▶ Lint has accumulated on the air inlet or air outlet.	▶ Remove accumulated lint. (See page 17.)
Hot air repeatedly turns into cold air.	▶ Hair or something is blocking the air inlet.	▶ Do not block the air inlet.
The hot air is abnormally hot.	▶ The plug does not fit snugly in the outlet being used.	▶ Use an outlet in which the plug fits snugly.
The plug is abnormally hot.	▶ The plug is not firmly inserted into the outlet.	▶ Insert the plug firmly into the outlet.
Sparks are generated inside the nanoe™ MOISTURE+ and mineral outlet.	▶ The needle-shaped part located at the back of the nanoe™ MOISTURE+ and mineral outlet is dirty.	▶ Perform maintenance on the nanoe™ MOISTURE+ and mineral outlet. (See page 18.)
A noise (crackling) is heard inside the nanoe™ MOISTURE+ and mineral outlet.		
The temperature of the air is not hot.	▶ The intelligent sensing function automatically controls the temperature of the air to prevent extreme heat. (See page 10.)	



English

Problem	Possible cause	Action
There is a peculiar smell.	▶ This is the characteristic odor of nanoe™ MOISTURE+, mineral ions, or ozone, and is not harmful to the human body.	
Water droplets fly out from the nanoe™ MOISTURE+ and mineral outlet.	▶ Water droplets occasionally fly out from when generating nanoe™ MOISTURE+; this is not an abnormality.	

If the problems still cannot be solved, contact the store where you purchased the unit or a service center authorised by Panasonic for repair.

Specifications

Power source	Power consumption
220 V ~ 50-60 Hz	1 300 W
230 V ~ 50-60 Hz	1 450 W
240 V ~ 50-60 Hz	1 600 W

When using [HOT] [Fast] at maximum operating power.

Accessories	Concentrator nozzle, Diffuser
-------------	----------------------------------

This product is intended for household use only.





Panasonic®

使用說明書
(家用) 風筒
型號 EH-NA0J

目錄

安全須知.....	24	保養風筒.....	35
部件說明.....	27	疑難排解.....	37
關於 nanoe™ MOISTURE+ 和礦物負離子.....	29	規格.....	39
使用風筒的方法.....	30		

感謝您購買本 Panasonic 產品。
使用本產品前，請仔細閱讀此說明書，並保留此書以供日後參考。

文
冊

23



- nanoe™是 Panasonic Holdings Corporation 的商標。
- nanoe™ MOISTURE+ 是以水份子包裹的納米水離子。

安全須知

確保遵守下列說明。

- 為了避免意外、受傷或財產損失，請遵守下列說明。

⚠ 警告 代表潛在危害，可能導致嚴重傷害或死亡。

⚠ 注意 代表潛在危害，可能導致輕微受傷或財產損害。

安全注意事項圖示的某些部分與實際產品不同。

⚠ 警告

▶ 插頭和電源線

- 請勿使用捆綁的電源線。
- 請勿損壞電源線或插頭。
請勿損壞、改裝、用力彎曲或拉扯電源線或插頭。此外，請勿在電源線上放置任何重物、扭轉或夾住電源線。

- 插頭或電源線損壞或變熱時請勿使用。
- 存放時，請勿將電源線纏繞在機身上。



- 請勿在電源線扭曲狀態下存放或使用本產品。
- 拔除插頭時，請握住插頭，不要拉扯電源線。
- 使用後，請務必關閉電源開關並從家用插座拔除插頭。
- 請使用獨立的家用插座：請勿搭配延長電源線使用。
- 請將插頭完全插進家用插座。如果出現插頭鬆動的現象，請勿使用本電器。
- 請務必確保在符合本產品上指定的額定電壓的電源上操作本產品。
- 若在浴室中使用本產品，使用完畢後請拔下插頭，因為即使本產品電源已經關閉，它在接近水時仍然存在危險。
- 為了保護您的安全，建議您在浴室的供電電路中安裝一個額定漏電動作電流不超過 30 mA 的漏電保護開關（RCD）。請向安裝者諮詢意見。
- 如果本機的電源線已經損壞，務必立即停止使用，並送交 Panasonic 直屬服務站（在此保證書內說明）進行更換。





⚠ 警告

▶ 如果出現異常或故障

- 如果出現異常或故障，請立即停止使用並拔除插頭。
 - < 異常或故障情況 >
 - 無法送風
 - 本機偶爾停止
 - 內部變成火紅炙熱狀且冒煙
 - 電器已損壞或變形，或發出奇怪噪音。
- 請立即將產品帶往 Panasonic 直屬服務站，以要求檢查或維修。

▶ 保養

- 使用熱風設定時，如果您看到出風口處出現火花，請停止使用並清除出風口與入風口處的灰塵。

▶ 本產品

- 切勿堵塞或插入髮夾或其他異物到入風口、出風口、nanoe™ MOISTURE+ 和礦物負離子出風口。
- 當電源開關開啟時，請勿離開本產品。
- 請勿放在嬰兒或幼童容易拿取之處。
請勿讓兒童使用本產品。



nanoe™
MOISTURE+ 和礦
物負離子出風口

- 請勿在易燃物質（例如，酒精、揮發油、稀釋劑、噴霧、護髮產品、去光水）附近使用。

- 切勿改裝、拆卸或修理。
 - 否則可能會因異常操作而導致點火或受傷。
請聯絡 Panasonic 直屬服務站進行維修。
- 請勿在雙手潮濕的情況下處理插頭或電器的任何部份。
- 本產品並非為商業用途而設計，而且必須進行適當的保養。
- 請勿將本產品浸入水中。
- 請勿在靠近水的位置使用或存放本產品。
- 請勿在浴缸、蓮蓬頭、水盆或其他裝水的容器附近使用或存放本產品。



此設備上帶有禁止紅色標誌的符號表示“請勿在靠近水的地方使用本產品”。

 
- 若皮膚或身體其他部位感到疼痛或不適，請立即停止使用本產品。
- 本產品不宜供肢體、感官或精神上障礙、或缺乏經驗及知識等人士（包括兒童）使用，必須有監護人從旁監督，並指導使用本產品，且能承擔使用者安全的責任。



⚠ 注意

▶ 保護您的頭髮

- 請將您的頭髮與出風口之間保持超過 3 cm 的距離。
- 請確保頭髮距離入風口 10 cm，以避免頭髮被捲入。

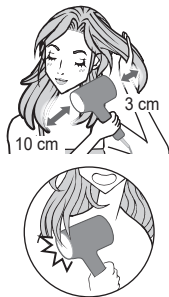

▶ 注意以下事項

- 請避免本產品掉落或受到撞擊。
- 請勿用於六歲以下的兒童。
- 請勿觸摸出風口、集風吹嘴及捲髮定型烘罩，這些部件可能會變得非常燙。
- 除了吹乾頭髮以外，請勿將本產品用於其他目的。

 
▶ 註

- 本產品配備一個自動過熱保護裝置。如果本產品過熱，將轉換到冷風模式。請關閉本產品，並從家用插座中拔除。讓本產品冷卻數分鐘後再使用。再次開啟本產品前，請檢查入風口與出風口內無毛絮、頭髮等。

- 使用本產品時可能會聞到一種特別的氣味。這種特別的氣味來自 nanoe™ MOISTURE+、礦物負離子或臭氧，對人體無害。



部件說明

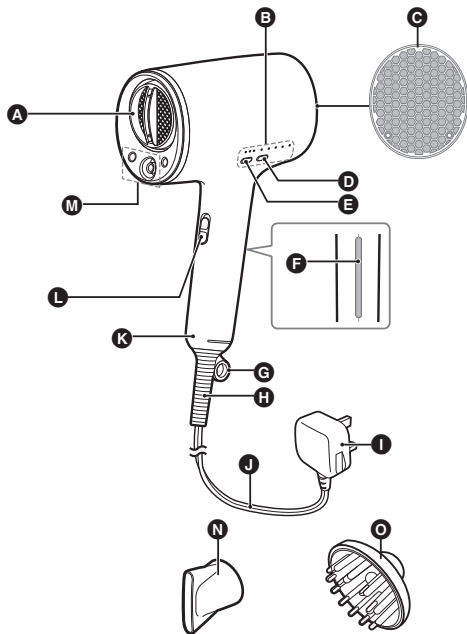

- A 出風口
速乾吹嘴
- B 模式指示燈
- C 入風口
- D 模式切換按鈕
- E 風量切換按鈕
- F 靜電抑制握把
- G 掛環
- H 絕緣套

安裝方法



將吹嘴置於出風口並牢牢地將其裝到位置上，直到固定。

(上方插圖顯示集風吹嘴。)

- I 插頭
- J 電源線
- K 把手
- L 電源開關 [I/O]
- M nanoe™
MOISTURE+ 和礦物
負離子出風口
- N 集風吹嘴
- O 捲髮定型烘罩

移除方法



轉動並將吹嘴拉離出風口。



► 集風吹嘴

 
為了精準造型和吹乾，將集風吹嘴安裝到風筒。集風吹嘴有助於將氣流集中並直接吹向頭髮，以便更加能夠控制。

- 若裝上集風吹嘴，可能降低冷熱交替模式或髮尾護理模式下的性能。

► 速乾吹嘴

您可以利用垂直的強弱氣流來吹乾和吹開潮濕的髮束，以增快吹乾速度。

- 裝上集風吹嘴可能降低速乾吹嘴的性能。

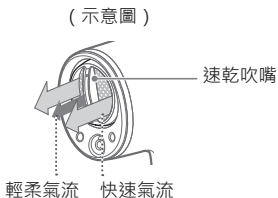

► 捲髮定型烘罩

讓您擁有豐盈有型的濃密秀髮。

控制指示燈和模式說明

 
當開啟電源開關時，風筒將以超強風設定 / 熱風模式啟動。

- 所有模式均提供飽和高滲透 nanoe™ MOISTURE+ 和礦物負離子的氣流。



28

控制指示燈

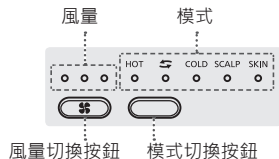

風量控制

若要變更風量，請按下風量切換按鈕。



模式控制

若要變更模式，請按下模式切換按鈕。



► 智能溫控

兩個感測器會監控環境狀況以及使用風筒的方式，並自動控制溫度以避免溫度過高。

(持續監控空氣以及房間溫度。)



模式說明

風溫在各個模式會有所不同。選擇您想要的溫度模式。

熱風模式 [HOT]

根據實際環境溫度自動調節出風溫度。即使在夏天熱浪下，也能自動降低風溫，舒適地吹乾頭髮。

冷熱交替模式 [] <風量為 [超強風] 或 [強風] >

自動在熱風與冷風之間交替。熱風能拉長雜亂的頭髮，而冷風能固定頭髮造型。柔順秀髮反射光芒，使其看起來光彩耀眼。

髮尾護理模式 [] <風量為 [柔風] >

根據感測器持續偵測環境溫度在熱風與冷風之間自動交替，以最有效的時間和氣流吹整髮尾。柔和的氣流不會使容易髮尾分開，因此您可以輕鬆吹乾髮尾並造型。

冷風模式 [COLD]

吹整時使用冷風能幫助頭髮造型定型更久。

頭皮護理模式 [SCALP]

殘留在皮膚（頭皮）上的水份可能導致如黏膩等不適感。以大約 60°C 左右的風溫舒適地吹乾頭髮，此溫度對肌膚（頭皮）來說很溫和。

美肌模式 [SKIN]

氣流包含高滲透 nanoe™ MOISTURE+ 和礦物負離子，能防止乾燥並在洗滌後使您的肌膚保持水份。

• 對著臉吹大約 1 分鐘將能使您的肌膚保持水份。

- 當在 [超強風] 或 [強風] 設定下選擇 [SKIN] 時，風量將會變更為 [柔風]。
若要回到前一風量，請按下風量切換按鈕。
- 在美肌模式時按下風量切換按鈕，風量燈將閃爍兩次而風量不會改變。

關於 nanoe™ MOISTURE+ 和礦物負離子

nanoe™ MOISTURE+ 和礦物負離子效果

透過平衡頭髮水份來控制捲曲度，使頭髮亮澤柔滑。使頭髮能夠抵抗梳理等造成的損傷，打造美麗秀髮。



什麼是 nanoe™ MOISTURE+、礦物負離子？

nanoe™ MOISTURE+

nanoe™ MOISTURE+ 是包裹在水中增加了水份的“nanoe™”水離子，能夠提升對頭髮的滲透性。



nanoe™ MOISTURE+ 的產生源自於空氣中的水份，因此，視使用時所處的環境而定，不一定會產生 nanoe™ MOISTURE+。在低溫和低濕的環境，難以從空氣中收集水份。發生此現象時，會產生負離子。

礦物負離子

 
「礦物負離子」是指由含有鋅電極的放電裝置產生的礦物質離子。

人眼看不到「nanoe™ MOISTURE+」和「礦物負離子」。

靜電抑制握把

持續使用 nanoe™ MOISTURE+ 和礦物負離子時，頭髮將帶負電荷。負電荷頭髮與 nanoe™ MOISTURE+ 和礦物負離子相互排斥，使 nanoe™ MOISTURE+ 和礦物負離子難以滲入頭髮。發生此情況時，只要將靜電抑制握把與把手一起握緊，頭髮上所累積的負電荷就會被釋放。

因此，nanoe™ MOISTURE+ 和礦物負離子能持續滲入頭髮，為頭髮補充水份，使頭髮得以徹底滋潤，而且直達髮尾。

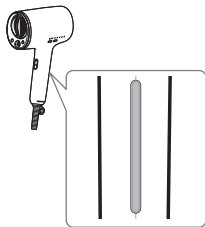

30

 
使用風筒的方法

準備

- 1 使用毛巾將頭髮大致擦乾。
- 2 稍微撥散頭髮以避免糾結。
- 3 插入家用插座。

吹乾頭髮

- 1 開啟電源。
按下風量切換按鈕並選擇 [超強風] 或 [強風] 設定。



- 使用電源開關選擇 [I]。
- 打開電源開關時，會先停頓一小段時間才吹出熱風。





2 對您的頭髮直接吹出暖風。

- 如果您將暖風直接對準髮根，您的頭髮將較快吹乾。



3 當頭髮吹乾約 90% 後，使用冷熱交替模式完全吹乾，可使頭髮富有光澤。

- 使用模式切換按鈕選擇 [↔]。



為了讓熱、冷風徹底吹乾頭髮，請將頭髮分成左、右兩邊吹乾。

1. 一邊使用冷熱交替模式，一邊用手指從內側撥動頭髮。（一側）



2. 一邊使用冷熱交替模式，一邊用手指從頭頂往髮尾撥動頭髮。（一側）
3. 也在另一側進行步驟 1 和 2。



如果您擔心受損髮尾，請使用髮尾護理模式。

1. 選擇風量切換按鈕的 [柔風] 並選擇模式切換按鈕的 [↔]。



2. 用指梳對頭髮進行梳理，吹乾頭髮內側和外側，直至髮尾。



3. 對另一側頭髮執行步驟 2。

4 關閉電源。



5 從家用插座拔除插頭。

- 頭髮吹乾後，請用梳子或手指梳理頭髮。
- 當風筒已經完全冷卻後，請放置在濕度較低的地方。

頭皮護理模式

在按照第 31 頁中的步驟 2 將吹乾頭髮 70% 後進行。

1 使用模式切換按鈕選擇 [SCALP]。



2 用手撩起頭髮，將頭皮吹乾。

- 根據環境溫度不同，您可能會覺得冷。在這種情況下，請將本產品移到離頭皮較遠處，並使用 [HOT] 模式吹出空氣。

3 使用模式切換按鈕選擇 [HOT]，並將頭髮全部吹乾。

 


美肌模式

在按照第 31 頁中步驟 3 吹乾頭髮後進行。

1 選擇模式切換按鈕的 [SKIN]。

- 風量設定會自動調整為 [柔風]。



2 將出風口放在離下巴約 20 cm 的距離，左右移動本產品吹出空氣約 1 分鐘。

- 使用時請閉上眼睛。
- 按照與平常一樣的方式和時間，使用化妝水或乳液進行護膚。





增加髮根蓬鬆感

撩起頭髮底層，
用熱風從髮梢往
髮根吹。

頭頂部分



內側頭髮



增加頭髮服貼感

順著頭髮生長方向用手撥動頭髮，
從髮根往髮梢吹熱風。



使用捲髮定型烘罩確立頭髮的捲度

1. 輕柔地將髮尾置於捲髮定型烘罩上。
2. 吹頭髮時，從頭皮提起頭髮並上下撩動。

3. 在各個部分重複此步驟。
4. 最後，以您的雙手調整整體的造型。



使用捲髮定型烘罩增加頭髮豐厚度

讓捲髮定型烘罩在頭皮周圍以畫圈
的方式移動以增加豐厚度。如果需
要的話，可以在特定地方停留幾秒
以增加豐厚度。持續這項步驟，直
到完成您滿意的造型。



使用捲髮定型烘罩調整髮流

使用捲髮定型烘罩梳頭，並從髮根往髮
尾吹乾，同時拉動髮尾。



中文



整理頭髮

1. 用水或其他產品沾濕想要整理的頭髮區域。
2. 選擇風量切換模式的 [柔風] 。
3. 使用模式切換按鈕選擇 [HOT] ，吹熱風。



 
讓髮型更持久

吹完熱風之後，在想要加強整理的頭髮區域吹冷風。

► 註

- 請小心不要讓入風口碰撞到桌角等尖銳處。
- 使用時，請勿直視出風口。
- 使用 nanoe™ MOISTURE+ 和礦物負離子吹髮時，波浪捲髮型可能會暫時變直，但用水沾濕或使用造型劑時，頭髮就會恢復原來的狀態。
- 造型劑和護髮劑等產品均可使用。
但若使用髮油、凝膠或髮蠟等黏性物質，可能不易達到 nanoe™ MOISTURE+ 和礦物負離子的預期效果。
- 由於風筒會產生 nanoe™ MOISTURE+ 和礦物負離子，因此您可能會遭遇以下情形。
 - 使用期間，nanoe™ MOISTURE+ 和礦物負離子出風口可能會吹出水滴。
 - 您可能會從 nanoe™ MOISTURE+ 和礦物負離子出風口聽到噪音。
 - 使用期間，您可能會聞到一種特殊的味道。
- nanoe™ MOISTURE+、礦物質離子以及各個模式對頭髮的影響會根據不同人而有所差異，且下列人士可能會難以體驗到效果。

- 小捲髮者
- 大波浪捲髮者
- 擁有容易造型的平順頭髮者
- 3 至 4 個月內曾將頭髮燙直者
- 短髮者

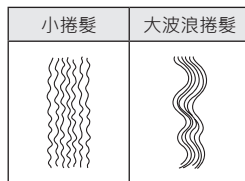




保養風筒

請務必關閉電源開關並從家用插座拔除插頭。(對出風口進行保養時除外)

出風口的保養

一個月進行此步驟一次或更多次

 1. 插入家用插座。
2. 打開電源並選擇風量切換按鈕的 [柔風]、[強風] 或 [超強風]。
3. 使用模式切換按鈕選擇 [COLD]。
4. 用棉花棒刮除灰塵和塞住網孔的頭髮時，一邊吹風使其脫落。

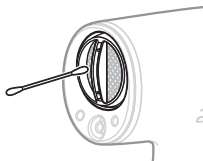

▶ 註

- 進行保養時，不要用手擋住入風口。
- 保養之後首次使用本產品時，灰塵可能會飛出。請確認灰塵不再飛出，再開始使用本產品。(請勿直視出風口。)

入風口的保養

一個月進行此步驟一次或更多次

請使用衛生紙或牙刷等物，將入風口的灰塵、頭髮或其他東西擦拭乾淨。(如果內部有灰塵附著，請用吸塵機將其移除。)



▶ 註

- 請勿用指甲或尖銳物品按壓或摩擦。否則可能會造成入風口損壞。

 


nanoe™ MOISTURE+ 和礦物負離子出風口的保養

至少一個月一次

這樣可維持 nanoe™ MOISTURE+ 和礦物負離子出風口的產生量。

1. 準備市售新棉花棒（嬰兒用的棉花棒），用水沾濕棉花棒前端。
2. 用乾淨的手捏住棉花棒前端，使前端變細，如右圖所示。
3. 將棉花棒輕輕插入 nanoe™ MOISTURE+ 和礦物負離子出風口，直至不能繼續插入（約 1 cm）。
4. 小心轉動棉花棒 2-3 次。轉動時，您可能會感覺棉花棒卡住，這是正常的。

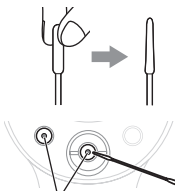

針狀部件的尖端。

請勿將棉花棒置於○所指部位以外的任何部分。

機身的保養

髒污時請進行此操作

要清潔風筒（髒時），請將軟布浸入肥皂水後充分擰乾，然後使用軟布擦拭。



▶ 註

- 請勿使用酒精、去光水或清潔劑（洗手液）等物質。這樣可能會導致產品故障、部件破裂或褪色。
- 請勿讓本產品殘留髮型用品或化妝品。這樣可能造成塑膠變質，導致褪色和破裂。





疑難排解

問題	可能的原因	動作
就算按下風量切換按鈕也無法調整風量，同時風量燈會在閃爍兩次後開啟。	▶ 檢查是否已選擇美肌模式。	▶ 在美肌模式下，風量設定會自動調整至 [柔風]，且按下風量切換按鈕也無法調整風量。 (請參閱第 29 頁。)
可能會在本產品內部看見火花。 - 這些火花是由保護裝置 (恆溫器開關) 所引起，沒有危險。	▶ 灰塵會黏附在入風口或出風口。	▶ 清除黏附的灰塵。 (請參閱第 35 頁。)
熱風反覆變成冷風。	▶ 頭髮或其他雜質堵塞入風口。	▶ 請勿堵塞入風口。
熱風異常高溫。	▶ 插頭與正在使用的插座不夠吻合。	▶ 請使用能穩固固定插頭的插座。
插頭異常高溫。	▶ 插頭未牢牢插入插座。	▶ 將插頭牢牢地插入插座。
在 nanoe™ MOISTURE+ 和礦物負離子出風口內部產生火花。	▶ nanoe™ MOISTURE+ 和礦物負離子出風口背面的針形部位髒污。	▶ 請進行 nanoe™ MOISTURE+ 和礦物負離子出風口保養。 (請參閱第 36 頁。)
nanoe™ MOISTURE+ 和礦物負離子出風口有異音 (爆裂聲)。		
風溫不高。	▶ 智能溫控功能會自動控制風溫避免溫度過高。(請參閱第 28 頁。)	
有異味。	▶ 這種特別的氣味來自 nanoe™ MOISTURE+、礦物負離子或臭氧，對人體無害。	



問題	可能的原因	動作
nanoe™ MOISTURE+ 和礦物負離子出風口飛出水滴。	▶ 產生 nanoe™ MOISTURE+ 時，偶爾會飛出水滴；這並不是異常。	

為安全起見，請定期檢查使用多年的電器產品。如果仍然無法解決問題，請與您購買本機的商店聯絡，或洽 Panasonic 直屬服務站進行維修。

母
X

規格

電源	消耗電量
220 V ~ 50-60 Hz	1 300 W
230 V ~ 50-60 Hz	1 450 W
240 V ~ 50-60 Hz	1 600 W

以最大操作功率使用 [HOT] [超強風] 時。

配件	集風吹嘴、捲髮定型烘罩
----	-------------

本產品只適合家居使用。

BLACK



SIZE : 148x105 mm.



Panasonic Corporation
<https://www.panasonic.com>
© Panasonic Corporation 2023

Ⓕ EN, HK

Printed in Thailand
SEHNA0J60503 A0923-0