

Operating Instructions  
(Household use)

## 使用説明書

(家用) 風筒  
مُنْجِلَّ كَهْرَبَاءُ

جهاز شفط

جاف

Pengering Rambut (Pemakaian Rumah Tangga)  
جاف (جاف في المنزل)  
Huong dan su dung Máy sấy tóc  
Petunjuk Pengering Rambut (Pemakaian Rumah Tangga)  
تبلیغات شرکت  
مخفف الماء (الماء)  
ذرف راه (آهان)  
ذرف راه (آهان)  
Model No.  
نوع الموديل  
Model Nomor  
Model No.  
نوع الموديل  
Model Nomor  
Model No.

EH-NE27  
Số mẫu máy  
Model Nomor  
Model No.

EH-ND37  
Model Nomor  
Model No.

شارة مدل  
شارة مدل  
شارة مدل

Shark for purchasing this Panasonic product.  
Before operating this unit, please read these instructions completely and save them for future use.

感谢您购买 Panasonic 产品。

使用本產品之前，請仔細閱讀本說明書，並妥善保存以供未來使用。

如果您遇到任何問題或故障，請立即停止使用並拔掉電源插頭。

請務必保持在適合本產品上指定的額定溫度的電源上操作本產品。

若在浴室中使用本產品，使用完畢後請拔下電源插頭。因為即使產品已經關掉，它在接近水時仍然存在危險。

為了保護您的安全，建議您在浴室的供電路中安裝一個額定漏電動作電流不超過 30 mA 的漏電保護開關 (RCD)。請諮詢安裝人員以獲得建議。

如果本產品已經報壞，務必立即停止使用，並送交 Panasonic 直屬服務站進行更換。

## English

## Safety precautions

Make sure to follow these instructions.

To prevent accidents, injuries or damage to property, please follow the instructions below.

**⚠️ WARNING** Indicates potential hazard that could result in serious injury or death.**⚠️ CAUTION** Indicates potential hazard that could result in minor injury or property damage.

Some parts of the safety precaution illustrations differ from the actual product.

## ⚠️ WARNING

- Do not use with the cord bundled.
- Do not damage the cord or plug.
- Do not deface, modify, forcefully bend or pull the cord or plug. Also, do not place anything heavy on, twist or pinch the cord.
- Do not wrap the cord tightly around the main body when storing.
- Do not store or use the cord in a twisted state.
- Disconnect the plug by holding onto it instead of pulling on the cord.
- Always turn off the power switch and disconnect the plug from the household outlet after use.
- Do not use with an extension cord.
- Fully insert the plug into a household outlet. Never use the appliance if the plug fits loosely.
- The voltage of the power source is indicated on the rated voltage indicated on the appliance.
- When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.
- For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent (described in the warranty), or similarly qualified persons in order to avoid a hazard.

## ▶ In case of an abnormality or malfunction

Immediately remove and replace the plug if there is any abnormality or malfunction.

&lt;Abnormality or malfunction cases&gt;

- Air is not emitted
- Unit stops sporadically
- Interior becomes red-hot and smoke is emitted

- The appliance is damaged or deformed, or strange noise is emitted.

- Immediately request inspection or repair at an authorized service center.

## ▶ Maintenance

- When you see sparks around the air outlet while using the hot air setting, stop using and remove the lint on the air outlet and air inlet.

## ▶ This appliance

- Do not block, or insert hair pins or other foreign objects into the air inlet, air outlet, or ion outlet.

- Do not leave the product with the power switch on.

- Do not leave children or young children.

- Do not let them use the appliance.

- Do not use in proximity of flammable materials (such as alcohol, benzine, thinner, spray, hair care product, nail polish remover).

- Never modify, disassemble, or repair.

- Doing so may cause ignition or injury due to abnormal operation.

Contact an authorized service center for repair.

## ▶ Note

- This appliance is not designed for commercial use, and is not intended for use without appropriate knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

## ⚠️ CAUTION

## ▶ To protect your hair

- Be sure to keep a distance of over 3 cm between the air outlet and your hair.

- Be sure to keep your hair at least 10 cm away from the air inlet to avoid hair getting tangled.

## ▶ Note the following precautions

- Do not drop or subject to shock.

- Do not use on children under 6 years old.

- Do not touch the air outlet and set nozzle which will become very hot.

- Do not use the appliance for any other purpose than drying hair.

- This hair dryer is equipped with an automatic overheating protective device. If the hair dryer overheats, it will switch to cool air mode. Switch off the hair dryer and unplug it from the household outlet. Allow it to cool down for a few minutes before using it again. Check that no fluff, hair, etc. is in the air inlets and outlets before switching it on again.

## Parts identification (Fig. 1)

Ⓐ Set Nozzle	Ⓑ Power switch
Ⓐ Air outlet	Turbo (Strong hot airflow)
Ⓐ Ion outlet	II Heat Protection (Strong warm airflow)
Ⓐ Cool-shot button	III Scalp Care (Gentle warm airflow)
Ⓑ Handle	IV Off
Ⓑ Ring for hanging	
Ⓑ Cord	
Ⓑ Plug	

The shape of the plug differs depending on the area.

(Some instructions only use the illustrations of EH-NE27 model to explain the product.)

## How to use

1 Before using the hair dryer, confirm that the power switch is at position "O", then plug into a household outlet and turn on the power switch.

2 Select the airflow with the power switch, and then dry your hair.

3 Set the power switch to position "O", and then remove the plug from the household outlet.

## ▶ Set nozzle

For easy styling and blow drying of hair, attach the set nozzle to the hair dryer.

- Set nozzle helps to direct the airflow onto a specific area of the hair.

## About Ion (EH-NE27 only)

Ions are particles that combine negatively charged oxygen and moisture in the air, and cannot be seen through the naked eye. (Ion generation method: High-voltage discharge)

## ▶ Notes

- You may notice a specific odor when using this hair dryer. This is not harmful to the human body.

- The effects of ion might not be felt by the following people:

People with crimped hair, strong curly hair, very smooth hair, short hair, or who have had a hair straightening perm in the last three or four months.

## About Heat Protection

This mode provides constant and warm temperature to protect hair from heat.

## About Scalp Care

This mode provides gentle warm air for scalp care blow.

## Maintenance

Always turn the power switch off and disconnect the plug from the household outlet. (Except when performing maintenance on the air outlet)

## Maintaining the air inlet

Clean the air inlet once a month or over.

- Clean lint, hair, or other matter from the air inlet with a toothbrush or a vacuum cleaner.

## Maintaining the air outlet

Clean the air outlet once a month.

Scrub to remove any dust, hair, etc. blocking the mesh.

- The hair dryer should be plugged into the household outlet only in case of maintenance for the air outlet.

- Select [Ⓐ], [Ⓑ] or [Ⅲ] with the power switch and hold down at cool-shot button for using cool air to blow away the dust, etc., as you scrub with the toothbrush.

- During maintenance, do not block the air inlet with your hands etc.

- Doing or after maintenance of the air outlet, dust, etc. may scatter. Ensure that the hair dryer does not blow out any dust from the air outlet before using. (Do not look into the air outlet.)

## Maintaining the ion outlet (EH-NE27 only)

Clean the ion outlet about once every 1 month.

This maintenance allows the hair dryer to sustain the generated level of ion over a long period.

- Use commercially available cotton swabs. (We recommend the thin cotton swabs made for babies.)

- Insert the cotton swab softly until it stops (approximately 10 mm), then rotate it softly 2 or 3 times.

## Maintaining the hair dryer

Clean the hair dryer when it gets dirty.

Clean the housing only with a soft cloth slightly dampened with tap water or soapy tap water.

- Do not use substances such as alcohol, nail polish remover or detergent (hand

Doing so may result in malfunction, cracks or discoloration.

- Do not leave the appliance with hairdressing products or cosmetics on it.

Doing so will cause deterioration of the plastic, leading to discoloration or cracks.

## Troubleshooting

Problem	Possible cause	Action
Sparks can be seen inside the product. (These sparks are caused by a protective device (thermostat switch). They are not dangerous.)	Lint has accumulated on the air inlet or air outlet. Hair or something is blocking the air inlet.	Remove accumulated lint. Do not block the air inlet.
The hot air repeatedly turns into cool air.		
The hot air is abnormally hot.	The connection to the household outlet is loose.	Use a household outlet that fits securely.
Sparks are generated inside the ion outlet. (EH-NE27 only)	The needle portion in the inner part of the ion outlet is dirty.	Perform maintenance of the ion outlet.

If the problems still cannot be solved, contact the store where you purchased the unit or a service center authorized by Panasonic for repair.

## Specifications

Power source	220 V~ 50 - 60 Hz	230 V~ 50 - 60 Hz	240 V~ 50 - 60 Hz

