


Electric Steam Iron Operating Instructions 蒸氣電熨斗 使用說明書

Model No. NI-L700SS

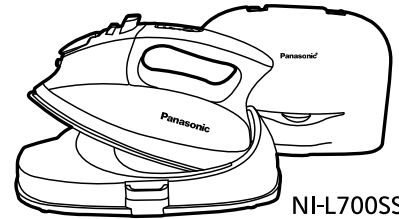

NI-L700SS

SPECIFICATIONS 規格

Model 型號	NI-L700SS	
Power Source 額定電源	110 V ~ 60 Hz	
Power Consumption 功率	1100 W	
Dimension 尺寸	300 mm × 180 mm × 220 mm	
Net Weight 重量	2.50 kg	

(For Taiwan) (適用於台灣)	製造商: 松下・萬寶(廣州)電熨斗有限公司	公司地址: 新北市中和區建六路 57 號
	生產國別: 中國	連絡地址: 新北市中和區員山路 579 號
	進口商: 台松電器販賣股份有限公司	電話: (02) 2223-5121

English

Safety Information

SAFE USE OF THE IRON	2
IMPORTANT SAFETY INSTRUCTIONS	2-3

Operation

COMPONENTS IDENTIFICATION	4
HOW TO REMOVE THE COVER CASE	5
HOW TO FILL WITH WATER	5
HOW TO SUPPLY ELECTRICITY	5
HOW TO CONTROL TEMPERATURE	6
HOW TO USE AS A STEAM IRON	6
HOW TO USE AS A DRY IRON	7
SPECIAL FUNCTIONS	7-8
NOTICE	9

Maintenance

HOW TO CARE FOR YOUR IRON	9
SPECIFICATIONS	16

Chinese

安全守則

電熨斗的安全使用	10
重要安全指示	10-11

操作

各部位的名稱功能	4
取出收藏盒	11
注水方法	12
怎麼提供電力	12
怎麼控制溫度	12
蒸氣熨斗的用法	13
乾式熨斗的用法	13
特別功能	13-15
注意事項	15

保養方法

電熨斗保管方法	15
規格	16

READ ALL INSTRUCTIONS CAREFULLY BEFORE USING THE IRON

使用前請仔細閱讀產品說明書

i8200W-6N70C

SAFE USE OF THE IRON

Your safety and the safety of others are very important

We have provided important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol. It is used to alert you to potential hazards that can kill or cause injury. The safety messages will follow the safety alert symbol and either the word "WARNING" or "CAUTION". These words mean:

! WARNING

You can be killed or seriously injured if you don't follow these instructions.

! CAUTION

You can be exposed to a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

The safety messages will tell you what the potential hazard is, how to avoid and reduce the chance of getting injured, and what can happen if the instructions are not followed.

IMPORTANT SAFETY INSTRUCTIONS

! WARNING

To reduce the risk of burns, electric shock, fire, or injury to persons:

When using your iron, basic safety precautions should always be followed, including the following:

1. To avoid a circuit overload, do not operate another high wattage appliance on the same circuit.
2. The input voltage should match the rated voltage marked on the iron.
3. Use the iron only for its intended purpose, for ironing fabrics on an ironing board. To protect against burns or injury to persons, do not iron or steam fabrics while being worn on the body.
4. Do not leave the iron unattended while it is connected to the mains.
5. This iron must be filled or emptied only when the power plug is disconnected.
6. Most ordinary tap water can be used with this iron. In extremely hard water areas, distilled and/or demineralized water should be used.
7. When leaving the room even for a short time, disconnect the power plug. Keep it away from children.

6. 防鈣化系統

水槽內裝有防鈣化盒，使積累於蒸發室內的水垢不斷地減少。
本系統能防止蒸氣口堵塞，使蒸氣功能使用得更長久。

電熨斗的保管方法

每次使用後

1. 將蒸氣按鈕按到乾式熨燙位置。
2. 按動“SET（設定）”按鈕，直到“OFF（關）”的燈點亮。
3. 拔出插頭。
4. 立即將水箱內水倒乾。切勿讓水殘留內部存放。
5. 將電源線放回收藏盒，並合上擋線板。
6. 垂直壓入直至聽見咔嚓聲。



熨斗的外表面

在拔出插頭，冷卻熨斗後，用濕布輕輕地擦幾下熨斗，必要時使用溫和的清潔劑。決不要使用烈性的清潔劑。

底板

用一塊濕布就可以輕易把底板表面的衣物燒焦物和其他殘留物清除。為了防止刮花底板表面，決不要使用金屬類清潔器具來清理底板和把熨斗平放在粗糙的表面上。如果在過高的溫度下熨燙合成纖維時，不僅衣物被弄壞，而且熨斗底板也會粘粘被熔化的衣物殘留物。要去除底板的殘留纖維物，最好的方法是先加熱底板，然後在一塊舊布上熨燙。



! 注意

請勿將熨斗清潔劑加進此熨斗裏，因它們會損壞熨斗的工作部件。


如果電源線損壞，請務必更換專用的電源線。此熨斗只能使用隨送的電源座供電。

注意事項

1. 拔插電源插頭或連接器時，請握住插頭或連接器，而不要抓住電線部位。
2. 當電源線插在電源座上時，不能強行蓋上收藏盒，否則電源座有掉下的危險。
3. 使用完畢，拔出插頭時，注意手不能碰到熨斗的底板。

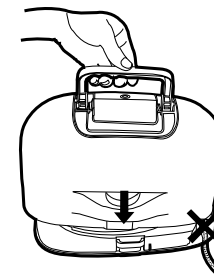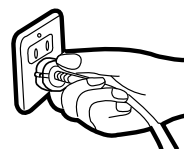

- 對熨斗進行預熱直到紅色指示燈一直亮着，一般約需1-2分鐘。
- 需要使用蒸氣噴射功能時，只要按動噴射蒸氣按鈕即可。
但每次使用熨斗時，要先按動數次噴射蒸氣按鈕。
- 使用蒸氣噴射後至少要等5秒鐘才能再使用，以免造成水斑。
如果需要，可使用一塊壓布。

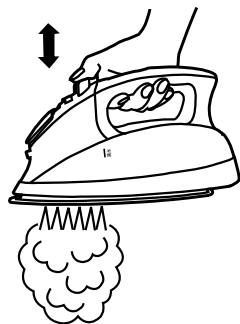


注意：

不要用熨斗觸及衣物，使熨斗輕微離開衣物以防燒焦和變形。
按動噴射蒸氣功能按鈕能提供噴射蒸氣。溫度必須在“HIGH (高)”水平。蒸氣功能使用後至少要等5秒鐘再使用以免滴水。

2. 垂直蒸氣

使用垂直蒸氣時，為了獲得更佳效果，可將衣物掛在衣架上，簾幕懸掛時也可使用垂直蒸氣。將熨斗離開身體遠一些，使其靠近衣物但不接觸它。熨燙多皺摺的衣物時，用空的手將衣物拉緊並每隔5秒按動垂直蒸氣按鈕。

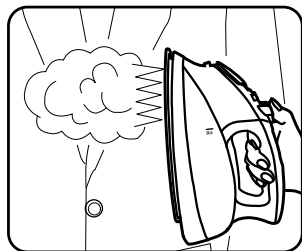

在使用蒸氣時，切勿用熨斗來熨燙穿在身上的衣物，也不可將熨斗指向任何人。

3. 防滴漏裝置

當底板表面溫度降低到250°F(121°C)時，熨斗蒸發室閥門會自動關閉，並使水不再流入。這樣，當熨斗冷卻時，可以防止未蒸發的熱水從底板溢流出來。使用此系統，必須等到蒸發室完全乾燥後再存放。

注意：當您聽到咔嚓聲時，並不表示有什麼故障。此裝置啟動時，總會聽到這種聲音的。

4. 電子自動關機功能


電子自動關機系統在自動關機前給你一個警告信號，熨斗放在電源座上超過10分鐘就會自動關機；自動關機前10秒鐘，“OFF (關)”指示燈開始快速閃爍。如果警告時熨斗不移動，熨斗底板的加熱器就會自動關閉。只有達到選定水平的溫度後，自動關機才會啟動。自動關機後再次加熱熨斗，只要按動“SET (設定)”按鈕選擇你想要的溫度水平。自動關機後“OFF (關)”燈（綠色）將會一直亮著。此燈意味熨斗依然插在插座上，電力正在供給電源座。

5. 噴霧

注意：使用噴霧裝置前，請先查看衣服標籤上有關熨衣的指示，因為有些衣物會因潮濕而造成斑點。

噴霧裝置對於除去頑強皺摺特別有效，在皺摺處要特別弄濕。無論蒸氣熨燙還是乾式熨燙均可使用噴霧裝置。

- 想要噴霧時，只需按動噴霧按鈕即可。如噴霧裝置不能即時產生噴霧，請繼續按動，直至噴霧放出為止。
- 要使噴霧細一些，請使勁按動按鈕。要使噴霧粗一些，請緩慢按動按鈕。快速按到底所得的效果最佳。

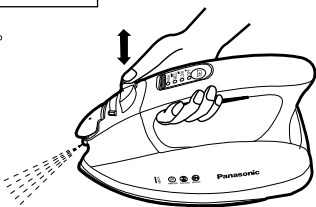

- To protect against the risk of electric shock, do not immerse the iron or cord in water or other liquids.
- If the supply cord or plug is damaged, it must be replaced by the service agent of the manufacture or similarly qualified person in order to avoid a hazard.
- Do not allow cord to touch hot surfaces. Allow the iron to cool completely before storing.
- Burns can occur from touching hot metal parts, hot water, or steam. Use caution when turning the steam iron upside down. Hot water may leak from the iron.
- The iron must be used and rested on a stable surface. When placing the iron on its stand, ensure that the surface on which the stand is placed is stable.
- The iron is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking.
- Do not use the appliance with the Cord entangled. The supply Cord might be damaged as a result.
- If one notice smoke or fire, stop using equipment immediately and detach the plug from the mains. This is to avoid fire or electrical shock, Thereafter contact the service agent or dealer immediately.
- This iron must be used with its Power Base, when not in use, always place iron securely into power base.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.



To reduce the risk of personal injury and damage to your iron:


- Never use steam iron cleaning products in the iron, as they may damage working parts of the iron.
- Do not use water additives or substitute water such as linen or scented water in the steam iron. They can stain fabrics.
- If the Steam/Dry Selector is not in the Dry position after using, remaining water will flow into the Soleplate and can result in burns at the next use of the iron.
- Don't use the Steam or Jet of Steam, while AC cord is unplugged, water will remain inside the Soleplate which will cause staining.
Please do not use Steam or Jet of Steam while Temperature Control Pad is set to "OFF".

SAVE THESE INSTRUCTIONS

For proper use of your iron, read remaining safety cautions and operation instructions.




 
COMPONENTS IDENTIFICATION

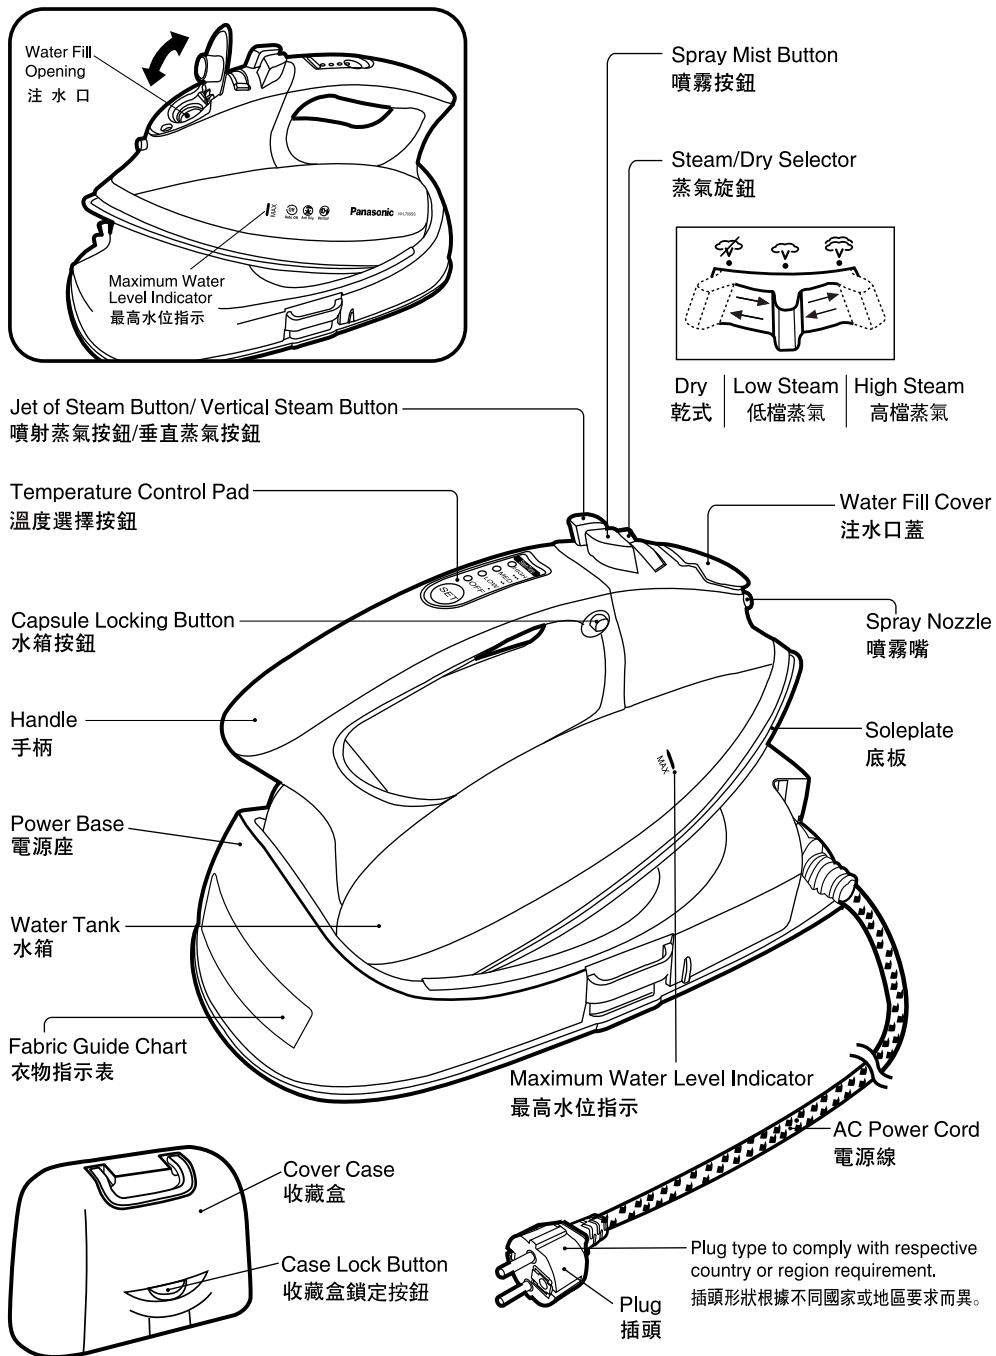
各部位的名稱功能



蒸氣熨斗的用法

1. 按照“注水方法”一項所述進行注水。
2. 將交流電插頭插入插座。
3. 將熨斗確實放入電源座，綠色的“OFF(關)”燈點亮。
注意：如果綠色燈不亮，再一次將熨斗放入電源座，否則溫度選擇按鈕不能使用。
4. 按動“SET(設定)”按鈕至相應的溫度直至的紅色燈開始閃爍。
參照“怎麼控制溫度”。

溫度水平	蒸氣旋鈕位置
LOW (低)	 低檔蒸氣
MED (中)	 低檔蒸氣
HIGH (高)	 高檔蒸氣
	 高檔蒸氣

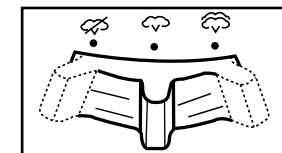

乾式 | 低檔蒸氣 | 高檔蒸氣

5. 當紅色指示燈一直亮着的時候，提示您所選的溫度已經達到。此時，使熨斗保持水平，撥到蒸氣旋鈕到相應的蒸氣位置，然後即可進行蒸氣熨燙。

注意：當底板溫度降低的時候，熨斗的防滴漏裝置就會啟動。同時，蒸氣就會停止。當您聽到咔嚓聲時，並不表示有什麼故障。這個時候，您必須把熨斗放回電源座重新加熱。

乾式熨斗的用法

1. 將蒸氣旋鈕撥動到乾式位置。
2. 將插頭插入插座。
3. 將熨斗確實放入電源座，綠色的“OFF(關)”燈點亮。
注意：如果綠色燈不亮，再一次將熨斗放入電源座，否則溫度選擇按鈕不能使用。
4. 按動“SET(設定)”按鈕直至你想要的溫度水平，直到紅色指示燈一直亮着，然後即可進行熨燙。

特別功能

1. 蒸氣的噴射功能


蒸氣裝置的噴射可以提供更多蒸氣使其滲透到衣物深處，有利於去除頑固皺摺。無論蒸氣熨燙還是乾式熨燙，都只在溫度選擇按鈕在“HIGH(高)”位置時，才能使用蒸氣裝置的噴射功能。(如果在較低值時使用，將會產生水滴，因為熨斗還不夠熱，不能使水變成蒸氣。)如果長時間沒有使用蒸氣噴射功能，在燙衣之前，要先清潔熨斗內部。同時，要遠離熨燙板和要熨燙的衣物，先試用幾次蒸氣噴射功能，以免在衣物上造成褐色斑點或水斑。

1. 按照“注水方法”所述步驟進行注水。
2. 將插頭插入插座。
3. 將熨斗確實放入電源座，綠色的“OFF(關)”燈點亮。
4. 按動“SET(設定)”按鈕至“HIGH(高)”位置，紅色燈開始閃爍。

注水方法


確認熨斗電源關閉，交流電源線從電源插座中拔出。裝入或取出水箱時，請確認蒸氣旋鈕已被撥到乾式熨燙位置 (☞)。

1. 按下水箱按鈕釋放水箱。
2. 打開注水口蓋。
3. 將水注入水箱直至“MAX”標線。不能溢出。垂直拿好水箱確認水位。
4. 關閉注水口蓋。
5. 重新裝入水箱時，將水箱放入，然後壓入定位直至聽見咔嚓聲。

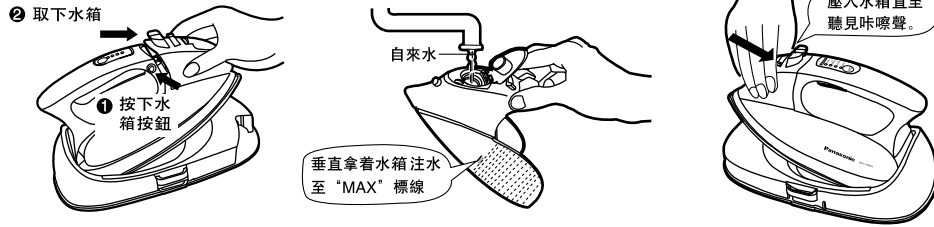

怎麼提供電力


1. 將電源線插入電源座。
2. 為提供電力，熨斗必須確實插入電源座；熨斗必須放在電源座上才能提供電力。當你在熨衣時想放下熨斗，只能將熨斗放回電源座。電源座將保持熨斗溫度所選水平。

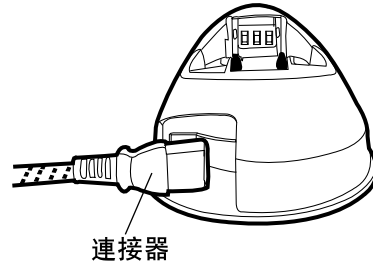

怎麼控制溫度

怎麼操作溫度選擇按鈕



1. 每次按動“SET(設定)”按鈕，溫度指示燈移到下一位置；較高的溫度。
2. 通過按動“SET(設定)”按鈕到所選擇的溫度，直到相鄰位置的燈點亮。

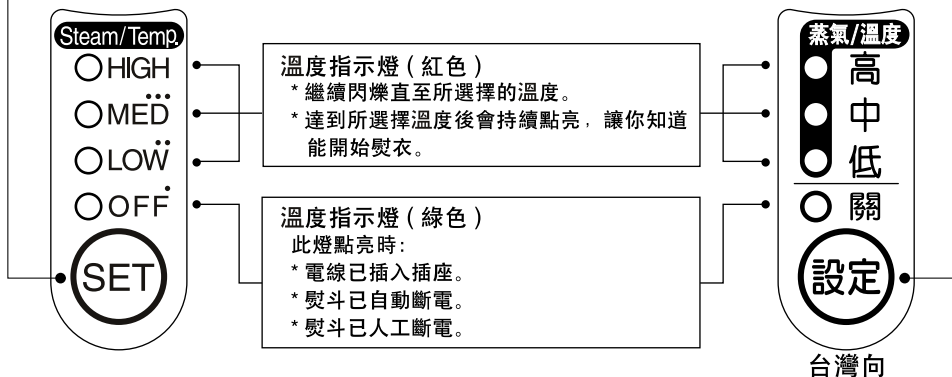

注意：當熨斗離開電源座，所有燈將熄滅。再次放回時燈會再次點亮。

HOW TO REMOVE THE COVER CASE

1. Place the unit on a firm and stable surface.
2. While pressing the Case Lock Button, lift the Cover Case to open.

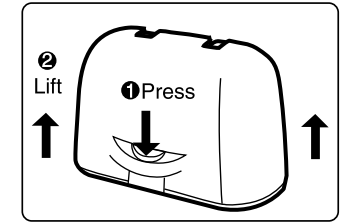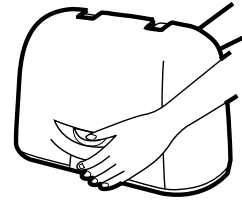

NOTE:


The Cover Case cannot be unlocked when you lift the Cover Case with the Power Base.

HOW TO FILL WITH WATER

Make sure the iron is turned off and the AC Power Cord is unplugged from the electrical outlet. The iron can be filled with the Water Tank in place or removed. Confirm that the Steam/Dry Selector is moved to the Dry ironing position when installing or removing the Tank.


1. Remove the Water Tank by pressing the Release Button.
2. Open the Water Fill Cover.
3. Fill the Water Tank up to the " MAX " line.

4. DO NOT OVERFILL. Check the water level with the Water Tank held in its vertical position.
4. Close the Water Fill Cover.
5. Re-install the Water Tank into the main unit. Push it until a click sound is heard.

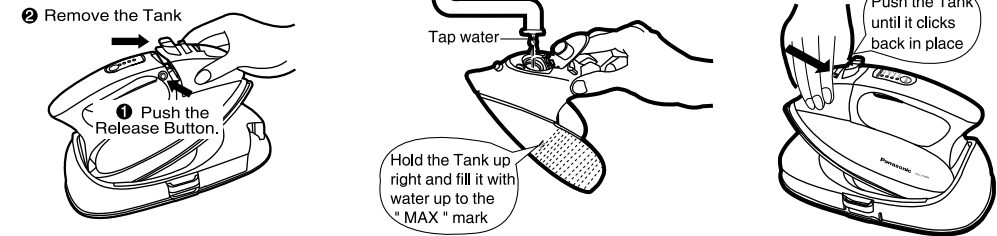

HOW TO SUPPLY ELECTRICITY


1. Insert AC Power Cord into Power Base.
2. The iron must be set securely on the Power Base in order to supply electricity. Electricity will only be provided while the iron is placed on the Power Base. If you desire to set the iron down while moving a garment on your ironing board, the iron must only be placed on the Power Base. The Power Base will keep the temperature of the iron at the selected level.

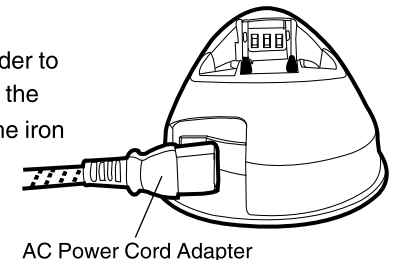

HOW TO CONTROL TEMPERATURE

→ How to operate the Temperature Control Pad("SET " Pad)

1. Every time you push the " SET " Pad, the Temperature Indicator Light moves to the next position, a higher temperature.
2. Desired temperature can be chosen by pushing the " SET " Pad until it lights at the appropriate position.

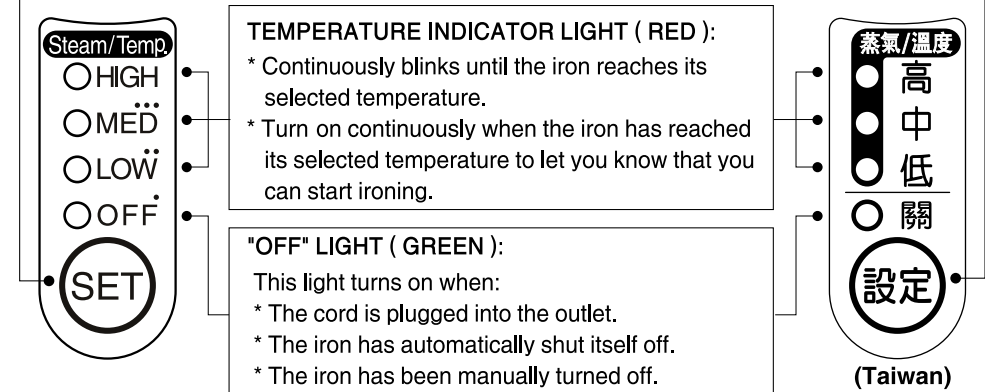

NOTE: All the lights will turn off once the iron leaves the Power Base. They will turn on again when the iron is re-placed.

HOW TO USE AS A STEAM IRON


1. Fill iron with water. See section " HOW TO FILL WITH WATER ".
2. Plug in the iron.
3. Set the iron on the Power Base securely. The green " OFF " light will turn on.

NOTE: If the green light does not turn on, replace the iron on the Power Base again, otherwise the Temperature Control Pad cannot function.

4. Push the " SET " Pad to the corresponding temperature level. The red light starts blinking.

See section " HOW TO CONTROL TEMPERATURE " and the following charts:

Temperature Level	Steam/Dry Selector Position
LOW	
MED	
HIGH	

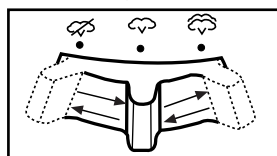

Dry | Low | High
(Non-Steam) | Steam | Steam

5. Hold the iron horizontally and move the Steam/Dry Selector into the desired steam position after the Temperature Control light turns on continuously. You can then start ironing.

Note: Anti-Drip System will activate when the temperature of the Soleplate's surface drops. At the same time, the steam will stop; it is not a sign of malfunction when you hear a clicking sound. In this situation, you have to put your iron back on the Power Base to reheat.

13. 若熨斗被摔過或有明顯的危險徵象或有洩漏，熨斗就不要使用。
14. 不要在電源線纏結的狀態下使用電熨斗，否則電源線可能會很快被損壞。
15. **緊急處理方法** 發生異常時（有燒焦味等），須立即停止運轉並拔掉電源插頭，以免造成火災及觸電的發生。同時請速與服務站或經銷商諮詢。
16. 本熨斗只能與隨送的電源座一齊使用，不使用時，請務必將電熨斗確實放入電源座。
17. 本產品不適合以下人士（包括小孩）使用：身體官能或心智能力退化者，或是經驗與使用知識缺乏者。他們需要有負責其安全的人員在旁監督，或指示產品的使用方法，方可使用。
18. 請勿讓小孩將本產品當成玩具。

特別提示



警告

觸電或火災的危險

請不要在同一個電路回路中使用其他高功率的電器。



注意

為減少個人傷害或損傷電熨斗：



1. 不要使用清潔產品清洗電熨斗，這樣可能會損害電熨斗的性能。
2. 在蒸氣電熨斗裡請不要使用水添加劑或其他像檸檬、香水等作代替品，否則會沾污衣物。
3. 如果在用後未將蒸氣旋鈕設在乾式位置，殘留的水可能流到底板而導致在下次使用時所造成的燙傷。
4. 當交流電線拔出後，請不要使用蒸氣或噴射蒸氣功能。水將會殘留在底板裏導致腐蝕。當溫度選擇按鈕設在“關”時，請不要使用蒸氣或噴射蒸氣。

保存這些指示條款

為正確地使用您的電熨斗，請認真閱讀所有安全注意事項和操作指南。

取出收藏盒蓋

1. 將電熨斗放在穩固的檯面上。
2. 按下收藏盒的兩側鎖定按鈕，同時提起收藏盒。

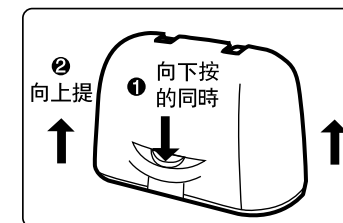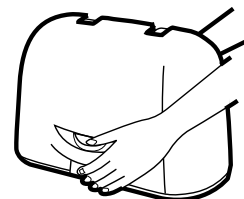

注意：在提起連着電源座的收藏盒時，不要按下收藏盒的鎖定按鈕打開收藏盒。

電熨斗的安全使用

您和他人的安全是最重要的

我們在產品和說明書上提供了重要的安全資訊，請認真閱讀並遵守相關條款：



這是安全警告符號，它警告您潛在的危險，有可能使您和他人受傷甚至死亡。相關安全條款附有“警告”或“注意”的文字符號，它們的含義是：



如果閣下沒有遵照此指示操作，會導致嚴重的傷害甚至死亡。



閣下必須注意，否則潛在的危險可能使閣下受到輕度或中度的傷害。

安全條款告訴您哪些關於潛在的危險，怎樣能避免及減少受傷的機率以及當閣下沒有按照此指示操作而可能會導致的後果。

感謝您購買松下電熨斗！

您的電熨斗只能在熨衣板上熨燙衣物。

重要安全指示



為減少燙傷、電擊、火災或傷亡，請您使用此熨斗時，必須遵守相關的安全預防措施，包括：

使用此電熨斗前請認真閱讀此說明書中所有的條款。

1. 請不要在同一個電路回路中使用其他高功率電器，以避免電路過載。
2. 輸入電壓必須符合電熨斗上標明的額定電壓。
3. 只能使用電熨斗應有的功能，在熨衣板上熨衣物；為了防止燙傷或傷害身體，請不要噴蒸氣到穿在身上的衣物。
4. 電熨斗連接電源插座時，請勿離開熨斗而不顧。
5. 本熨斗只當電源插頭沒有連接插座時，才能注水。
6. 大部分一般的自來水都能使用。在極端的硬水地區，應該使用蒸餾水或軟化水。
7. 離開電熨斗時，即使祇是短時間，也要把電源拔出來，也不可讓小孩接近。
8. 為防止電線短路，請不要把電熨斗浸入水中或其他液體中。
9. 若電源線損壞，則必須委託本公司修理代理店進行修理。
10. 請不要把電源線接觸高溫物體的表面。待電熨斗完全冷卻後才能存放。
11. 當接觸熱的金屬部位、熱水或蒸氣時可能會被燙傷。當注水或將蒸氣電熨斗反轉時請注意熱水可能從電熨斗溢出來。
12. 電熨斗必須放在穩固的表面。當用後蓋板豎立放置時，先確保下面支撐面是穩固的。

HOW TO USE AS A DRY IRON

1. Move the Steam/Dry Selector to the Dry position.
 2. Plug in the iron.
 3. Set the iron on the Power Base securely. The green " OFF " light will turn on.
- NOTE: If the green light does not turn on, replace the iron on the Power Base again, or the Temperature Control Pad cannot function.
4. Push the " SET " Pad until the red blinking light reaches your desired temperature level. Wait until the Temperature Control light turns on continuously. You can then start ironing.

SPECIAL FUNCTIONS

1. Jet of Steam

The "Jet of Steam" feature provides extra steam which goes deep into the garment and is helpful for removing stubborn wrinkles. The "Jet of Steam" feature operates properly only in the "HIGH" indication area of the "SET" Pad when steam or dry ironing (If used at lower setting, water spotting will occur because the iron is not hot enough to change water to steam). If you have not used the "Jet of Steam" feature for a long time, it is necessary to clean the inside of the iron before using this feature on any clothes to be ironed. Simply test the "Jet of Steam" feature several times away from the ironing board and clothes to be ironed. This will prevent brown spotting or water spotting on the clothes.



1. Fill iron with water. See section " HOW TO FILL WITH WATER ".
2. Plug in the iron.
3. Set the iron on the Power Base securely. The green " OFF " light will turn on.
4. Push the " SET " Pad to the " HIGH " temperature level. The red light starts blinking.
5. Preheat the iron until the light turns on continuously, usually about 1-2 minutes.
6. Simply pump the " Jet of Steam Button " when steam is desired. Pump the " Jet of Steam Button " several times at the beginning of each ironing session.
7. Allow at least 5 seconds between uses of the " Jet of Steam Button " to prevent water spotting. Use a press cloth if necessary.

NOTE: Do not touch the fabric with the iron. Keep the iron slightly over the fabric to prevent burns or disfiguring.

Jet of Steam can be provided by pumping the " Jet of Steam Button ". Set temperature at " HIGH " level. To avoid hot water from dripping out of the Soleplate, please give 5 seconds of interval time before re-pumping

2. Vertical Steam

To get better results when using vertical steam, hang the garment on a clothes hanger. Curtains and drapes may also be steamed once they're hung. Hold the iron away from your body, close to but not touching the fabric. Pull the fabric tight with your free hand and pump the Vertical Steam Button (Jet of Steam Button) at 5 seconds intervals as you pass the iron over the wrinkled fabric.

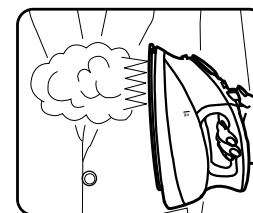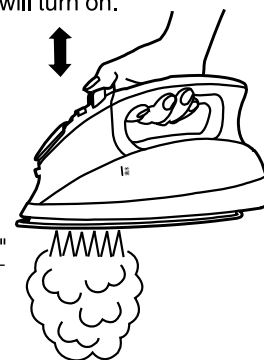

! WARNING

Never iron clothes on the body or point your iron at anyone when steaming. Keep hands and body away from steam areas while using vertical steam feature.

3. Anti-Drip System (Automatic Water Seal)

This model has an Anti-Drip System. When the temperature of the Soleplate's surface drops below 250°F(121 °C), the valve for the vaporizing chamber in the iron automatically closes and stops the water from going in further. This prevents hot unvaporized water from spitting out from the soleplate when the iron has cooled down. With this System, it is unnecessary for you to wait until the inside of the vaporizing chamber dries completely when you store the iron.

NOTE: It is not a sign of malfunction when you hear a clicking sound. This sound can be heard whenever this System is activated.

4. Automatic Shut-Off

The Automatic Shut-Off System provides you with a visible warning signal before the iron automatically shuts off. The iron will automatically shut itself off if the iron has been left on the Power Base longer than 10 minutes. 10 seconds before the actual shut-off, the " OFF " indicator will start blinking rapidly.

If the iron is not moved during the warning, the heater in the iron's Soleplate will automatically shut off.

The Automatic Shut-Off System activates only after the temperature reaches its selected level. To reheat your iron after it automatically shuts off, simply push " SET " Pad until the red light appears at the desired temperature indicator.

" OFF " light(green) remains on after your iron automatically shuts off .


This light indicates that the iron is still plugged into the electrical outlet and voltage is being supplied to the Power Base.


5. Spray

Note: Before using the spray feature, check the fabric label for ironing instructions because some fabrics may be spotted or stained with moisture.

The spray feature is particularly helpful for removing stubborn wrinkles and where extra dampening is needed.

The spray may be used with steam or dry ironing.

1. Simply pump the Spray Mist Button  whenever spray is desired. If the spray doesn't come out immediately, keep pumping until it does.
2. To get a finer spray, pump the Button vigorously. To get a more powerful spray, pump the Button more slowly. For best results, use a quick, full stroke.

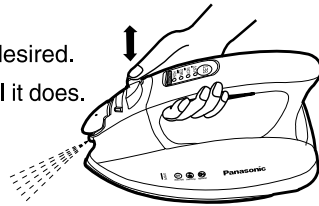

6. Stay Clean Vents


The built-in Anti Calcium System in the Tank continuously reduces scale buildup in the vaporizing chamber of the iron.

This system makes it possible to use the steam function for a long period of time and prevents steam vents from clogging.

HOW TO CARE FOR YOUR IRON

AFTER EACH USE

1. Press the " SET " Pad until the " OFF " light turns on.
2. Move the Steam/Dry Selector to Dry Position.
3. Unplug the iron.
4. Empty the water from the Water Tank. DO NOT store the iron with water inside.
5. Push the Cover Case until it clicks to lock.

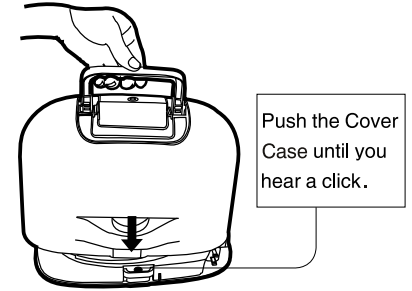

MAIN BODY

1. When cleaning the main body of the iron , make sure that iron has cooled down.
2. Wipe the iron with a damp cloth If necessary, use a mild detergent. NEVER USE ANY HARSH CLEANERS.

SOLEPLATE

- * Starch and other residue can be easily removed from the Soleplate with a damp cloth.
- * To avoid scratching the finish, never use a metallic pad to clean the Soleplate, and never place the iron on a rough surface.
- * If synthetics are being ironed on a higher temperature level than instructed, not only will the fabric be ruined, but the Soleplate will often be covered with the melted remains of the synthetic fabric.
- * The best way to remove synthetic residue from the Soleplate is to iron over an old cotton rag after heating the iron.

! CAUTION

Never use steam iron cleaners in the iron since it may cause damage to the inside of the iron. If the Power Cord is damaged, it must only be replaced by a special cord. The iron must only be used with the Power Base provided.

NOTICE

1. Please hold the plug or the connector part (not the cord), when connecting and disconnecting the Power Cord to the mains, or the connector part to the Power Base.
2. Do not close the Cover Case while the Power Cord is connected to the Power Base, otherwise the Power Base may drop off.
3. After finishing ironing, take care of not touching the surface of Soleplate.

