

Panasonic

Operating Instructions

(Household) Epilator

Model No. ES-EU10

English..... 3

中文 13



Operating Instructions (Household) Epilator Model No. ES-EU10

Contents

Safety precautions.....	4	Epilating	9
Intended use	7	Cleaning	10
Quick steps for epilating.....	7	Troubleshooting	11
Parts identification	7	Battery life	12
Tips for best epilation results	8	Removing the built-in rechargeable battery.....	12
Charging.....	8	Specifications	12
Before use	9		

Thank you for purchasing this Panasonic product.

Before operating this unit, please read these instructions completely and save them for future use.

Safety precautions

To reduce the risk of injury, loss of life, electric shock, fire, malfunction, and damage to equipment or property, always observe the following safety precautions.

Explanation of symbols

The following symbols are used to classify and describe the level of hazard, injury, and property damage caused when the denotation is disregarded and improper use is performed.

DANGER

Denotes a potential hazard that will result in serious injury or death.

WARNING

Denotes a potential hazard that could result in serious injury or death.

CAUTION

Denotes a hazard that could result in minor injury.

The following symbols are used to classify and describe the type of instructions to be observed.



This symbol is used to alert users to a specific operating procedure that must not be performed.



This symbol is used to alert users to a specific operating procedure that must be followed in order to operate the unit safely.



DANGER



This product has a built-in rechargeable battery. Do not throw into flame or heat.

- Doing so may cause leakage, overheating, or explosion.



WARNING



Do not store within the reach of children or infants. Do not let them use it.

- Doing so may cause an accident or injury due to accidental ingestion of the brush, etc.



Never disassemble except when disposing of the product.

- Doing so may cause fire, electric shock, or injury.



Do not modify or repair.

- Doing so may cause fire, electric shock, or injury. Contact an authorized service center for repair (battery change, etc.).



Do not use in a way exceeding the rating of the household outlet or the wiring.

- Exceeding the rating by connecting too many plugs to one household outlet may cause fire due to overheating.



Do not damage or modify, or forcefully bend, pull, or twist the power cord. Also, do not place anything heavy on or pinch the power cord.

- Doing so may cause electric shock or fire due to a short circuit.

WARNING



Never use the appliance if the AC adaptor is damaged or if the plug fits loosely in a household outlet.

- Doing so may cause electric shock or fire due to a short circuit.



Do not connect or disconnect the adaptor to a household outlet with a wet hand.

- Doing so may cause electric shock or injury.



Do not immerse the AC adaptor in water or wash it with water.

- Doing so may cause electric shock or fire due to a short circuit.



Never use the AC adaptor in a bathroom or a shower room.

- Doing so may cause electric shock or fire due to a short circuit.



Do not use anything other than the supplied AC adaptor. Also, do not charge any other product with the supplied AC adaptor.

- Doing so may cause burn or fire due to a short circuit.

Immediately stop using and remove the adaptor if there is an abnormality or failure. Using it in such conditions may cause fire, electric shock, or injury.
<Abnormality or failure cases>



- The main unit, adaptor, or power cord is deformed or abnormally hot.
- The main unit, adaptor, or power cord smells of burning.
- There is abnormal sound during use or charging of the main unit, adaptor, or power cord.
- Immediately request inspection or repair at an authorized service center.



Fully insert the adaptor or appliance plug.

- Failure to do so may cause fire, electric shock, or burn.



Make sure to use AC 220 - 240 V.

- Failure to do so may cause fire, electric shock, or burn.



Always unplug the adaptor from a household outlet when cleaning.

- Failure to do so may cause electric shock or injury.

Regularly clean the power plug and the appliance plug to prevent dust from accumulating.



- Failure to do so may cause fire due to insulation failure caused by humidity.

Disconnect the adaptor and wipe with a dry cloth.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.



Children should be supervised to ensure that they do not play with the appliance.

- Failure to do so may cause an accident or injury.



The supply cord cannot be replaced. If the cord is damaged, the AC adaptor should be scrapped.

- Failure to do so may cause an accident or injury.



CAUTION



Do not wrap the power cord tightly around the adaptor when storing.

- Doing so may cause the wire in the power cord to break with the load, and may cause fire due to a short circuit.

CAUTION



Do not drop or subject to shock.

- Doing so may cause injury.



Do not allow pins or trash to adhere to the power plug or the appliance plug.

- Doing so may cause electric shock or fire due to a short circuit.



Do not turn ON the switch without the head attached.

- Doing so may cause finger injury or cause hair or clothing entanglement and damage.



Do not use with the frame removed.

- Doing so may cause injury to the skin or cause hair or clothing entanglement and damage.



Do not apply strong pressure to the skin, move repeatedly over same area, hold in one area, or use a jabbing motion.

- Doing so may cause injury or inflammation of the skin, or increased pain.



Do not use the epilation head for legs/arms to epilate your underarms and bikini-line.

- Doing so may cause injury or inflammation of the skin.

Do not use in the following cases:



- Before or during menstruation, pregnancy, or about one month after giving birth
- On suntanned skin
- When you are not well or when you feel an abnormality in your skin or body
- Use in such cases may cause the skin to become sensitive or cause inflammation, bleeding, or increased pain.

Do not use in the following body area:



- Injury, rash, moles, bruises, warts, pimples, etc.
- Face, genitals and genital area, or thighs
- Inner side of the upper arms and areas such as elbows or knees which are prone to sagging
- Doing so may cause injury, inflammation of the skin, or bleeding.

The following persons should not use this appliance:



- Persons suffering from atopic dermatitis or rashes and other skin diseases
- Persons with allergic diathesis or persons who are easily irritated by cosmetics, clothing, metals, etc.
- Persons who are easily suppurated
- Persons suffering from varicose veins, diabetes, hemophilia, etc.
- Persons who have trouble stopping bleeding
- Persons who have suffered skin problems (suppuration, inflammation, etc.) caused by epilation (plucking, depilation, waxing, etc.)
- Use in such cases may cause the skin to become sensitive or cause inflammation, bleeding, or increased pain.

Do not use in the following ways:



- Using just before swimming or sea bathing (use at least 2 days before such activities)
- Using just before bathing
- Sharing with your family or others
- Engage in extreme sports or exercise right after epilation
- Doing so may cause infection or inflammation resulting from bacteria that enter the body from the pores.



Disconnect the adaptor from the household outlet when not charging.

- Failure to do so may cause electric shock or fire due to electrical leakage resulting from insulation deterioration.

CAUTION



Disconnect the adaptor or the appliance plug by holding onto them instead of the power cord.

- Disconnecting by holding onto the power cord may cause electric shock or injury.



Before using, check that the disc and frame are free from deformities, cracks, and damage.

- Failure to do so may cause injury to the skin.



If skin problems continue for 2 days or longer after treatment, stop using the unit and contact a dermatologist.

- Failure to do so may cause symptoms to worsen.



Use only for the intended purpose.

- Failure to do so may cause injury.

Intended use

- The appliance can be used for wet or dry epilation. The following is the symbol for a wet epilator. It means that the appliance can be used in a bath or shower.



- Charge the appliance correctly according to these Operating Instructions. (See page 8 "Charging".)
- This appliance contains battery that is only replaceable by skilled persons. Please contact an authorized service center for the details of repair.

- The following symbol indicates that a specific detachable power supply unit is required for connecting the electrical appliance to the supply mains. The type reference of power supply unit is marked near the symbol.



► Notes

 
- Do not use paint thinner, benzene, alcohol, etc. to clean the appliance. Doing so may cause failure, cracking or discoloration of the main body. Wipe with a cloth soaked in soapy water and wrung tightly.
- Keep the appliance away from sinks, bathrooms or other high-humidity areas where it could be exposed to water and moisture after use.
- Keep the appliance away from where it will be exposed to high temperatures or direct sunlight.

Quick steps for epilating

1
Charging
 Page 8

2
Epilating
 Page 9

Parts identification

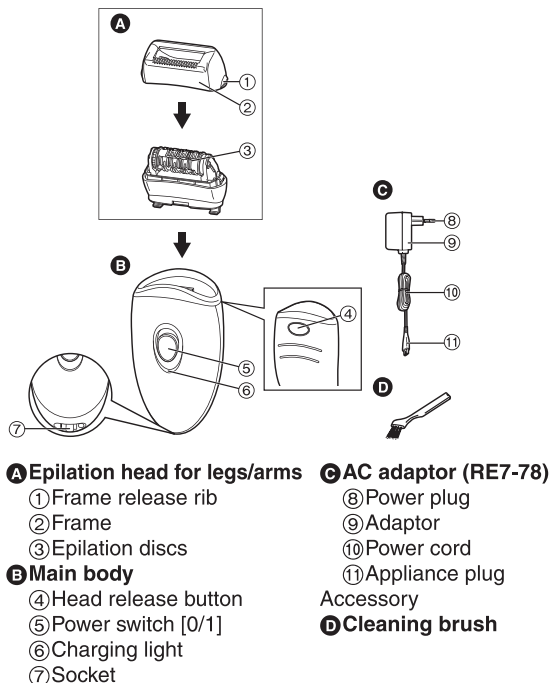

Tips for best epilation results

The hair removal is not permanent, so from the 2nd use we recommend that you epilate the arms and legs about **once every two weeks**.

- Apply the epilator at a 90° angle to your skin. Always make sure that the appliance is in contact with your skin and press gently while moving it **slowly** against the hair growth.



- Massaging with a body puff may help to prevent ingrown hairs.
- Reddening might appear after use. A cool towel will help if you feel pain or there is a rash.
- If your skin gets dry after epilation, we recommend applying a moisture lotion two days after epilation.
- Make sure skin is clean before and after use.

Charging

For best performance, fully charge the appliance before use.


- You cannot operate the appliance while charging.
- Charging time differs depending on the rated voltage.

Charging time	220 V ~	Approx. 15 hours
	230 - 240 V ~	Approx. 12 hours

- The epilator can be used for approximately 25 minutes after charging. (This will differ depending on the temperature.)

Plug the AC adaptor into the epilator (a) and a household outlet (b).

 - Recommended ambient temperature for charging is 0 - 35 °C. The battery may not charge properly or not at all under extreme low or high temperatures.

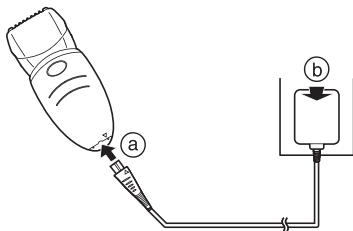

While charging



Red light appears.

After charging is completed



Red light glows and stays on until the adaptor is disconnected from a household outlet.

- The charging time may decrease depending on the charging capacity.
- To keep charging the battery will not affect battery performance.
- When charging the epilator for the first time or when it has not been in use for more than 6 months, the charging light may not turn on for a few minutes, or the operating time may shorten. Please charge it for more than 23 hours in such cases.

Before use




Best hair length for epilation

Trim your hair before epilating for the first time or if you have not epilated for a long time. Hair removal is easier and less painful when the hair is short.

 
Epilating

Areas suitable for epilation



The epilator can be used on the  areas.

Using the epilator on other areas may cause pain or skin trouble.

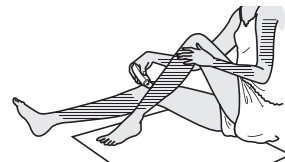

Areas not suitable for epilation

The epilator should not be used on the inner side of the upper arms and areas such as elbows or knees which are prone to sagging.



Dry epilation

Before epilating, wipe away water or sweat on your skin.

Slide the power switch [a5] to the 1 position and carry out epilation.

Wet/foam epilation

WET epilation (epilating after wetting the skin and epilator and then applying foam) makes the skin softer so is gentler to your skin when epilating.

1 Wet your skin.

 
2 Wet the discs and place a small quantity of liquid shower gel on the discs.

- Always use shower gel when wet epilating.
- Rinse any shower gel out of your hands.



3 Slide the power switch [B 5] to the 1 position and carry out epilation.

- Foam is created. Foam makes the epilator slide better, so you can move it fast.



- We recommend using the appliance in an ambient temperature range of 0 - 35 °C. If used outside this range, the appliance may stop operating.

<Epilating legs or arms>



Upwards from the bottom of the leg.
Inwards from the outside of the arm.

 


Cleaning

- Always clean the frame and discs after use to keep them in a hygienic state.
- Switch off and unplug the appliance before cleaning.
- Take care not to damage the frame during cleaning.

Dry cleaning

1. Lift the frame upward while holding the frame release rib [A 1].
2. Clean the epilation head [A] with the cleaning brush [O].

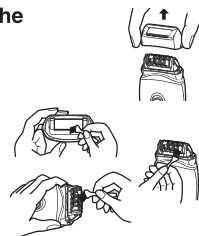

Wet cleaning

1. Wet the discs and apply liquid hand soap to them.
2. Turn the switch on and then foam is created.
3. Wash the head with water to wash out hair.
 - Do not use hot water.
 - If soap is not completely washed away, then a white deposit can accumulate and prevent the discs from moving smoothly.



4. Turn the switch off, wipe the appliance with a dry cloth and dry it well.

Troubleshooting

Problem	Possible cause	Action
The appliance does not operate.	▶ It is not charged.	▶ Fully charge the appliance.
	▶ The switch is turned ON with the adaptor connected to the household outlet.	▶ Only charging is possible when connected to the household outlet. Use it disconnected from the household outlet.
	▶ Discs are deformed, cracked, or damaged.	▶ Request repair at an authorized service center.
	▶ Hair dust has accumulated.	▶ Clean the hair dust.
	▶ Shower gel has adhered to the discs.	▶ Wash it off by soaking in warm water.
The usage time gets short.	▶ The appliance is not used at recommended use temperature.	▶ Use at the recommended use temperature of 0 - 35 °C.
	▶ The appliance is pressed against skin too hard.	▶ Contact to skin with gentle force.
	▶ Not charged fully	▶ Fully charge the appliance.
Cannot remove hair.	▶ The appliance is used on long hair.	▶ Use on hair approximately 2 to 3 mm long.
The hair becomes stubble.	▶ Way the unit is applied or moved is not correct.	▶ Refer to page 9.
	▶ The appliance is pressed against skin too hard.	▶ Contact to skin with gentle force.
The appliance stops during operation.	▶ Not charged fully	▶ Fully charge the appliance.
	▶ Hair dust has accumulated.	▶ Clean the hair dust.
The appliance is not removing the hair as well as before.	▶ Discs are deformed, cracked, or damaged.	▶ Request repair at an authorized service center.

Battery life

The life of the battery is 3 years if charged approximately once every week. The battery in this epilator is not intended to be replaced by consumers. Have the battery replaced by an authorized service center.

Removing the built-in rechargeable battery

 
Remove the built-in rechargeable battery before disposing of the epilator.

The battery is to be disposed of safely.

Please make sure that the battery is disposed of at an officially designated location if there is one.

This figure must only be used when disposing of the epilator, and must not be used to repair it. If you dismantle the epilator yourself, it will no longer be waterproof, which may cause it to malfunction.

- Disconnect the power cord from the epilator when removing the battery.
- Slide the power switch to turn on the power and then keep the power on until the battery is completely discharged.
- Perform steps ① to ⑧ and lift the battery, and then remove it.
- Please take care not to short-circuit the battery.

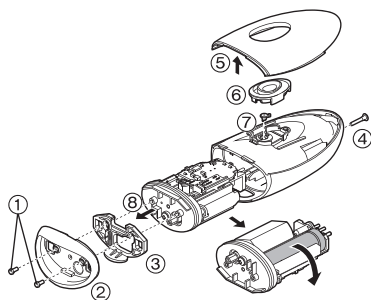

For environmental protection and recycling of materials

This epilator contains a Nickel-Metal Hydride battery.

Please make sure that the battery is disposed of at an officially assigned location, if there is one in your country.

Specifications

Power supply	See the name plate on the AC adaptor.	
Charging time	220 V ~	Approx. 15 hours
	230 - 240 V ~	Approx. 12 hours

This product is intended for household use only.

目錄

安全須知.....	14	拔毛	18
擬定用途.....	16	清潔	19
拔毛快速步驟	16	疑難排解.....	20
部件名稱.....	17	電池壽命.....	21
最佳拔毛效果建議.....	17	拆下內置式充電池.....	21
充電	17	規格	21
使用前.....	18		

感謝您購買本 Panasonic 產品。




操作本產品之前，請仔細閱讀本說明。請妥善保存本說明以供未來使用。

安全須知



為減低受傷，死亡、觸電、火警、故障、產品損壞及財物損失的風險，請務必留意以下安全須知。

符號說明

以下符號用於為危險、傷害及財物損失的級別分類和作出解釋。若不理會此等符號，不當使用本產品就可能會導致所述的危險、人身傷害及財物損失。

 危險	表示潛在的危險會導致嚴重受傷或致命。
 警告	表示潛在的危險可能會導致嚴重受傷或致命。
 注意	表示危險可導致輕微受傷。









以下符號用於分類和解釋必須留意的指示類型。

	此符號用於提示用戶，不得執行某項特定的操作程序。
	此符號用於提示用戶，必須遵從某項特定的操作程序，藉以安全操作本產品。

危險


-  本產品有內置可充電式電池。切勿棄進火源或熱源中。
- 否則可導致漏電、過熱或爆炸。

警告

-  切勿將產品存放於兒童或幼童可觸摸的地方。請勿讓兒童或幼童使用。
- 否則可能會因意外誤食清潔刷等，而導致意外或受傷。
-  切勿拆卸本產品，棄置時除外。
- 否則可導致火警、觸電或受傷。
-  切勿改裝或維修產品。
- 否則可導致火警、觸電或受傷。請聯絡授權維修中心進行維修（更換電池等）。
-  切勿以超出家用電源插座或配線額定值的方式使用產品。
- 將太多插頭接駁至一個家用電源插座，以致超出額定值，可能會因過熱而導致火警。
-  切勿破壞、改裝、用力彎曲、拉動或扭動電源線。此外，切勿將重物放在電源線上或夾緊電源線。
- 否則可能會因短路而導致觸電或火警。
-  如電源供應器損壞，或電源插頭未緊接家用電源插座上，切勿使用本產品。
- 否則可能會因短路而導致觸電或火警。
-  切勿在手濕時將轉接器插入家用電源插座或從插座中拔除。
- 否則可導致觸電或受傷。
-  切勿將電源供應器浸在水中或用水洗滌。
- 否則可能會因短路而導致觸電或火警。


警告

 切勿在浴室使用電源供應器。
- 否則可能會因短路而導致觸電或火警。

 除了隨產品附上的電源供應器外，切勿使用其他電源供應器。此外，切勿使用隨產品附上的電源供應器為任何其他產品充電。
- 否則可能會因短路而導致灼傷或火警。

若產品出現異常或故障情況，請立即停止使用產品及拔除轉接器。否則可導致火警、觸電或受傷。

< 異常或故障情況 >




- 主機、轉接器或電源線變形和異常灼熱。
- 主機、轉接器或電源線出現燒焦氣味。
- 主機、轉接器或電源線在使用或充電時出現異常聲響。


- 請立即將產品帶往授權維修中心，以要求檢查或維修。

 必須完全插入轉接器或電器插頭。
- 否則可導致火警、觸電或灼傷。

 確保使用 220 - 240 V 交流電。
- 否則可導致火警、觸電或灼傷。

 清潔產品時，必須從家用電源插座拔出轉接器。
- 否則可導致觸電或受傷。


 應定期清潔電源插頭和電器插頭，以防止塵埃積聚。
- 否則濕氣可令絕緣失效，導致火警。
拔除轉接器並用乾布抹拭。

 患有體能、感官或智力減退，或缺乏經歷和知識之人士（含小孩），在無人監護或未獲告知如何使用的情況下不得使用本產品。
請勿讓小孩使用本產品。
- 否則可能導致意外或受傷。


 電源線不可更換。若電源線損壞，電源供應器就應棄掉。
- 否則可能導致意外或受傷。


注意


 切勿在存放產品時將電源線圍繞轉接器纏緊。
- 否則可令電源線內的纏線因受壓而斷裂，並可因短路而導致火警。

 切勿掉下產品或使其受到撞擊。
- 否則可導致受傷。

 切勿讓別針或垃圾附在電源插頭或電器插頭上。
- 否則可能會因短路而導致觸電或火警。

 未裝上刀頭前，切勿啟動開關。
- 否則可導致手指受傷，或頭髮或衣物捲入滾輪而導致受傷及產品損壞。

 卸下支架後，切勿使用本產品。
- 否則可導致皮膚受傷，或頭髮或衣物捲入滾輪而導致受傷及產品損壞。

 切勿大力按壓在皮膚上、在同一位置重複使用、保持在相同位置，或猛戳。
- 否則可導致皮膚受傷或發炎，或疼痛加劇。

 請勿將腿部 / 臀部拔毛刀頭使用於腋下 / 比基尼線進行拔毛。
- 否則可導致皮膚受傷或發炎。

遇到下列情況時，切勿使用本產品：

- 在經期前或經期中、懷孕期或產後約一個月內
- 在曬黑的皮膚上
- 身體不適或感到皮膚或身體異常時
- 在上述情況下使用，可導致皮膚敏感或發炎、流血或疼痛加劇。

⚠ 注意

切勿在以下身體部位使用本產品：

- 受傷部位、紅疹、痣、瘀傷、疣、暗瘡等
- 面部、生殖器、陰部或大腿
- 上臂內側及手肘、膝蓋等皮膚易於鬆弛的部位
- 否則可導致皮膚受傷、皮膚發炎或流血。

以下人士不宜使用本產品：

- 患有異位性皮膚炎、紅疹及其他皮膚病的人士
- 敏感體質人士，或容易對化妝品、衣物、金屬等過敏的人士
- 容易化膿的人士
- 患有靜脈曲張、糖尿病、血友病等病症的人士
- 在止血方面有問題的人士
- 因拔毛（拔毛、剃毛、蜜蠟拔毛等）而導致皮膚問題（流膿、發炎等）的人士
- 在上述情況下使用，可導致皮膚敏感或發炎、流血或疼痛加劇。

切勿以下列方法使用本產品：

- 在游泳或浸海水浴之前使用（最少 2 日前使用）
- 在沐浴前使用
- 與家人或其他人共用
- 拔毛後進行劇烈運動或活動
- 否則細菌可能會經毛孔進入身體，導致感染或發炎。

❗ 不充電時，應從家用電源插座拔出轉接器。

- 否則可因絕緣劣化造成漏電，導致觸電或火警。

❗ 拔出轉接器或電器插頭時，應握著該個部位而非電源線。

- 手持電源線拔出轉接器或電器插頭，可導致觸電或受傷。

❗ 使用前，請檢查清楚碟片及支架均沒有變形、裂縫及損壞。

- 否則可導致皮膚受傷。



拔毛後，若皮膚問題持續 2 日或以上，應停止使用本產品，並諮詢皮膚科醫生。

- 否則可導致病症惡化。



只應用於擬定用途。

- 否則可導致受傷。

擬定用途

- 本電動拔毛器乾濕兩用。以下標誌是濕脫符號。這表示本產品可在沐浴或淋浴中使用。



- 根據使用說明書將產品正確充電。（請參閱第 17 頁「充電」。）
- 本產品包含僅能交由技術熟練的人員更換的電池。
如需詳細的維修資訊，請洽詢授權維修中心。
- 下列符號表示需使用專用的可拆式電源供應器，將本電器連接至主電源。符號附近標示了電源供應器的類型參考。



► 註

- 切勿使用稀釋劑、苯、酒精等清潔本產品。否則可導致機身故障、部件破裂或褪色。應用布浸泡皂水，然後將其扭至微濕並擦拭產品。
- 使用後請勿將本產品置於水池、浴室或其他暴露於水或濕氣下的高濕度區域附近。
- 請勿將本產品置於高溫或太陽直射處。

拔毛快速步驟

1 充電

 
（➡第 17 頁）



2 拔毛

（➡第 18 頁）

部件名稱

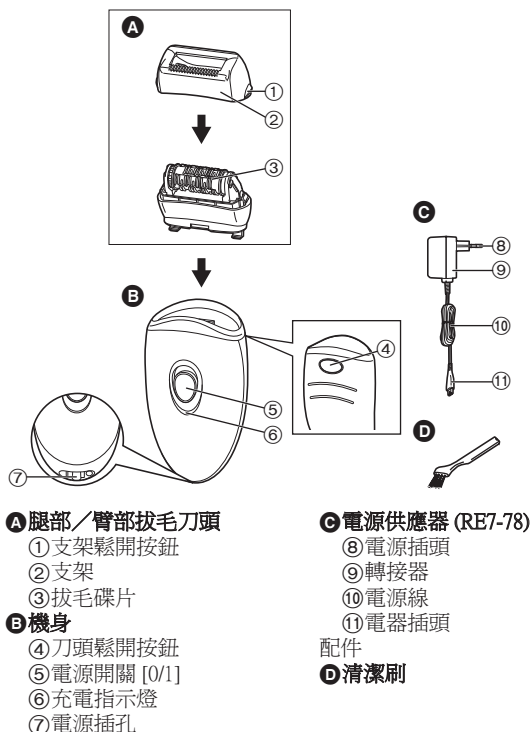

最佳拔毛效果建議

除毛效果無法持久，因此建議您由第二次使用起，臀部及腿部拔毛**兩週一次**。

- 電動拔毛器與皮膚表面應成 90° 角。務必確保本產品接觸皮膚，並逆著體毛生長方向**緩緩**移動，同時輕力按下。



- 使用沐浴棉按摩，可能有助於預防體毛向內生長。
- 使用後可能出現紅斑點。如果感到疼痛或出現皮疹，可用冷毛巾進行冷敷。
- 如果拔毛後皮膚變乾，建議您在拔毛後的兩天內塗抹保濕乳液。
- 請確保使用前後皮膚清潔。

充電

使用前充分充電，可以獲致最佳性能。


- 本產品在充電期間無法運作。
- 充電時間視乎額定電壓的差異而有所不同。

充電時間	220 V ~	約 15 小時
	230 - 240 V ~	約 12 小時

- 電動拔毛器在充電後可使用約 25 分鐘。(視溫度不同可能會有差異。)

將電源供應器插入電動拔毛器 (a) 和電源插座 (b)。

 - 充電時的環境溫度建議為 0 - 35 °C。在極端低溫或高溫下，電池可能無法正常充電，甚至完全停止充電。

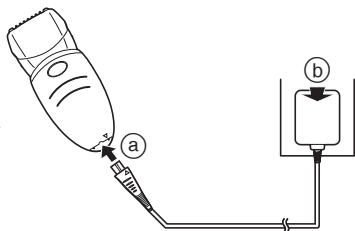

在充電期間



顯示紅燈。

在充電完成後



紅燈會持續亮起，直至轉接器從家用電源插座上拔除為止。

- 充電時間可能會減少，視乎充電容量而定。
- 持續充電並不會影響電池效能。
- 若首次為電動拔毛器充電，或之前已有 6 個月沒有使用，充電指示燈就可能會在最初數分鐘內沒有亮起，運作時間也可能會縮短。如出現這種情況，請為產品充電超過 23 小時。

使用前



拔毛的最佳毛髮長度

在首次拔毛或者已經長期未拔毛時請先進行剃毛。(剃毛刀頭)短體毛容易拔毛，而且不太疼痛。

拔毛

 
適合拔毛的部位



電動拔毛器可用於

部位。

將電動拔毛器用於其他部位，可能會導致疼痛或皮膚病。

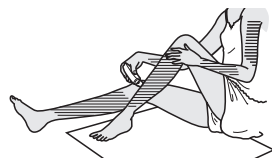

不適合拔毛的部位

電動拔毛器不應用於上臂內側及手肘、膝蓋等皮膚易於鬆弛的部位。



乾式拔毛

拔毛前，先擦乾皮膚上的水或汗。

滑動電源開關 [B⑤]，推向 1 的位置，然後開始拔毛。

濕拔毛／泡沫拔毛

濕拔毛（先弄濕皮膚和電動拔毛器、塗抹泡沫，然後再拔毛）可以讓皮膚較柔軟，拔毛時對皮膚較溫和。

1 將皮膚弄濕。

 
2 弄濕拔毛碟片，將少量沐浴露塗在碟片上。

- 濕拔毛時請先在拔毛部位塗上沐浴露。
- 拔毛後，將拔毛部位清洗乾淨。



3 滑動電源開關 [B⑤]，推向 1 的位置，然後開始拔毛。

- 製造泡沫。泡沫可使電動拔毛器滑動得更為順暢，因此可以快速移動。

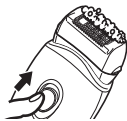

- 我們建議在環境溫度為 0 至 35 °C 時使用本產品。若在此溫度範圍以外使用，本產品可能會停止運作。

< 腿部或臀部拔毛 >



- 從小腿底部往上移動。
- 從手臂外側向內側移動。



清潔

 
- 在使用後，必須清潔支架和碟片，以保持衛生。
- 清潔前，請首先關閉電動拔毛器並拔出電源。
- 清洗時請注意不要損壞支架。

乾式清潔

1. 握住支架鬆開按鈕 [A①]，往上拉起支架。



2. 使用清潔刷 [D] 清潔拔毛刀頭 [A]。

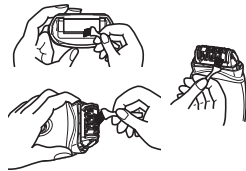


濕式清潔

1. 弄濕拔毛碟片，然後將洗手液塗在碟片上。



 2. 啟動開關，泡沫就會形成。



3. 用水清洗刀頭，洗掉體毛。

- 請勿使用熱水。
- 如果沒有完全洗掉肥皂，則會積聚白色沉澱物，阻礙碟片順暢移動。



4. 關閉開關，用乾布擦拭本產品並擦乾。

疑難排解

問題	導致故障原因	措施
本產品無法運作。	▶ 產品尚未充電。	▶ 請為本產品完全充電。
	▶ 轉接器已插入家用電源插座，開關已推到開的位置。	▶ 接駁家用電源插座後，產品只能充電。請將產品從家用電源插座中拔出。
	▶ 碟片變形、有裂縫或損壞。	▶ 請將產品帶往授權維修中心，要求維修。
	▶ 產品積聚太多毛髮。	▶ 清理毛髮。
	▶ 沐浴露黏附在碟片上。	▶ 將碟片和刀片浸入暖水中，以去除沐浴露。
可使用的時間縮短。	▶ 產品不在建議使用溫度範圍內使用。	▶ 請在 0 - 35 °C 的建議使用溫度範圍內使用。
	▶ 產品在皮膚上按壓的力量太大。	▶ 產品應輕輕用力接觸皮膚。
	▶ 產品未完全充電	▶ 請為本產品完全充電。
無法去除毛髮。	▶ 產品在過長的毛髮上使用。	▶ 應在長度為 2 至 3 mm 的毛髮上使用。
毛髮留根，不能完全去除。	▶ 使用和移動產品的方式錯誤。	▶ 請參閱第 19 頁的指示。
產品在操作期間突然停止。	▶ 產品在皮膚上按壓的力量太大。	▶ 產品應輕輕用力接觸皮膚。
	▶ 產品未完全充電	▶ 請為本產品完全充電。
產品拔毛的效果變差。	▶ 產品積聚太多毛髮。	▶ 清理毛髮。
	▶ 碟片變形、有裂縫或損壞。	▶ 請將產品帶往授權維修中心，要求維修。

電池壽命

如果大約每週充電一次，電池使用壽命為約 3 年。使用者不應更換電動拔毛器內的電池。應由授權維修中心更換電池。

拆下內置式充電電池

 
棄置電動拔毛器前，應先取出內置可充電式電池。

必須安全地丟棄電池。

如您的國家／地區有指定認可棄置電池的地方，請確保將電池棄置於這些地方。

下圖只能用於棄置電動拔毛器時。切勿使用下圖作維修之用。若您自行拆解電動拔毛器，產品就不再具有防水功效，並可能會導致產品損壞。

- 取出電池時，應從電動拔毛器拔出電源線。
- 滑動電源開關接通電源，保持電源的開啓狀態，直至電池完全放電。
- 根據下圖 ① 至 ⑧ 的順序拉動電池，然後將其取出。
- 請注意不要令電池短路。

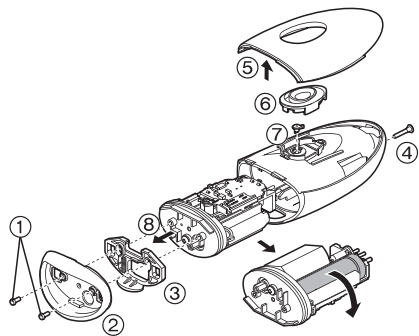

環保及材料回收

本電動拔毛器含有鎳氫電池。

如您的國家有指定認可棄置電池的地方，請確保將電池棄置於這些地方。

規格

電源	請參閱電源供應器上標籤。	
充電時間	220 V ~	約 15 小時
	230 - 240 V ~	約 12 小時

此產品只適於家居內使用。

MEMO

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

Panasonic Corporation
<http://www.panasonic.com>
© Panasonic Corporation 2013-2020