


TK-CJ600

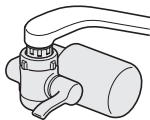

TK-CJ300

Thank you for purchasing this Panasonic product.
感謝您購買Panasonic的產品。

- Please read these instructions carefully before using this product, and save this manual for future use.
- **Please carefully read the “Safety Precautions” (P. EN3 – EN7) of this manual before use.**
- Be absolutely sure to check that the purchase date has been entered on the warranty.
- Please keep in mind that the manufacturer of the product will not be responsible for any product malfunctioning or accidents resulting from the improper installation or operation of the product.
- 請在使用本產品之前仔細閱讀本說明書，並妥善保管本說明書以備日後使用。
- **在使用之前仔細閱讀「安全注意事項」(TC3~TC7頁)。**
- 保證書上的「購買日期」請務必填寫。
- 因安裝錯誤或不正確使用，而造成產品故障或發生事故時，本公司恕不負責。

Panasonic[®]

Operating Instructions 使用說明書

Water Purifier **For Household Use**

濾水器 **家庭用**

MicroClear4000

Model No. **TK-CJ600**
TK-CJ300

English

中文 (繁體)

Contents

Safety Precautions	EN 3	Operation	EN29
Operating Precautions	EN 8	Maintenance	EN31
Product Composition	EN 9	Replacing the Cartridge	EN36
Names and Functions of the Parts	EN10	When the Water Supply is Cut Off	EN41
Steps to Take Before Operation	EN12	When Not Using the Product for a Long Period of Time	EN41
Installation 1		If problems occur TK-CJ600	EN42
Checking the Main Unit and Supplied Accessories	EN14	Q&A	EN43
Installation 2 TK-CJ600		Troubleshooting	EN45
Insert (replace) a Lithium Battery into the Main Unit	EN15	Optional Accessories	EN47
Installation 3		Specifications	EN48
Checking the Faucet	EN17		
Installation 4			
Installing the Water Purifier	EN20		
Installation 5			
Checking after Installation	EN27		

Replacement cartridges for this water purifier:
● Model No. TK-CJ600C-EX
How to Replace the Cartridge (P. EN36)

Safety Precautions Please make sure to follow these instructions

In order to prevent accidents to people or damage to property, always follow the instructions below.

- **The following is an explanation of danger and damage caused due to incorrect usage according to severity.**



WARNING

Indicates serious injury or death.



CAUTION

Indicates risk of injury or property damage.

- **The symbols are classified and explained as follows.** (The following are examples of symbols.)



This symbol indicates prohibition.



This symbol indicates requirements that must be followed.



WARNING

Water supply



- **Use only water (such as tap water) which has been approved for consumption.**
(Failure to do so may cause health problems.)
 - The main unit cannot remove harmful substances other than those listed on P. EN48 – EN49 or cannot sterilize water.

Safety Precautions Please make sure to follow these instructions (continued)

WARNING

Accidental ingestion TK-CJ600



- **Do not leave the supplied coin type lithium battery within reach of infants or toddlers.**
(Doing so may result in accessories being swallowed by mistake.)
 - If you suspect that the battery has been swallowed, consult a physician immediately.



CAUTION

Disassembly prohibited



- **Do not disassemble, repair or remodel the unit.**
(Doing so may cause water leakage or malfunction.)
→ Please contact a dealer or subordinate service station of Panasonic for inspection or maintenance.

CAUTION

About batteries TK-CJ600



- Do not dispose of battery in fires, or short circuit or disassemble them.
(Doing so may cause burns or injury.)



- Always adhere to the precautions shown on the battery.
- Do not wet the coin type lithium battery or the battery case compartment interior.
- Check the \oplus and \ominus of the battery, and insert them correctly.
- Remove used up battery as soon as possible.
- Use battery that are within the specification's recommended expiry date.
(Failure to do so may cause injury or accidents due to battery heat generation, explosion or fluid leakage.)

Accidental ingestion



- Do not leave the supplied accessories within reach of infants or toddlers.
(Doing so may result in accessories being swallowed by mistake.)
 - Consult a doctor immediately if you suspect that an accessory has been swallowed.

Safety Precautions Please make sure to follow these instructions (continued)

CAUTION

Installation location



- Do not block the purified water outlet.
- Do not connect a hose or other appliance to the purified water outlet.
(Doing so may result in water leakage or malfunction.)
- Do not connect the product to a hot-water supply system which does not have a non-return valve (a valve for preventing the backflow of water).
(Doing so may result in malfunctioning of the water heater.)
- Do not connect the product to a mains stop type of water heater (with a structure that makes it impossible to shut off the water at the hot water outlet such as an instantaneous water heater).
(Doing so may result in malfunctioning of the water heater.)

Storing purified water



 
- Use purified water immediately after it is produced. When storing it for future consumption, pour into a clean sealed container, and consume it within 1 day if it is kept at room temperature or within 2 days if it is kept in the refrigerator.
(For chlorine (disinfectant) contained within tap water is removed, which result in general bacteria to increase more and cause health problems.)

CAUTION

Non-consumable purified water, applications



- **Do not use purified water for the care of fish or other pets.**
(The environment may change as a result, and the fish, etc. may die.)



- **Every day before using the product for the first time, allow about 0.5 liters of water to pass through it (this will take about 20 seconds).**
- **If the product has not been used for two or more days, allow about 8 liters of water to pass through it (this will take about 5 minutes).**
(Drinking water left inside the main unit may cause health problems.)

About users of the product



- **This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.**
- **Children should be supervised to ensure that they do not play with the appliance.**
(Risk of accident or injury.)




Operating Precautions

Water supply

- **Do not drink water in case of the following conditions.**
 - Water which is very turbid, or containing a great deal of red rust
(Doing so will significantly shorten the cartridge life.)

Usage

- **The temperatures of the water that can be used for this product are shown in the table below. Be sure to follow these temperatures.**
(If not observed, may result in malfunction or may cause total trihalomethanes absorbed in the cartridge to be released.)

Selector lever position	Water temperature
 (Purified)	Under 35 °C
 (Unpurified)	Under 80 °C
 (Shower)	


EN8

Installation location

- **Do not install the water purifier in the following places.**
 - Near hot areas such as heating appliances (above 60 °C)
(Doing so may cause it to become deformed.)
 - In an area in direct sunlight or where it may be exposed to wind and rain
(Doing so may cause incorrect operation or malfunctions.)
 - Where it may freeze
(Doing so may cause cracking in the water pipes or cartridge.)
 - Where it may be covered with oil
(Doing so may cause cracking in the Water Purifier.)
- **Do not install the product to a faucet used only for hot water.**
(Doing so may cause malfunction.)


Product Composition

TK-CJ600

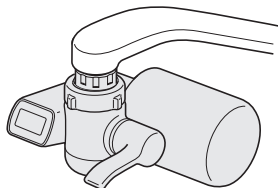

- With LCD display
- Cartridge replacement guidelines:
Approx. 1 year

TK-CJ300

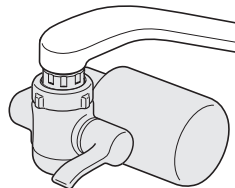

- Cartridge replacement guidelines:
Approx. 1 year

- Except for limited exceptions, TK-CJ300 are used for the water purifier illustrations in this manual.

Names and Functions of the Parts

Main unit

TK-CJ600


LCD display



- Displays the volume of water (guideline) that the product can process until cartridge replacement is required. (P. EN37)



- Indicates a malfunction of the main unit (P. EN42)

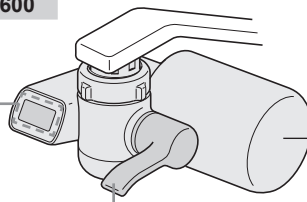


Cartridge
(P. EN36 – EN40)

Selector lever


Using purified water (💧)

Purified water is discharged from the purified water outlet.

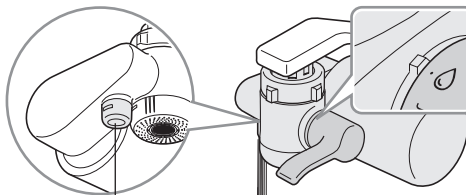


Purified water outlet

TK-CJ300

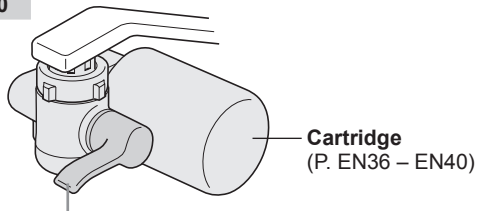

Using unpurified tap water (T / T)

Discharge water from the unpurified water outlet.

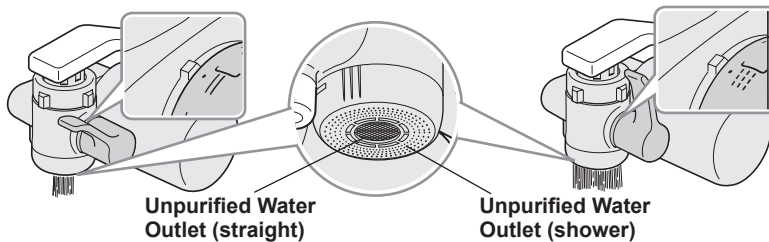

English

EN11

Steps to Take Before Operation

Installation 1

Checking the Main Unit and Supplied Accessories


P. EN14

Installation 2

TK-CJ600

Insert (replace) a Lithium Battery into the Main Unit


P. EN15 – EN16

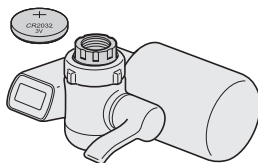

Installation 3

Checking the Faucet

P. EN17 – EN19

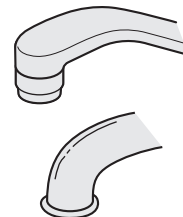


EN12

Installation 4

Installing the Water Purifier

The installation method differs depending on the shape of the faucet.

P. EN20 – EN26

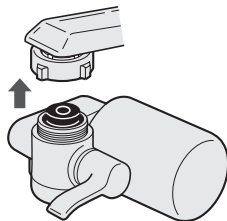


Installation 5

Checking after Installation

Run purified water for about 3 or 4 minutes to expel the air inside the main unit, and check for any malfunctions.

P. EN27 – EN28

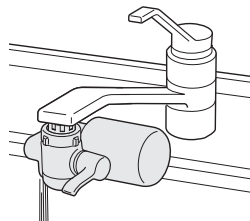


English

EN13

Installation 1 Checking the Main Unit and Supplied Accessories


If any items are missing, please contact the dealer from whom you purchased the product.

Main unit

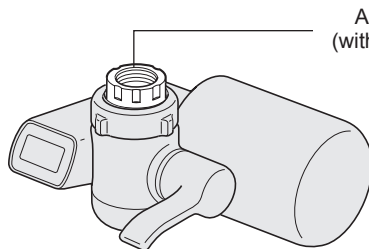

TK-CJ600

Adaptor
(with gasket)

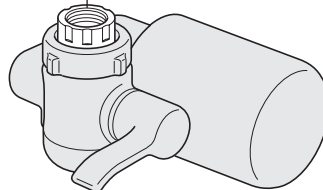

TK-CJ300

Supplied accessories



Installation Adaptor
(with 4 screws)



Bushing
(with gasket)



[TK-CJ600 only]
Coin type lithium battery

Model No.: CR2032 (Commercial item)

- The battery included in the package is for test use and may have a short life.


Insert (replace) a Lithium Battery into the Main Unit

- It displays the volume of water (guideline) that the product can process until cartridge replacement is required.
- When replacing the battery, it is recommended to remove the water purifier from the faucet.
- Do not wet the coin type lithium battery or the battery case compartment interior.
(Failure to do so may cause injury or accidents due to battery heat generation, explosion or fluid leakage.)

1 Open the battery cover.


- Before opening the battery cover, carefully wipe the unit free of all moisture.

Turn the cover counterclockwise using a medal or a similar object. (Do not use the battery included in the package)

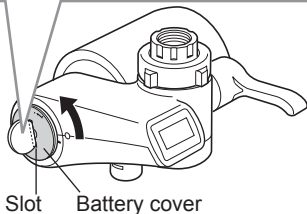


2 Insert battery.

- When replacing the battery, remove the old battery.
- Inserting the battery...

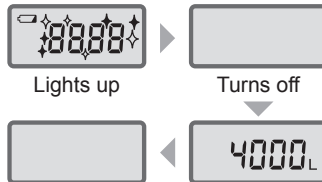

The "+" mark must be visible


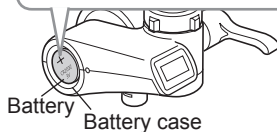


Proceed to **Step 3**
on the next page


Insert (replace) a Lithium Battery into the Main Unit (continued)

3 Close the battery cover.

- ① Align the installation position.
- ② Push and turn the unpurified water outlet cover clockwise to the lock position.

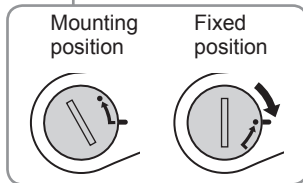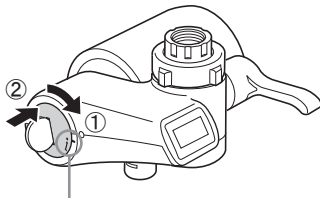

■ Battery replacement timing

Replace the battery when the battery replacement mark () appears on the LCD.



Flashes

It is almost time to replace the battery.



Lights up

The battery needs to be replaced.

Please replace it with a new battery.

Note

- Approximate battery life
 - **About 1 year**
 - The battery included in the package is for test use and may have a short life.
- Replacement battery
 - This product uses the commercially available, coin type lithium battery CR2032.
- Replacing the battery will not reset the cartridge replacement guideline.

Installation 3 Checking the Faucet


- Bear in mind that Panasonic will not be liable for any product malfunctioning or accidents which result from the failure to install or operate the product properly.

Faucets onto which the product can be installed

- **Faucets with a thread on the outside**

Thread diameter: 22 mm


Installing the Water Purifier (P. EN20 – EN21)

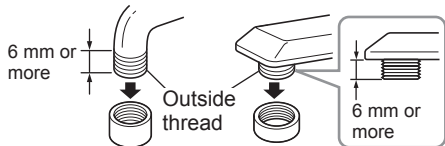

- **Faucets with a thread on the inside**

Thread diameter: 24 mm


Installing the Water Purifier (P. EN22 – EN23)

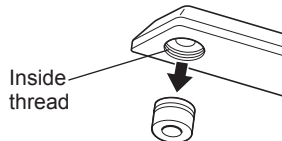

- **Faucets without an aerator**

Installing the Water Purifier (P. EN24 – EN26)


<Flared faucets>

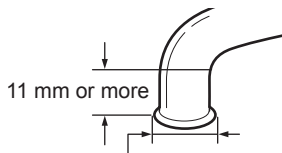

Flared:

13 mm or more, less than 24 mm

<Straight faucets>

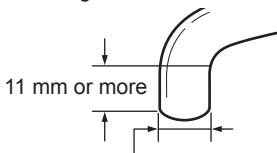

Diameter of faucet end:

 

13 mm or more, less than 24 mm

Checking the Faucet (continued)

Faucets that require an optional accessory to install the product

With the following kinds of faucets, an optional accessory is required to install the product.
Purchase the optional accessory from your dealer.

- Large faucets

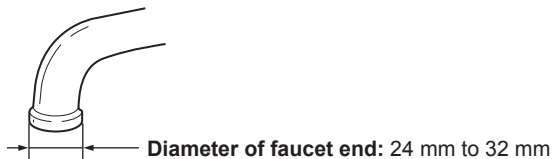

Optional accessory

Large-diameter Installation Adaptor (P. EN47)

Model No.: WTK7205X7378


For details on installation, read carefully through the instructions that accompany the accessory.

Faucets onto which the product cannot be installed

Bear in mind that it will not be possible to install the product onto custom designed faucets or faucets with the wrong thread diameter (which is not 22 mm) or wrong pipe diameter in addition to what is shown below. Neither is it possible to install the product if the main unit comes into contact with the faucet.


● Plastic faucets

Installation will cause the plastic area at the end of the faucet to crack.

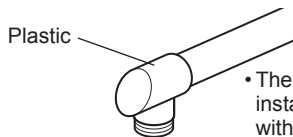


- The product can be installed onto faucets with a metal thread.


● Faucets whose end area measures 10 mm or less

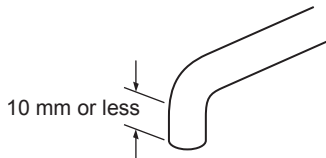

● Faucets with a shower nozzle

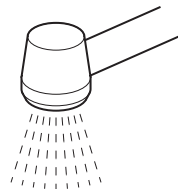

● Faucets with a sensor

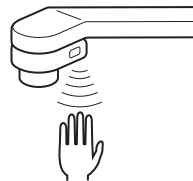



Installing the Water Purifier

Faucets with an outside thread (thread diameter: 22 mm)


Important

- Do not use a tool to tighten up the nut.
(Doing so may damage the nut.)
- Please store any unused parts instead of disposing of them.
(They may be used when relocating or replacing the faucet.)

1 Remove the aerator.

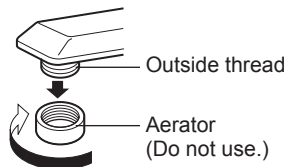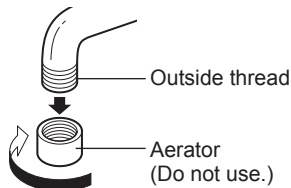

2 Remove the nut and adaptor.

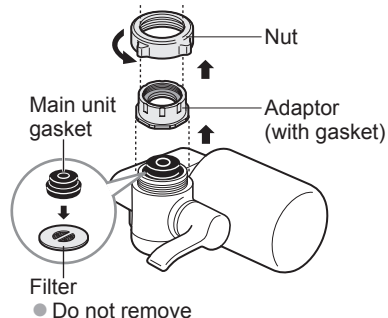


EN20


Upon completion of installation, check that the main unit does not easily rotate and that there is no play.

3 Attach the nut and adaptor.


- Fully tighten by hand

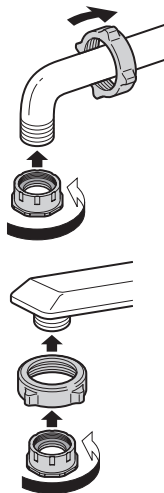

4 Turn the nut manually, and tighten it securely.

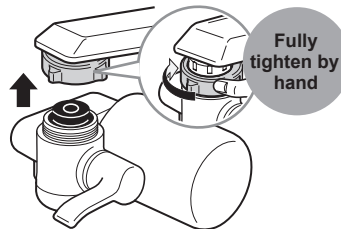

- If it is difficult to turn
Turn the water purifier instead.

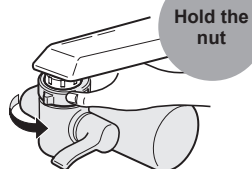

English

EN21

Faucets with an inside thread (thread diameter: 24 mm)

Important


- Do not use a tool to tighten up the nut. (Doing so may damage the nut.)
- Please store any unused parts instead of disposing of them. (They may be used when relocating or replacing the faucet.)

Accessories used




Bushing
(with gasket)

1 Remove the aerator.

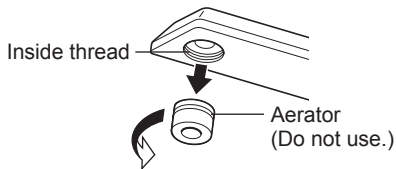


2 Screw in the bushing. Insert it into the water purifier.

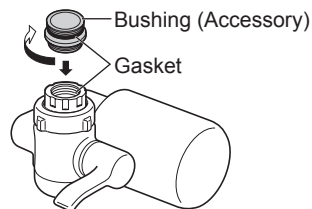

Upon completion of installation, check that the main unit does not easily rotate and that there is no play.

3 Attach the water purifier and tighten it securely.

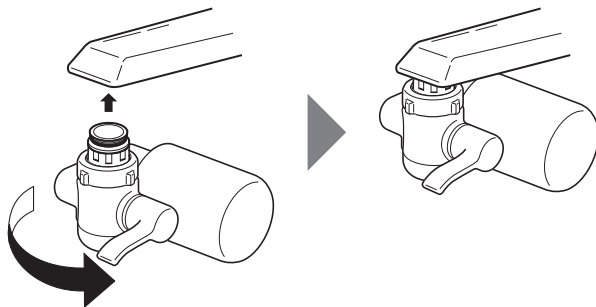

English

EN23

Faucets without an aerator


- Important**
- Do not use a tool to tighten up the nut. (Doing so may damage the nut.)
 - Please store any unused parts instead of disposing of them. (They may be used when relocating or replacing the faucet.)

Accessories used




Installation Adaptor
(with 4 screws)

1 Remove the nut and adaptor.

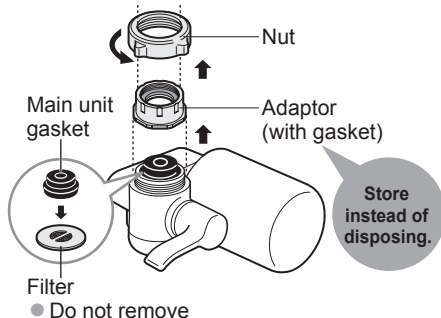

2 Insert the installation adaptor with screws removed in place of the adaptor, and gently tighten the nut.

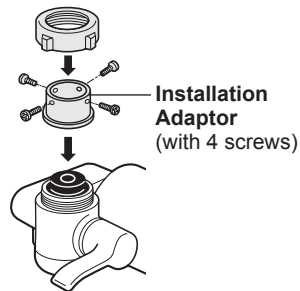

Upon completion of installation, check that the main unit does not easily rotate and that there is no play.


3 Loosely tighten the screws, and loosen the nut.



Loosely tighten the screws (x4).

3 mm to 4 mm

Until there is a 3 mm or 4 mm gap

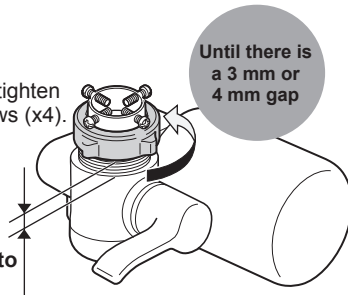


Proceed to **Step 4** on the next page


EN25

Installation 4 Installing the Water Purifier (continued)

4 While pushing the main unit up, install it onto the faucet.

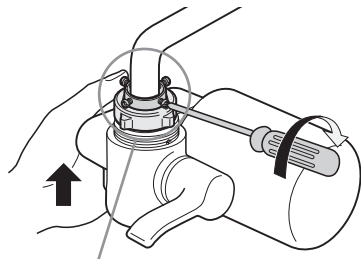


5 Turn the nut manually, and tighten it securely.

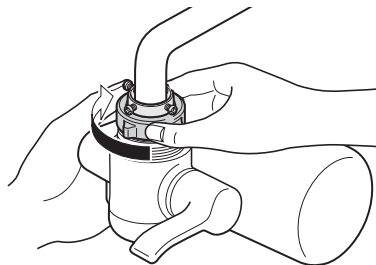

1. Tighten the two rear screws by hand until they touch the pipe **in such a way that the pipe is positioned in the center of the installation adaptor.**

2. Use a screwdriver to tighten the two remaining screws.

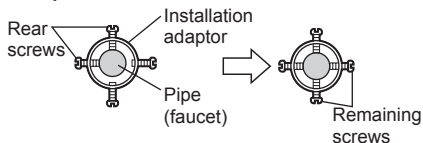


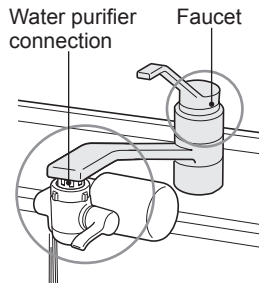
EN26

Checking after Installation

- 1 Run purified water for about 3 to 4 minutes to expel the air inside the main unit.

 
How to run purified water
(P. EN29 – EN30)



- ① Set the selector lever to “
 - 2 Check the items on P. EN28 for any malfunctions.



- 3 Mark the month when the cartridge was replaced using a permanent marker.

E.g.:
Replaced in March



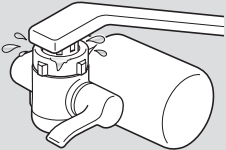Check items	Inspection points and measures in case of abnormality	Reference page
<p>Is water leaking from the purifier connection area?</p> 	<ul style="list-style-type: none"> ▶ ● Is the water purifier installed securely onto the faucet? → Reconfirm the “Installation Procedures” to install the product securely. *If the adaptor is loose, rotating the water purifier will tighten up the mounting. ▶ ● Are the parts inside the water purifier assembled properly? → Assemble the parts properly. ▶ ● Is the end of the faucet (such as insulation cap) chipped or cracked? → Consult a plumber. 	<p>P. EN20 – EN26</p> <p>P. EN20 – EN26</p> <p>—</p>
<p>Is water leaking from the faucet?</p> 	<ul style="list-style-type: none"> ▶ ● Is the faucet gasket being used an old one? → Consult a plumber. 	<p>—</p>

EN28


Operation

Using purified water


Always use water with a temperature under 35 °C.
(If not observed, may result in cartridge malfunction.)

1 Set the selector lever to “”.

- Using unpurified tap water (P. EN11)

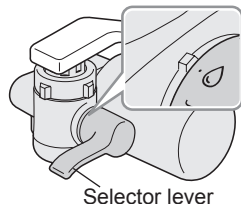

2 Turn on the water faucet to let the water flow.

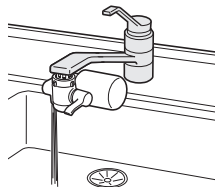

Proceed to **Step 3**
on the next page

TK-CJ600

During use



(Animation display)

For 10 seconds after turning off the faucet



Displays the timing for cartridge replacement with a remaining volume that can be purified. (P. EN37)

10 seconds after turning off the faucet

To conserve battery power, the LCD will shut off about 10 seconds after turning off the faucet. (Turns back on when water passes again)

- When the water flow is 0.6 liter/minute or less, the water is considered to have been turned off and the remaining volume that can be purified is displayed.

Operation (continued)

Using purified water


- 3 When finished, turn off the water faucet.

Using unpurified tap water

Always use water with a temperature under 80 °C.
(If not observed, may result in malfunctioning of the water purifier.)

- 1 Set the selector lever to “” or “”.

- 2 Turn on the water faucet to let the water flow.

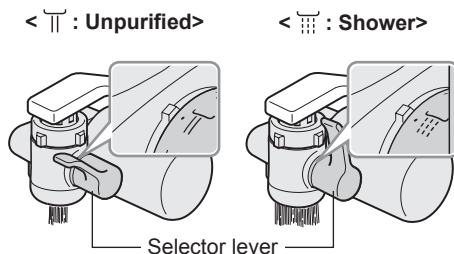


- 3 When finished, turn off the water faucet.

Maintenance

- Note**
- Do not use detergents, cleansers, paint thinners, benzene, alcohol, kerosene, etc. If used by accident, wipe the product with a damp cloth to remove the detergent, etc. on the surface.
(The detergent may get mixed in the water, cause the resin to crack or lead to discoloration/deformation.)
 - Do not use a metal brush, etc. (Doing so may cause scratches.)
 - Do not use a tool to tighten up the nut.
(Doing so may damage the nut.)

Main unit

Moisten and wring a soft cloth, and clean the product with it.

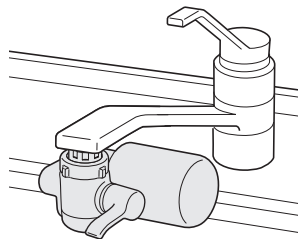

As often as once a week

English

EN31


Maintenance (continued)

The purified water outlet cover and unpurified water outlet cover can be removed for cleaning.

Purified water outlet cover


■ How to remove

Turn to remove

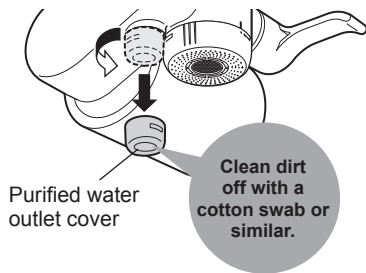

■ How to attach

Turn to attach

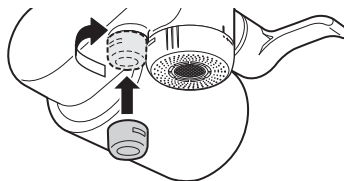


- Water splashes remaining on the product may cause stains and mold growth. Cleaning after each use or regular cleaning is recommended.

EN32

Unpurified water outlet cover

■ How to remove


Turn to remove

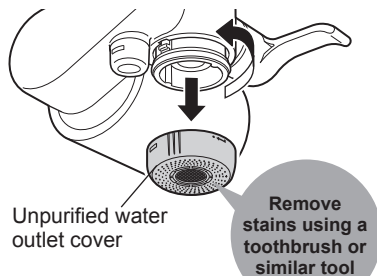


As often as once a week

■ How to attach

① Align the mounting position

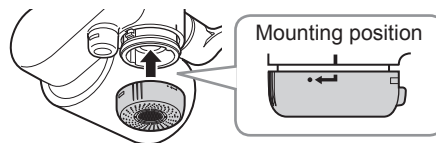

② Push and turn the cover to the fixed position

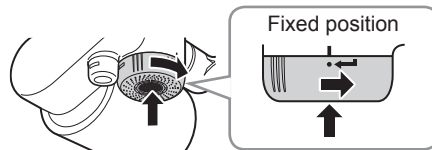



English

EN33

Maintenance (continued)

Water purifier connection area


Remove the water purifier, then rinse the filter and water intake.

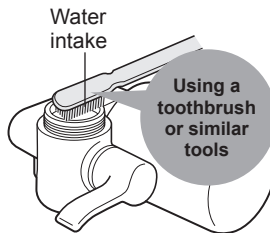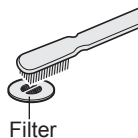


The water flow may decrease when the filter in the main unit connection area becomes clogged with impurities.

■ How to remove

① Set the selector lever to “”

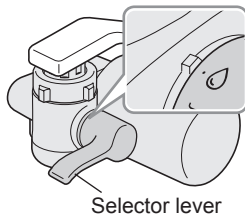

② Loosen the nut, remove the Water Purifier, and take out the Gasket and filter.

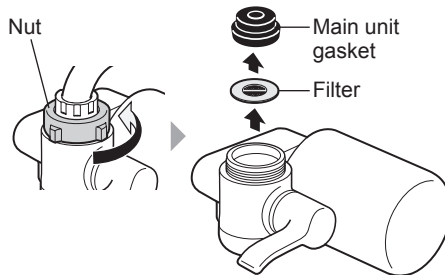


Once a year

■ How to attach


- Be sure to follow this order.

① Reinstall

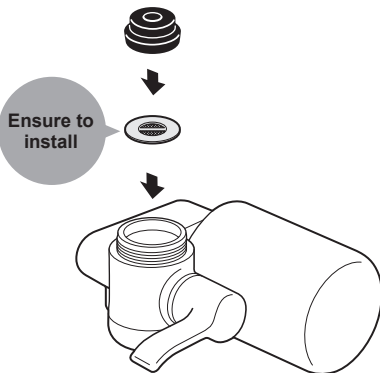

② Securely tighten the nut

③ After mounting the main unit, set the lever to "II" or "III" and allow water to flow for about 5 seconds.

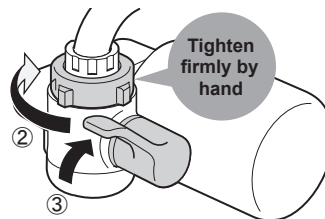

English

EN35

Replacing the Cartridge

When the service life of the cartridge is to be expired or the purified water ability is reduced, please replace the cartridge with a new one.



Replacement cartridge
Model No. TK-CJ600C-EX
(P. EN47)

Cartridge replacement standard

There are 4 types of replacement standards. If one of the following conditions is met, please replace the cartridge.

The using time
is About 1 year.


The total run
through water
volume reaches
4 000 liters.*

The flow of purified
water suddenly
decreases.
(The cartridge is
blocked.)

When there is
unpleasant smell or
taste.

*Purification Capacity (P. EN48 – EN49)

- Despite the guideline above, the flow rate may significantly increase and replacement will be needed earlier. (The flow rate decreases quicker when the tap water contains more clogging substances.)

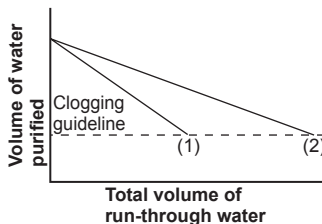


- (1) Water containing many clogging substances
- (2) Water with standard quality

EN36

■ **How to confirm [TK-CJ600 only]**

The timing for replacement is displayed for 10 seconds each time after turning off the faucet.

E.g.: 1 995 L
remaining

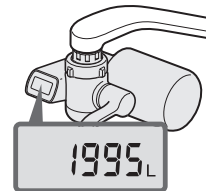

If the cartridge remaining volume flashes



150 L remaining

**The replacement time is approaching.
Please prepare a new cartridge.**

- When the remaining volume until replacement drops below 150 liters, the as shown on left display will flash.

If “U26” is displayed



Please replace.

- When there is no remaining volume, the following indications will alternately appear.

English

EN37


Replacing the Cartridge (continued)

How to replace the cartridge

- Before replacing the cartridge, turn off the faucet. Do not run water through with the cartridge removed. (Doing so will cause the water to overflow.)


1 Remove the old cartridge.

- Remove the cartridge in the sink.
(Water will drip)
- ① Turn the cartridge to the direction indicated by the arrow.
- ② Remove.

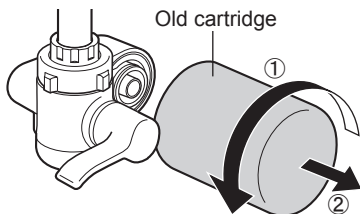

2 Install the new cartridge.

 
- ① Mark the month when the cartridge was replaced using a permanent marker.



- Dispose of the used cartridge in accordance with the applicable ordinances in the area concerned. (The material of the cartridge cover is ABS. Refer to “Filter material” in “Specifications” for the type of the filter materials (P. EN49).)


② Align the mounting position and push in cartridge to the direction indicated by the arrow.

- Align the tab position and size.

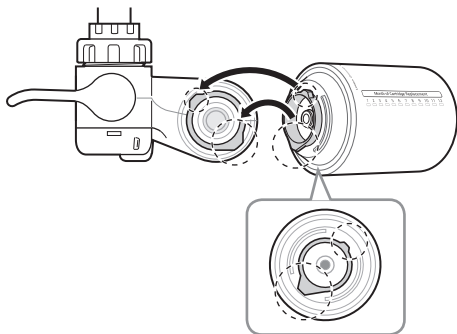

③ Slowly turn it in the direction of the arrow until it stops.

- Do not over-tighten the cartridge. (Doing so may damage the cartridge mount and cause water to leak.)

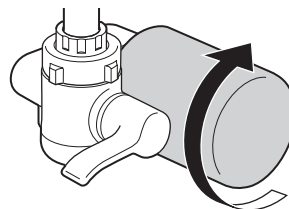

Proceed to **Step 3**
on the next page

Replacing the Cartridge (continued)


How to replace the cartridge

- 3** **TK-CJ600**
Press the reset button (for about 3 seconds).

(Do not press the button with pointed objects such as a toothpick. Use an object with a rounded tip, such as the rounded end of a toothpick.)


- The cartridge volume usage (guide) display returns to the cumulative volume.
- Always press the reset button even if the cartridge is replaced earlier than the suggested time.

(This is to ensure that the next replacement guideline is displayed correctly.)

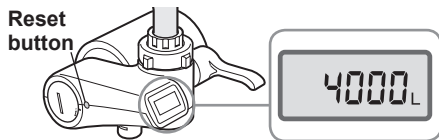



- 4** **Run purified water to check (for about 3 – 4 minutes).**

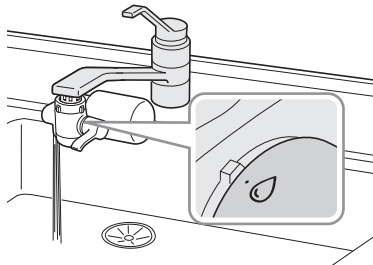- Check that no water is leaking from the cartridge mount when the water passes the product.




When the Water Supply is Cut Off

- It is not available. If the water is cut off during use, turn off the faucet.
- When the water supply is restored, set the selector lever to “” or “”, and first run unpurified water (tap water) into the sink to run out the air and turbid water inside the pipes.
(This is to prevent the cartridge usage period from becoming considerably shorter.)

When Not Using the Product for a Long Period of Time

- **When not using the product for 1 week or longer**
 - ① Remove the cartridge. (P. EN38)
 - ② Place them in a sealed plastic bag and store them in the refrigerator.
- **When not using the product for 1 month or longer**
 - ① Remove the cartridge. (P. EN38)
 - ② Place them in a sealed plastic bag and store them in the refrigerator.
 - ③ Remove the battery. [TK-CJ600 only]

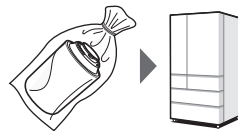


Note

- Storing the cartridge for a long period of time may cause the quality of the water inside to deteriorate, so replacing the cartridges is recommended.
- **Resume using the product**
 - ① Install the cartridge. (P. EN38 – EN40)
 - ② Insert the battery. (when not using for approx. 1 month or longer). (P. EN15 – EN16)
 - ③ Run water for about 3 minutes and check that there are no water leaks and that it is operating normally with no irregular displays.



EN41

If problems occur TK-CJ600

Error code	Cause and remedial action
U26	It is time to replace the cartridge due to the cumulative volume used. The cumulative volume exceeds the replacement guideline of 4 000 liters. →Replacing the Cartridge (P. EN38 – EN40)
 U01	The battery needs to be replaced. →Replace the battery (Coin type lithium battery: CR2032). (P. EN15 – EN16)

- The display does not disappear after following the steps above
Please contact the dealer from whom you purchased the product.

Q&A

	Question	Answer
Cartridge	I want to replace the cartridge. What type should I use?	Use the cartridge with the TK-CJ600C-EX model number. (P. EN47)
Water	What is the maximum water temperature that can be used for this product?	Always use water with a temperature under 35 °C. (P. EN8) When you set the bypass selector on “  ” or “  ”, you can use hot water up to 80 °C.

Q&A (continued)

	Question	Answer
Purified water	Is it all right to drink purified water if you are taking medication?	Purified water can be used for drinking and cooking in addition to taking medication.
	How long does purified water last?	Purified water should be used within • 1 day at room temperature • 2 days in refrigerator (fill in a clean, sealed container) (For chlorine (disinfectant) contained within tap water is removed, which result in general bacteria to increase more and cause health problems.)
Other	What is the white powder that's deposited on the inside of the kettle and thermos flasks?	It is the calcium from the water. There is no problem if you drink the water, but if it bothers you, clean the containers concerned. If the white powder is not removed by cleaning, obtain some citric acid from a pharmacy, mix 50 g with 1 liter of water, leave to soak in the containers for 2 or 3 days, and then rinse the deposit off.

Troubleshooting

First observe information on P. EN45 – EN46.

If the problem persists after checking the following...

Please contact a dealer or subordinate service station of Panasonic for handling.

Phenomenon		Cause and solution
Water leakage	Purifier connection area Faucet area	<ul style="list-style-type: none"> ● See P. EN28.
	Cartridge mount area	<ul style="list-style-type: none"> ● Is the cartridge securely mounted? (P. EN38 – EN40)
Purified water outlet	The water flow is reduced, or the water cannot flow out.	<ul style="list-style-type: none"> ● Is the faucet turned all the way on? ● Is the filter of the Main unit clogged? → Perform maintenance. (P. EN31 – EN35) ● Has the cartridge been installed properly? (P. EN38 – EN40) ● Has the water supply been cut off? (P. EN41) <p>If the water flow is not restored even after checking, the cartridges may be blocked. Please replace them. (P. EN38 – EN40)</p>
	There is less water flowing out after replacing the cartridges.	<ul style="list-style-type: none"> ● After replacement, did you flow water for about 3 to 4 minutes? (P. EN40) (This is required to exhaust air inside the cartridges.)

Troubleshooting (continued)

Phenomenon		Cause and solution
Odor, taste, cloudiness, or discoloring	The unpleasant smell, taste or impurities cannot be removed.	<ul style="list-style-type: none"> ● The filter capacity of the cartridge has reduced. →Please replace the cartridge. (P. EN38 – EN40)
	The purified water looks like it is sparkling.	<ul style="list-style-type: none"> ● This is caused by substances dissolved in the water (mainly minerals) being separated out. →There is no problem using the product.
TK-CJ600 Display	Turns off suddenly/ Nothing is displayed.	<ul style="list-style-type: none"> ● Is the battery flat? (P. EN16) ● The display turns off automatically when not in use to prevent the battery going flat. (P. EN29)
	The cartridge replacement guideline is displayed when the water is running.	<ul style="list-style-type: none"> ● Is the flow rate too low? (less than approx. 0.6 liter/min) →The flow rate may have decreased due to a change in water pressure. Run the water with higher flow rate.
	The “U26” code is not cleared even after the cartridge is replaced.	<ul style="list-style-type: none"> ● Did you press the reset button? (P. EN40)


EN46

Optional Accessories

Please purchase from a dealer or subordinate service station of Panasonic.

Consumables

- Replacement cartridge (P. EN36)
Model No.: TK-CJ600C-EX

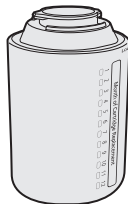


Optional accessory

- Large-diameter
Installation adaptor
Model No.: WTK7205X7378



Mark position of the manufacturing number

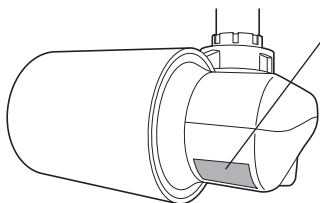

The manufacturing number is marked on this location.

E.g.: 2 2 0 4 0 1

Day : two digits

Month : two digits

Year : last two digits of the year

Specifications

Product name	TK-CJ600	TK-CJ300
Dimensions (width × depth × height)	135 (W) × 120 (D) × 75 (H) mm	125 (W) × 110 (D) × 75 (H) mm
Weight	Approx. 350 g (Approx. 490 g when full of water)	Approx. 310 g (Approx. 450 g when full of water)
Water temperature when using the main unit	Purified water: Under 35 °C (Unpurified/shower: Under 80 °C)	
Minimum usable dynamic water pressure	70 kPa	
Filtration flow volume	1.8 L / min [At water pressure 100 kPa]	
Cartridge Installed In the unit	TK-CJ600C-EX	
Purification capacity	Free residual chlorine	4 000 L (*1)
	Turbidity	4 000 L (*2)
	Total trihalomethane	4 000 L (*1)
	Bromodichloromethane	4 000 L (*1)
	Dibromochloromethane	4 000 L (*1)
	Bromoform	4 000 L (*1)
	Tetrachloroethylene	4 000 L (*1)
	Trichloroethylene	4 000 L (*1)
	CAT (pesticide)	4 000 L (*1)
	2-MIB (mold smell)	4 000 L (*1)
	Soluble lead	4 000 L (*1)
	Benzene	4 000 L (*1)
	Geosmin (mold smell)	4 000 L (*1)
	Phenols	4 000 L (*1)
PFOS and PFOA	4 000 L (*3)	

EN48

Product name	TK-CJ600	TK-CJ300
Removable substances	Iron (particulate form)	Can be removed. (*4)
	Aluminum (neutral)	Can be removed. (*4)
Replacement timing guideline for the filter (cartridge)	Approx. 1 year (10 L of purified water used a day) [Approx. 6 months (20 L of purified water used a day)] (*5)	
Type of material used	ABS resin	
Filter material	Non-woven fabric filter, Activated carbon, Ceramic, Hollow fiber membrane	
Components which cannot be filtered out	Iron dissolved in water, heavy metals (silver, copper, etc.), salt (seawater)	
Power supply for LCD display	Coin-Type Lithium Primary Battery	—
Battery	CR2032 (Commercial item)	—
Operating time	About 1 year (The battery included in the package is for test use and may have a short life.)	—

- All figures given are for a water temperature of 20 °C.
- This product cannot convert hard water into soft water.
- (*1) This value is for a removal rate of 80 % based on JIS S 3201 tests.
- (*2) This value is for a filtration flow volume of 50 % based on JIS S 3201 tests.
- (*3) This value is for a removal rate of 80 % based on specification standard tests (JWPAS B standards) stipulated by the Japan Water Purifier Association (JWPA).
- (*4) This substance is for a removal rate of 80 % based on specification standard tests (JWPAS B standards) stipulated by the Japan Water Purifier Association (JWPA).
Note that it is not stipulated as part of purification capacity.
- (*5) This may be significantly shorter depending on the volume of water used, water quality and water pressure.

目錄

安全注意事項	TC 3	使用方法	TC29
使用上的注意事項	TC 8	維修保養	TC31
關於產品的構成內容	TC 9	更換濾芯	TC36
各部名稱與作用	TC10	停水時	TC41
使用前的流程	TC12	長時間不使用時	TC41
安裝 1		當出現以下顯示時 TK-CJ600	TC42
確認本體與配件	TC14	Q&A	TC43
安裝 2 TK-CJ600		故障排除	TC45
將鋰電池放入本體 (更換)	TC15	選購品	TC47
安裝 3		規格	TC48
查看水龍頭	TC17		
安裝 4			
安裝本體	TC20		
安裝 5			
安裝後的確認	TC27		

本濾水器的更換用濾芯如下

- 型號:TK-CJ600C-EX
更換濾芯 (TC36頁)

安全注意事項 請確保依照這些指示

以下說明務必遵守的事項，以免造成傷人意外及財物受損。

- 以下將根據嚴重性，分別說明於錯誤使用時可能引起之危害或損害。



警告

表示嚴重受傷亡。



注意

表示受傷風險或財產損毀。

- 符號分類說明如下。(以下為符號範例。)



此符號表示禁止。



此符號表示謹遵條件。



警告

供水



- 請勿使用飲用的水(自來水等)以外水源。
(避免危害身體健康。)
- 此本體只能去除 TC48 ~ TC49 頁所列明的有害物質，亦無滅菌效果。

安全注意事項 請確保依照這些指示 (接續)

警告

意外吞下 **TK-CJ600**



- 切勿將鋰電池放置於兒童拿到的地方。
(避免意外吞下。)
- 如不慎誤服，應立刻求診。



注意

禁止拆卸



- 請勿拆解、修理或改造本機。
(避免漏水或故障。)
- 檢查或維修請聯絡經銷商或 Panasonic 直屬服務站。

注意

有關電池 TK-CJ600



- 切勿棄置電池於火中、造成短路或拆開電池。
(否則可能會燙傷或受傷。)



- 應時刻遵守電池上標示的注意事項。
- 請避免鋰電池或電池盒內部受潮。
- 確認電池的正負極，並置於正確位置。
- 應儘快取出用完的電池。
- 應使用沒有過期的電池。
(否則電池可能會發熱、破裂或滲出液體，造成傷害或意外。)

意外吞下



- 切勿將配件放置於兒童拿到的地方。
(避免意外吞下配件。)
- 萬一吞下配件，請立即找醫生。

安全注意事項 請確保依照這些指示 (接續)



注意

安裝場所



- 請勿阻塞過濾水口。
- 過濾水口請勿連接水管或其他器具。
(避免漏水或故障。)
- 請勿連接於熱水器等無法關閉熱水構造的地方。
(避免造成熱水供應設備故障。)
- 請勿連接於無附設防止逆流閥的熱水供應設備 (構造如同快速熱水器，無法於熱水出水口關水掣)。
(避免造成熱水器故障。)

保存濾水



- 經過濾的水請立即飲用。放置時，請以乾淨的密閉容器裝入，常溫下可保存 1 天，冰箱內可保存 2 天。
(由於去除了水內的氯化物 (消毒劑)，細菌因而增加，影響健康。)

注意

 
關於無法飲用、使用的濾水與用途



- 切勿以濾水用於飼養魚或寵物。
(避免造成環境改變而導致養殖的魚類死亡。)



- 每天首次使用時先開水約 20 秒鐘 (約 0.5 L 水)。
- 如 2 天或以上沒有使用，應開水約 5 分鐘 (約 8 L 水) 後方才使用。
(如使用剩餘於本體內的水，或會影響健康。)



對使用者的注意事項



- 本產品不提供身體、感官或精神方面有殘缺或者缺乏經驗、知識的人員 (包括兒童) 使用的，除非由對其安全負責的人員監督或者指導他們如何使用產品。
- 請監管好兒童，以確保孩童不嬉玩產品。
(避免發生事故和受傷。)




使用上的注意事項

自來水

- 以下的水請勿使用。
 - 污濁或出現大量鏽跡的水
(將導致濾芯壽命大幅減短。)

使用方法

- 可使用的水溫如下表所示，請依該溫度使用。
(以免故障或吸附於濾芯的總三鹵甲烷被釋出。)


切換手把的位置	水溫
 (濾水)	不超過 35 °C
 (直式)	不超過 80 °C
 (淋灑式)	

安裝場所

- 請勿在以下場合安裝。
 - 靠近火的地方、靠近其它高溫處 (60 °C以上)
(避免造成變形。)
 - 直接照射陽光、或風吹雨打的地方
(避免造成錯誤操作或故障。)
 - 可能會凍結的地方
(避免水管或濾芯爆裂。)
 - 黏附油污的地方
(否則或會導致濾水器破裂。)
- 切勿安裝於熱水的水龍頭。
(避免造成故障。)


關於產品的構成內容

TK-CJ600

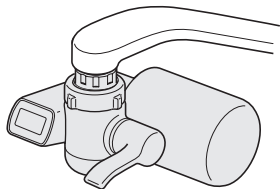

- 附視窗部
- 濾芯壽命：約1年

TK-CJ300

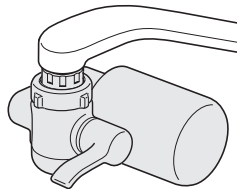

- 濾芯壽命：約1年

● 除了有限定的情況外，本書所使用的濾水器插圖為TK-CJ300。

各部名稱與作用

本體

液晶顯示


3995_L

- 顯示需要更換濾芯的剩餘流量 (剩餘用量)。(TC37頁)

U26

- 顯示本體出現異常。(TC42頁)


TK-CJ600

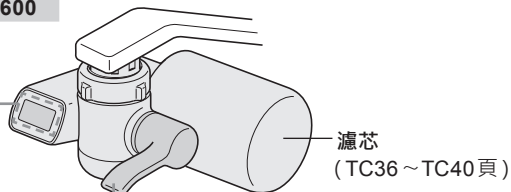

切換手把


使用濾水時 (滴)

從過濾水口排出濾水。

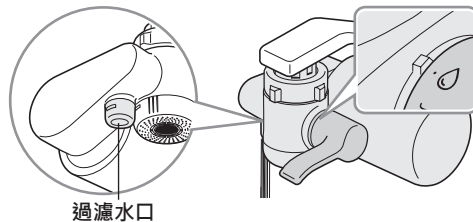

TC10


TK-CJ300

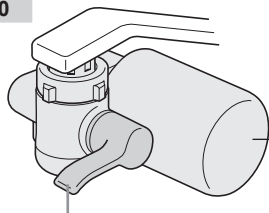

濾芯
(TC36~TC40頁)

使用自來水時 (Ⅱ / Ⅲ)

水從原水口流出。

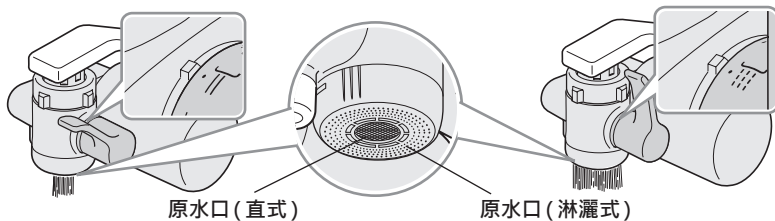

原水口 (直式)

原水口 (淋灑式)

中文 (繁體)

TC11

使用前的流程

安裝 1

確認本體與配件


TC14頁

安裝 2

TK-CJ600

將鋰電池放入本體
(更換)


TC15~TC16頁

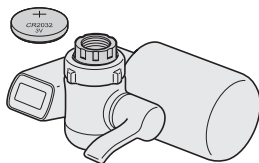

安裝 3

查看水龍頭

TC17~TC19頁

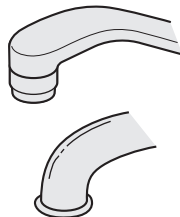


TC12

安裝 4

安裝本體

安裝方法視乎水龍頭的形狀。

TC20 ~ TC26 頁

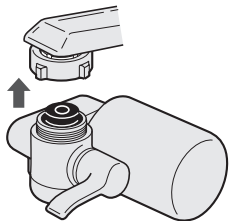


安裝 5

安裝後的確認

為排出本體裡的空氣，
應開出濾水約 3 ~ 4 分鐘，
並確認是否出現異常。

TC27 ~ TC28 頁

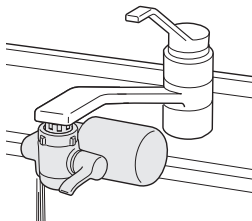


安裝 1

確認本體與配件


如有缺件，請向購買的經銷商洽詢。

本體

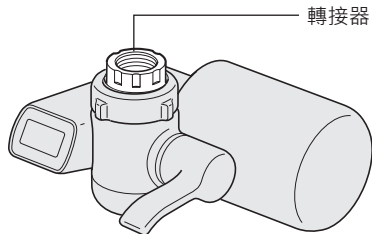

轉接器 (附有墊片)

TK-CJ600

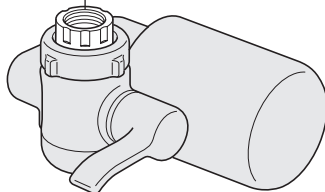

TK-CJ300

配件



安裝轉接器
(附有四個螺絲)



密封套
(附有墊片)



[僅TK-CJ600]
鋰電池

型號：CR2032 (市售電池)

- 附屬的電池僅供測試用，使用期間比較短。

TC14


將鋰電池放入本體 (更換)

- 顯示需要更換濾芯的剩餘流量 (剩餘用量)。
- 更換電池時，建議從水龍頭拆出濾水器更換。
- 請避免鋰電池或電池盒內部受潮。
(否則電池可能會發熱、破裂或滲出液體，造成傷害或意外。)

1 打開電池蓋。

- 打開電池蓋之前，請將水份擦乾。

向左轉動電池蓋。
(不要用附屬的電池)

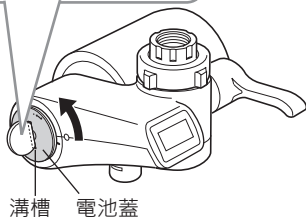


2 放入電池。

- 更換電池時，請先取出舊電池。
- 放入電池後...



亮燈

 熄滅




熄滅



顯示濾芯剩餘流量
(剩餘用量)
(約 10 秒)


可清楚看到 + 的符號

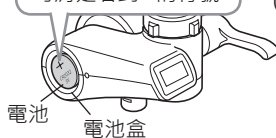


前往下一頁步驟 3

3 關上電池蓋。

- ① 對齊安裝位置。
- ② 按壓至固定位置，同時順時針方向轉動。

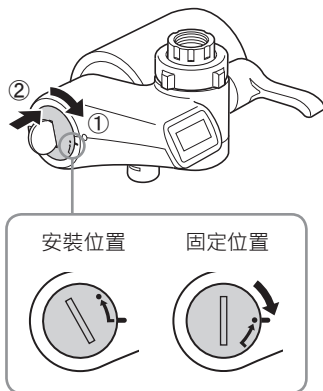

■ 更換電池

視窗部顯示更換電池的符號 () 後，請更換電池。



電池即將用完。

閃燈



電池已用完。
請更換新的電池。

亮燈

告知

- 更換時期的概略標準
 - 約 1 年
 - 附屬的電池僅供測試用，使用期間可能會較短。
- 更換電池
 - 請使用市售鋰電池 CR2032。
- 更換電池後，濾芯的更換標準不會被重新設定。


- 因安裝錯誤或不正確使用，而造成產品產生故障或發生事故時，本公司恕不負責。

可安裝的水龍頭

● 外螺紋水龍頭

螺紋直徑：22 mm


安裝本體 (TC20 ~ TC21 頁)

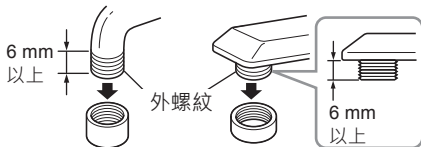

● 內螺紋水龍頭

螺紋直徑：24 mm


安裝本體 (TC22 ~ TC23 頁)

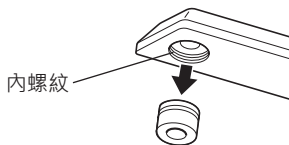


● 無螺紋的水龍頭

安裝本體 (TC24 ~ TC26 頁)

< 端部呈喇叭型的水龍頭 >

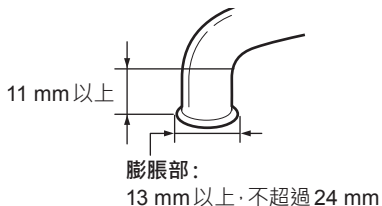

< 直型的水龍頭 >


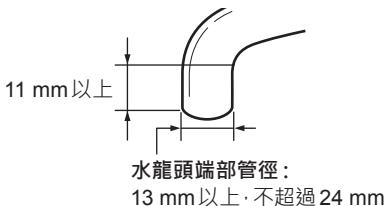


安裝 3 查看水龍頭 (接續)

需要選購配件才能安裝的水龍頭

安裝於下列水龍頭時需要選購配件。請向經銷商購買。

 ● 大型水龍頭

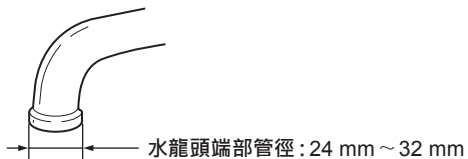

選購配件

大型水龍頭用金屬蛇口 (TC47頁)

型號：**WTK7205X7378**


安裝方法請詳閱附屬的說明書。

無法安裝的水龍頭


下列之外也有變形水龍頭，或螺紋直徑 (22 mm 以外)、管徑不同的水龍頭，可能無法安裝，請注意。此外，水龍頭會和本體接觸時也不能安裝。

● 樹脂製水龍頭


將導致水龍頭端部的樹脂破裂。

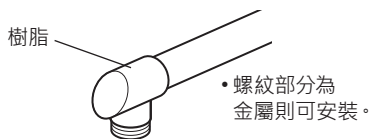


● 端部 10 mm 以下

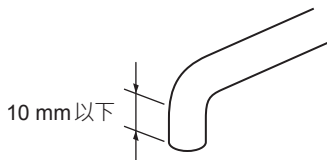

● 附有淋灑部

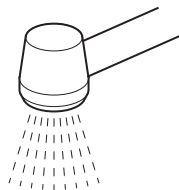

● 附有感測器


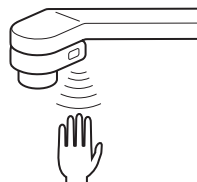


安裝 4 安裝本體

外螺紋水龍頭 (螺紋直徑: 22 mm)


- 注意事項**
- 扭緊螺帽時，請勿使用工具。
(避免螺帽破損。)
 - 即使是不使用的零件，也請妥善存放，切勿丟棄。
(搬屋或更換水龍頭時或會使用。)

1 拆除充氣器。

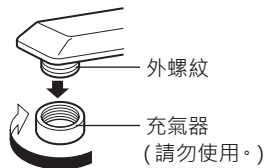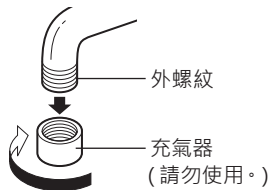

TC20


2 卸下螺帽和轉接器。

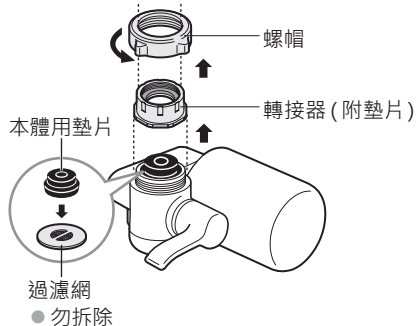


安裝後請確認本體不能輕易轉動、不搖晃。

3 安上螺帽和轉接器。

- 用手鎖緊

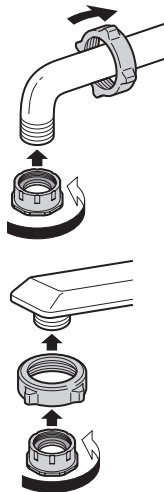


4 用手旋轉螺帽並確實鎖緊。

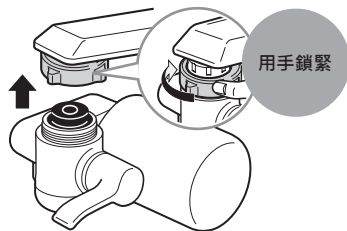

用手鎖緊

- 難以轉動時
轉動濾水器。

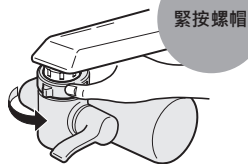

緊按螺帽

中文 (繁體)

TC21

安裝 4 安裝本體 (接續)

內螺紋水龍頭 (螺紋直徑: 24 mm)


- 注意事項**
- 扭緊螺帽時，請勿使用工具。
(避免螺帽破損。)
 - 即使是不使用的零件，也請妥善存放，切勿丟棄。
(搬屋或更換水龍頭時或會使用。)

使用配件




密封套
(附有墊片)

1 拆除充氣器。

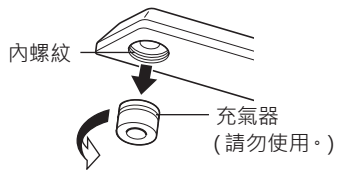


2 將密封套轉入濾水器。

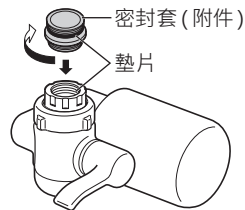

TC22

安裝後請確認本體不能輕易轉動、不搖晃。

3 安裝濾水器並轉緊。

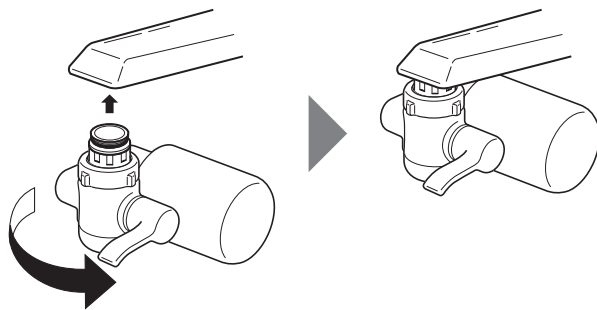

中文 (繁體)

TC23

無螺紋的水龍頭

注意事項


- 扭緊螺帽時，請勿使用工具。
(避免螺帽破損。)
- 即使是不使用的零件，也請妥善存放，切勿丟棄。
(搬屋或更換水龍頭時或會使用。)

使用配件



安裝轉接器
(附有四個螺絲)

1 卸下螺帽和轉接器。

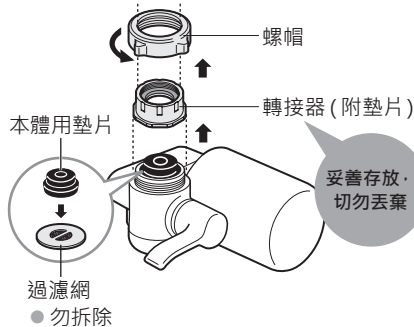


2 以拆除了螺絲的安裝轉接器取代轉接器，放上後輕輕轉上螺帽。



TC24

安裝後請確認本體不能輕易轉動、不搖晃。

3 先暫時緊固螺絲，再鬆動螺帽。

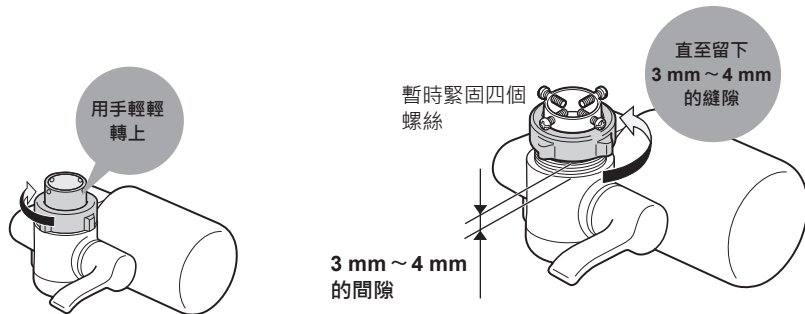


前往下一頁步驟4

中文 (繁體)


TC25

安裝4 安裝本體(接續)


4 將本體用力推入到水龍頭上安裝。

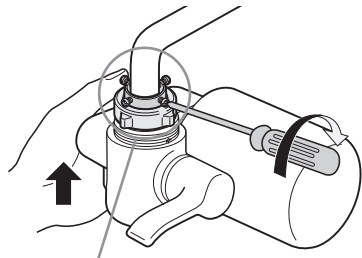

5 用手旋轉螺帽並確實鎖緊。

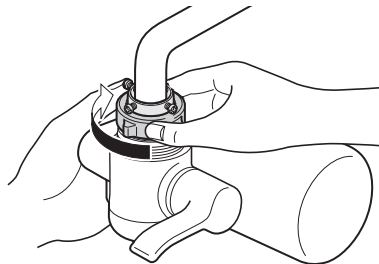


1. 用手緊固內方的2個螺絲至接觸到水龍頭，並使水管保持於中央。
2. 用螺絲起子緊固其餘2個螺絲。

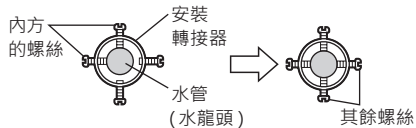


- 1** 請讓濾水進行通水約 3 ~ 4 分鐘，以利排出本體內的空氣。

濾水的排出方法 (TC29 ~ TC30 頁)


- ① 切換手把切換至「」
- ② 打開水龍頭讓水流出



- 2** 確認 TC28 頁所列的項目是否出現異常。

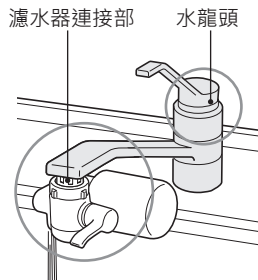

- 3** 請以油性筆註明濾芯的更換月份。

 例：更換於 3 月



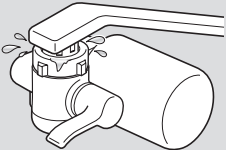確認項目	異常時的檢查部位與處置	參閱頁數
<p data-bbox="220 288 450 311">濾水器連接部有無漏水</p> 	<ul style="list-style-type: none"> <li data-bbox="509 256 1009 366">▶ ● 濾水器是否確實安裝至水龍頭 → 再次確認「安裝濾水器」，並請確實安裝。 ※ 泡沫用轉接器無法旋緊時，請轉動濾水器即可確實緊固。 <li data-bbox="509 399 906 453">▶ ● 相關零件是否已正確放入濾水器裡 → 請正確安裝零件。 <li data-bbox="509 486 916 540">▶ ● 水龍頭的前端 (斷熱蓋等) 有無龜裂 → 請接洽水電行。 	<p data-bbox="1089 256 1174 308">TC20 ~ TC26 頁</p> <p data-bbox="1089 399 1174 451">TC20 ~ TC26 頁</p> <p data-bbox="1122 486 1141 501">—</p>
<p data-bbox="255 570 417 594">水龍頭有無漏水</p> 	<ul style="list-style-type: none"> <li data-bbox="509 570 790 624">▶ ● 水龍頭的墊片是否老化 → 請接洽水電行。 	<p data-bbox="1122 570 1141 585">—</p>


使用方法

排放濾水

請使用低於 35 °C 的水溫。(避免造成濾芯故障。)


1 轉動切換手把至「」。

- 使用自來水時 (TC11 頁)

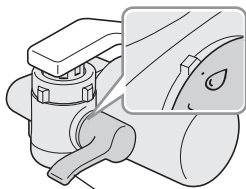

切換手把

2 打開水龍頭讓水流出。

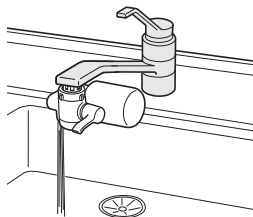

前往下一頁步驟 3

TK-CJ600

使用中



(顯示動畫)

關上水龍頭約 10 秒鐘



顯示可使用的剩餘用量。
(TC37 頁)

關上水龍頭約 10 秒鐘之後

為避免消耗電池，視窗部在關上水龍頭約 10 秒鐘後熄燈。
(再次通水時亮燈)

- 流量低於 0.6 公升 / 分以下時視同止水，濾芯的剩餘用量會有所改變。

中文 (繁體)

TC29



使用方法 (接續)

排放濾水

3 結束後關上水龍頭。


排放原水 (自來水)

請使用低於 80 °C 的水溫。(避免濾水器故障。)

1 轉動切換手把至
「」或「」。

<  : 原水 >

<  : 淋灑式口 >

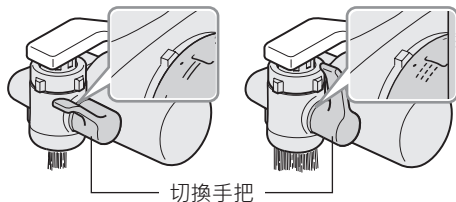

2 打開水龍頭讓水流出。

3 結束後關上水龍頭。

TC30


維修保養

告知

- 請勿使用洗潔劑、清潔劑、稀釋劑、揮發劑、酒精或燈油等。
不慎使用時，請立即灑水沖洗，並將表面的清潔劑等擦拭乾淨。
(清潔劑通水混合，可能會導致樹脂龜裂、變色或變形。)
- 請勿使用金屬製的刷具等。
(避免刮傷。)
- 扭緊螺帽時，請勿使用工具。
(避免螺帽破損。)

本體

請使用軟布沾水，擰乾後擦拭。

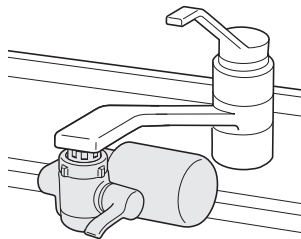

建議每星期
清潔1次

中文 (繁體)


TC31

維修保養(接續)


過濾水口蓋和原水口蓋可以拆除清洗。

過濾水口蓋

- 拆除方法
轉出拆除

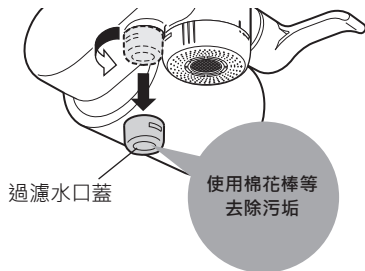

- 安裝方法
轉入安裝

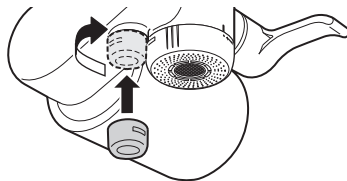


- 清洗時若有水珠附著，容易造成鏽污以及孳生霉菌。
建議於每次使用時或是定期進行維修保養。

TC32

原水口蓋

- 拆除方法
轉出拆除

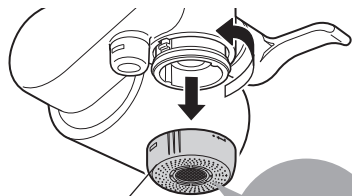


原水口蓋


使用牙刷等物
清除污垢

- 安裝方法

- ① 對齊安裝位置

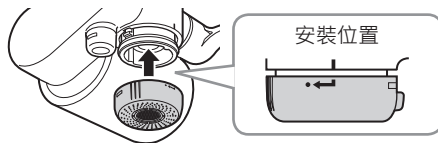

- ② 按壓至固定位置·同時順時針方向轉動

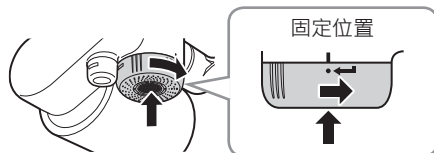

建議每星期
清潔1次

維修保養(接續)


濾水器的安裝口


拆除濾水器，清洗過濾網和內部。




請濾水器安裝口的過濾網若有異物堵塞，則水量會變少。

■ 拆除方法

① 切換手把切換至「」

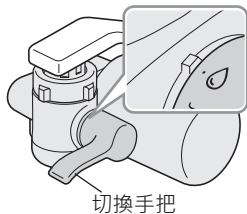

② 鬆開螺帽，拆除濾水器，分別取出過濾網、墊片。

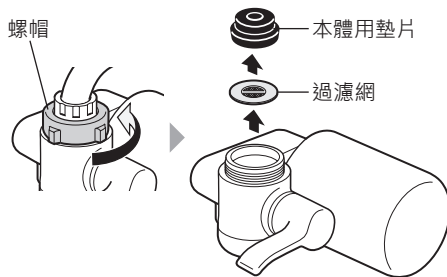

TC34

每年1次左右

■ 安裝方法


- 請依照次序安裝。

① 重新安裝



② 確實旋緊螺帽

- ### ③ 安裝本體後，以「」或「」讓水排放約5秒鐘。

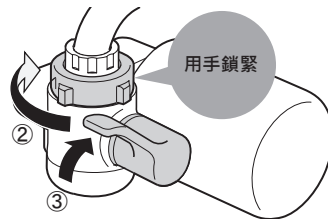

更換濾芯

濾芯的壽命將至或濾水能力降低時，請更換成新濾芯。



更換用濾芯
型號：TK-CJ600C-EX
(TC47頁)

濾芯更換標準

有4種更換標準。若符合其中1種，請更換濾芯。

使用時間 約1年


總通水量
4 000 公升*

濾水的流量驟減時
(濾芯阻塞)

有氣味或異味時

※濾水能力 (TC48 ~ TC49頁)


- 如流量比上述減少得更快，或需更快更換。
(自來水含有越多堵塞濾芯的雜質，流量減少得越快。)

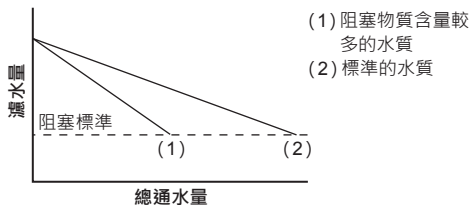

TC36

■ 確認方法 [僅限 TK-CJ600]

每次關水喉時，會顯示更換指標 10 秒鐘。

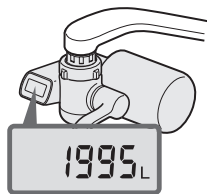

例：剩餘 1 995 L

濾芯的剩餘流量閃燈時



剩餘 150 L

即將需要更換，請準備新的濾芯。

- 屆滿更換標準之前的剩餘用量若低於 150 公升以下，剩餘用量會如左述所示的燈號閃爍。

當顯示「U26」



請進行更換。

- 當屆滿剩餘用量時，以下的燈號會交替顯示。

中文 (繁體)

TC37


更換濾芯(接續)

濾芯的更換方法

- 更換濾芯前請先關閉水龍頭。濾芯拆卸後，請勿進行通水。(否則水會溢出。)


1 拆除舊濾芯。

- 請將舊濾芯拆下置於水槽內。(以免滴水)
 - ① 依照箭咀方向轉動濾芯。
 - ② 拆除。

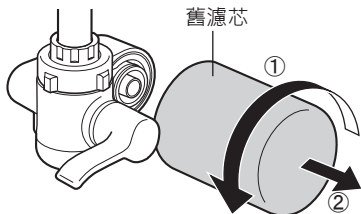


2 更換新的濾芯。

 - ① 請以油性筆註明濾芯的更換月份。




- 使用過的濾芯請遵守當地規定條例丟棄。
(濾芯外殼材質為ABS樹脂。濾材的種類請參閱「規格」(TC49頁)。)

- ② 對齊安裝位置，依照箭咀方向推按濾芯。
- 應對齊突位的位置和大小。

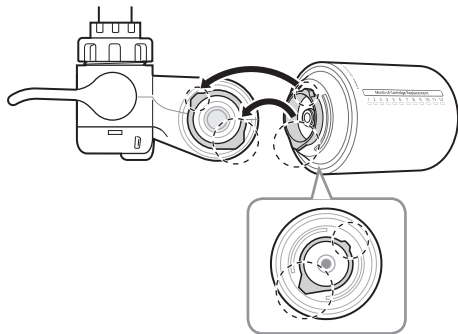

- ③ 慢慢往箭頭方向轉動直到停止。
- 濾芯切勿過度旋緊。
(避免濾芯安裝部破損，造成漏水。)

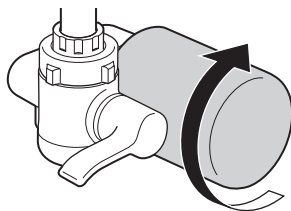

前往下一頁步驟 3

中文 (繁體)

TC39

更換濾芯(接續)

濾芯的更換方法


3 TK-CJ600

按下重新設定按鈕(約3秒鐘)。

(切勿使用牙籤等前端尖銳物品等按壓。
可使用牙籤的另一端或前端不尖銳的物品等按壓。)


- 可以使用的濾芯剩餘用量的顯示重回至總排水量。
- 提早更換濾芯時，必需按下重新設定按鈕。
(為正確顯示下次的更換指標。)

重新設定
按鈕

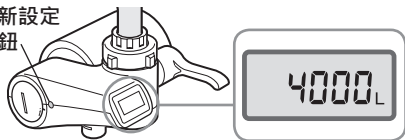
 


4 開出濾水以進行確認 (約3~4分鐘)。

- 通水中，請確認濾芯安裝部有無漏水。

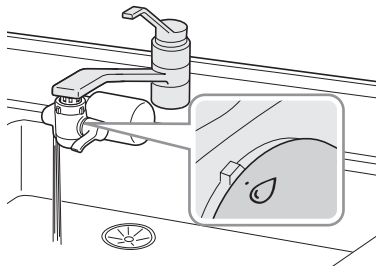


停水時

- 無法使用。使用中停水時，請關上水龍頭。
- 恢復供水後，請先將分水開關切換到「」或「」位置，首先要流出自來水（原水），好讓配管內的空氣或污濁物流出來。（為防止濾芯壽命大幅縮短。）

長時間不使用時

- 如**1星期或以上**不使用
 - ① 拆除舊濾芯。（TC38頁）
 - ② 置於密封膠袋，並存放於冰箱。
- 如**1個月或以上**不使用
 - ① 拆除舊濾芯。（TC38頁）
 - ② 置於密封膠袋，並存放於冰箱。
 - ③ 取出電池。[僅限 TK-CJ600]

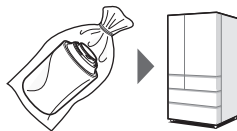

告知

- 置放了長時間的濾芯，內裡的水或已變質，因此建議更換濾芯。

重新使用

- ① 安裝濾芯。（TC38～TC40頁）
- ② 放入電池（約1個月以上不使用時）。（TC15～TC16頁）
- ③ 開水龍頭3分鐘，確認沒有漏水、運作及顯示沒有出現異常後，方才使用。

當出現以下顯示時 TK-CJ600

異常顯示內容	原因和處置方法
	更換濾芯的時期視乎總排水量。 已超過更換指標 4 000 公升。 →更換濾芯 (TC38 ~ TC40 頁)
	需要更換電池。 →請更換電池 (鋰電池 : CR2032)。(TC15 ~ TC16 頁)

- 如進行以上措施後，顯示仍沒有熄滅，請向購買此產品的店舖查詢。

TC42

Q&A

	問題	回答
濾芯	想換濾芯，我應該選擇那類型濾芯？	請使用TK-CJ600C-EX型號的濾芯。(TC47頁)
自來水	最熱可使用幾多度的熱水？	只可使用35 °C以下的水。(TC8頁) 當設定分水開關為「II」或「III」，可以使用高達80 °C。

Q&A (接續)

	問題	回答
濾水	服藥時，可直接飲用「濾水」嗎？	除了服藥以外，烹調也可以使用濾水。
	濾水有沒有使用限期？	濾水可於以下限期內使用 • 室溫 1 天 • 冰箱 2 天 (放入清潔且密封的容器) (由於去除了水內的氯化物 (消毒劑)，細菌因而增加，影響健康。)
其他	水壺或熱水瓶等容器中附著一層白色物質，不知道是什麼？	這是水中的鈣。 請安心飲用，有需要可清洗容器。如果容器上的白色物質無法洗掉時，可到西藥房購買檸檬酸，以 1 公升 50 g 的比例，浸泡 2 ~ 3 天後用水清洗。

故障排除

請先確認 TC45 ~ TC46 頁。

如確認以上項目後仍無改善，

請委託經銷商或 Panasonic 直屬服務站處理。

現象		原因及處置方法
漏水	濾水器連接部 水龍頭部份	● 請瀏覽 TC28 頁。
	濾芯安裝部	● 濾芯是否確實安裝？(TC38 ~ TC40 頁)
過濾水口	出水量減少， 或無法出水。	● 是否將水龍頭開至最大？ ● 本體的濾網是否阻塞？ → 進行保養。(TC31 ~ TC35 頁) ● 濾芯是否正確地安裝？(TC38 ~ TC40 頁) ● 是否停水？(TC41 頁) 如確認以上項目後仍無改善，有可能是濾芯堵塞，需要更換。 (TC38 ~ TC40 頁)
	更換濾芯後水流量變 少。	● 更換後，有沒有讓水流動約 3 ~ 4 分鐘？(TC40 頁) (需排出濾芯裡的空氣。)

故障排除 (接續)


	現象	原因及處置方法
氣味、異味、 混濁、變色	無法濾除氣味、 異味、雜質。	● 濾芯的濾水能力已降低。 → 請更換濾芯。(TC38 ~ TC40 頁)
	過濾後的水好像閃閃發 光。	● 這是由於溶化於水裡的成分 (主要為礦物質) 被分隔。 → 可如常使用, 沒有問題。
顯示TK-CJ600	突然消失 / 沒有顯示。	● 電池是否已耗盡? (TC16 頁) ● 為防止電池耗盡, 不使用時會自動熄滅。(TC29 頁)
	沒有關上水龍頭但出現 更換指標的顯示。	● 是否水量太少? (每分鐘少於 0.6 公升) → 因應水壓的變化, 流量可能減少。 請開大水龍頭。
	就算更換濾芯後, 仍舊 無法讓「U26」消失。	● 是否按動了重新設定按鈕? (TC40 頁)

選購品

請洽詢經銷商或 Panasonic 直屬服務站購買。


消耗品

- 更換用濾芯 (TC36 頁)
型號 : TK-CJ600C-EX

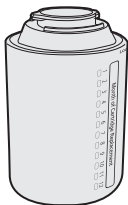


選購品

- 大型水龍頭用金屬蛇口
型號 : WTK7205X7378

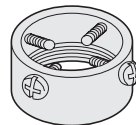

製造序號標示位置

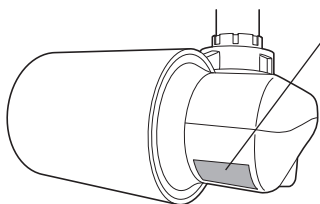

製造序號標示於此位置上。

例: 2 2 0 4 0 1

日: 兩位數

月: 兩位數

年: 年份的最後兩位數

中文 (繁體)

TC47

規格

型號	TK-CJ600	TK-CJ300
尺寸 (寬×深×高)	135 (寬)×120 (深)×75 (高) mm	125 (寬)×110 (深)×75 (高) mm
重量	約 350 g (滿水時: 約 490 g)	約 310 g (滿水時: 約 450 g)
本體可使用的水溫	濾水側: 不超過 35 °C (原水/淋灑式: 80 °C以下)	
可使用的最低動水壓	70 kPa	
過濾流量	1.8 L / 分 [水壓 100 kPa 時]	
本體內的濾芯	TK-CJ600C-EX	
濾水能力	游離殘留氯	4 000 L (*1)
	污濁物	4 000 L (*2)
	總三鹵甲烷	4 000 L (*1)
	二氯一溴甲烷	4 000 L (*1)
	二溴一氯甲烷	4 000 L (*1)
	三溴甲烷	4 000 L (*1)
	四氯乙烯	4 000 L (*1)
	三氯乙烯	4 000 L (*1)
	CAT (農藥)	4 000 L (*1)
	2-MIB (黴菌臭)	4 000 L (*1)
	溶解性鉛	4 000 L (*1)
	苯	4 000 L (*1)
	土臭素 (黴菌臭)	4 000 L (*1)
酚	4 000 L (*1)	
全氟辛酸磺酸和全氟辛酸	4 000 L (*3)	

TC48

型號	TK-CJ600	TK-CJ300
可去除的物質	鐵 (微粒子狀) 鋁 (中性)	可去除 (*4) 可去除 (*4)
更換濾芯時間的指標	約 1 年 (每天使用 10 L 時) [約 6 個月 (每天使用 20 L 時)] (*5)	
材料種類	ABS 樹脂	
濾材種類	特殊濾布、活性碳、特殊陶瓷、中空絲膜	
無法濾除的成分	溶解於水中的鐵、重金屬 (銀、銅等) 或鹽分 (海水)	
液晶顯示電源	一次性鋰電池	—
電池	CR2032 (市售電池)	—
運作時間	約 1 年 (附屬的電池僅供測試用， 使用期間比較短。)	—

● 數值為水溫 20 °C 時的數值。

● 無法將硬水轉變為軟水。

(*1) 依據 JIS S 3201 試驗，去除率為 80 %

(*2) 依據 JIS S 3201 試驗，過濾流量為 50 %

(*3) 依據日本濾水器協會 (JWPA) 所訂規格標準 (JWPAS B 標準)，去除率為 80 %

(*4) 依據日本濾水器協會 (JWPA) 所訂定之規格標準 (JWPAS B 標準) 試驗，去除率為 80 % 的物質此外，並非用於規定濾水能力。

(*5) 可能會因使用的水量、水質、水壓而有大幅縮短的情況。



TC50



中文 (繁體)

TC51

Panasonic Corporation
<https://www.panasonic.com>
© Panasonic Corporation 2022-2024



ZGS0TKCJ6000EXA
F0422-1094
Printed in Japan