

Panasonic

Operating Instructions
(Household) AC/Rechargeable Shaver

Model No. ES-LT6A
ES-LT2A

| | |
|--------------|----|
| English..... | 3 |
| 中文 | 19 |
| 한글 | 33 |



Panasonic

Operating Instructions (Household) AC/Rechargeable Shaver

Model No. ES-LT6A
ES-LT2A

Contents

| | | | |
|---|----------|--|-----------|
| Safety precautions..... | 4 | Cleaning the shaver | 14 |
| Intended use | 7 | Troubleshooting | 16 |
| Parts identification | 8 | Battery life | 18 |
| Operation and display of the switch lock | 9 | Removing the built-in rechargeable battery..... | 18 |
| Charging the shaver..... | 10 | Specifications | 18 |
| Using the shaver..... | 11 | | |

Thank you for purchasing this Panasonic product.

Before operating this unit, please read these instructions completely and save them for future use.

Safety precautions

To reduce the risk of injury, loss of life, electric shock, fire, and damage to property, always observe the following safety precautions.

Explanation of symbols

The following symbols are used to classify and describe the level of hazard, injury, and property damage caused when the denotation is disregarded and improper use is performed.



DANGER

Denotes a potential hazard that will result in serious injury or death.



WARNING

Denotes a potential hazard that could result in serious injury or death.



CAUTION

Denotes a hazard that could result in minor injury.

The following symbols are used to classify and describe the type of instructions to be observed.



This symbol is used to alert users to a specific operating procedure that must not be performed.



This symbol is used to alert users to a specific operating procedure that must be followed in order to operate the unit safely.



WARNING

► Power supply



Do not connect or disconnect the adaptor to a household outlet with a wet hand.

- Doing so may cause electric shock or injury.

Do not immerse the AC adaptor and the charging stand in water or wash with water.

Do not place the AC adaptor and the charging stand over or near water filled sink or bathtub.



Never use the appliance if the AC adaptor is damaged or if the power plug fits loosely in a household outlet.

Do not damage, modify, or forcibly bend, pull, or twist the cord.

Also, do not place anything heavy on or pinch the cord.

- Doing so may cause electric shock or fire due to a short circuit.



Do not use in a way exceeding the rating of the household outlet or the wiring.

- Exceeding the rating by connecting too many plugs to one household outlet may cause fire due to overheating.



Do not use anything other than the supplied AC adaptor and the charging stand. Also, do not charge any other product with the supplied AC adaptor and the charging stand.

- Doing so may cause burn or fire due to a short circuit.



Always ensure the appliance is operated on an electric power source matched to the rated voltage indicated on the AC adaptor.

Fully insert the adaptor.

- Failure to do so may cause fire or electric shock.



WARNING

► In case of an abnormality or malfunction

Immediately stop using and remove the adaptor if there is an abnormality or malfunction.

- Failure to do so may cause fire, electric shock, or injury.

<Abnormality or malfunction cases>



• **The main unit, charging stand, adaptor or cord is deformed or abnormally hot.**

• **The main unit, charging stand, adaptor or cord smells of burning.**

• **There is abnormal sound during use or charging of the main unit, charging stand, adaptor or cord.**

- Immediately request inspection or repair at an authorized service center.

► This product



This shaver has a built-in rechargeable battery. Do not throw into fire, apply heat, or charge, use, or leave in a high temperature environment.

- Doing so may cause overheating, ignition, or explosion.



Do not modify or repair.

- Doing so may cause fire, electric shock, or injury.

Contact an authorized service center for repair (battery change etc).



Never disassemble except when disposing of the product.

- Doing so may cause fire, electric shock, or injury.

► Cleaning



Disconnect the AC adaptor when cleaning the shaver with water.

- Failure to do so may cause electric shock or injury.



Always unplug the adaptor from a household outlet when cleaning.

- Failure to do so may cause electric shock or injury.



Regularly clean the power plug, the appliance plug and the charging plug to prevent dust from accumulating.

- Failure to do so may cause fire due to insulation failure caused by humidity.

Disconnect the adaptor and wipe with a dry cloth.



This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

- Failure to do so may cause an accident or injury.



The supply cord cannot be replaced. If the cord is damaged, the AC adaptor should be scrapped.

- Failure to do so may cause an accident or injury.

► Preventing accidents



Do not store within reach of children or infants. Do not let them use it.

- Putting the inner blades, the cleaning brush and/or the oil container in the mouth may cause accidents and injury.

WARNING

If oil is consumed accidentally, do not induce vomiting, drink a large amount of water and contact a physician.

 If oil comes into contact with eyes, wash immediately and thoroughly with running water and contact a physician.

- Failure to follow these instructions may result in physical problems.

CAUTION

► Protecting the skin

Do not use excessive pressure to apply the system outer foil to your lip or other part of your face. Do not apply the system outer foil directly to blemishes or injured skin.

- Doing so may cause injury to the skin.

Do not forcefully press the system outer foil. Also, do not touch the system outer foil with fingers or nails when in use.

Do not use this product for hair on head or any other part of the body.

- Doing so may cause injury to skin or reduce the life of the system outer foil.

Do not touch the blade section (metallic section) of the inner blade.

- Doing so may cause injury to your hands.

 Check the system outer foil for cracks or deformations before use.

- Failure to do so may cause injury to the skin.

 Be sure to place the protective cap on the shaver when carrying around or storing.

- Failure to do so may cause injury to skin or reduce the life of the system outer foil.

► Note the following precautions

 Do not allow pins or trash to adhere to the power plug, the appliance plug or the charging plug.

- Doing so may cause electric shock or fire due to a short circuit.

 Do not share your shaver with your family or other people.

- Doing so may result in infection or inflammation.

 Do not drop or hit against other objects.

- Doing so may cause injury.

 Do not wrap the cord around the adaptor when storing.

- Doing so may cause the wire in the cord to break with the load, and may cause fire due to a short circuit.

 Disconnect the adaptor from the household outlet when not using.

- Failure to do so may cause electric shock or fire due to electrical leakage resulting from insulation deterioration.

 Disconnect the adaptor or the appliance plug by holding onto the adaptor or the appliance plug instead of the cord.

- Failure to do so may cause electric shock or injury.

► Disposing of the rechargeable battery

DANGER

The rechargeable battery is exclusively for use with this shaver. Do not use the battery with other products. Do not charge the battery after it has been removed from the product.

- Do not throw into fire or apply heat.
 - Do not hit, disassemble, modify, or puncture with a nail.
 - Do not let the positive and negative terminals of the battery get in contact with each other through metallic objects.
 - Do not carry or store the battery together with metallic jewelry such as necklaces and hairpins.
 - Do not charge, use, or leave the battery where it will be exposed to high temperatures, such as under direct sunlight or near other sources of heat.
 - Never peel off the tube.
- Doing so may cause overheating, ignition, or explosion.

WARNING

After removing the rechargeable battery, do not keep it within reach of children and infants.

- The battery will harm the body if accidentally swallowed. If this happens, consult a physician immediately.

If the battery fluid leaks out, take the following procedures. Do not touch the battery with your bare hands.




- The battery fluid may cause blindness if it comes in contact with your eyes. Do not rub your eyes. Wash immediately with clean water and consult a physician.
- The battery fluid may cause inflammation or injury if it comes in contact with the skin or clothes. Wash it off thoroughly with clean water and consult a physician.

Intended use

- Do not bring the system outer foil into contact with hard object. Doing so may damage the blades as they are very thin and deform easily.
- Do not dry the main unit with a dryer or a fan heater. Doing so may cause malfunction or deformation of the parts.
- Do not leave the shaver exposed to direct sunlight with the foil frame detached. Doing so may deteriorate the waterproof rubber and degrade waterproof function, which may cause to malfunction.
- Store the shaver in a place with low humidity after use. Failure to do so may cause malfunction due to condensation or rust.
- Keep both the inner blades inserted. If only one of the inner blades is inserted, the shaver may be damaged.
- If you clean the shaver with water, do not use salt water or hot water. Do not soak the shaver in water for a long period of time.

Parts identification

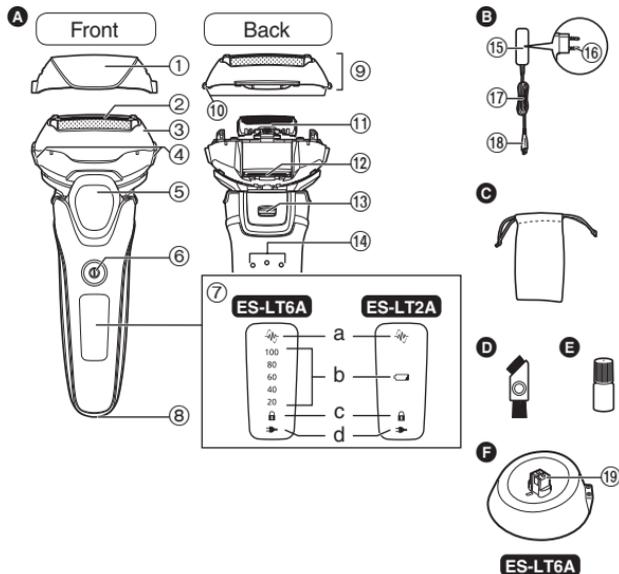

A Main body

- ① Protective cap
- ② System outer foil
- ③ Foil frame
- ④ Foil frame release buttons
- ⑤ Finger rest
- ⑥ Power switch
To turn the shaver on and off and also lock and unlock the power switch.

⑦ Lamp display

- a. Shaving sensor lamp (—)
- b. Battery capacity lamp
- c. Switch lock lamp (🔒)
- d. Charge status lamp (→)
- ⑧ Appliance socket
- ⑨ Outer foil section

- ⑩ System outer foil release buttons
- ⑪ Inner blades
- ⑫ Trimmer
- ⑬ Trimmer handle
- ⑭ Main body rear terminals

B AC adaptor (RE7-87) (The shape of the AC adaptor differs depending on the area.)

- ⑮ Adaptor
- ⑯ Power plug
- ⑰ Cord
- ⑱ Appliance plug

Accessories

- C Travel pouch
- D Cleaning brush
- E Oil
- F Charging stand **ES-LT6A**
- ⑲ Charging plug

Operation and display of the switch lock

► Locking the power switch

| | | |
|--|--|--|
| <p>1. Press the power switch once and then release.</p> <ul style="list-style-type: none">• The shaver starts operating. | <p>2. Press the power switch for more than 2 seconds when the shaver is operating.</p> <ul style="list-style-type: none">• The shaver will stop operating. | <p>3. Release the power switch.</p> |
|   |  |  |
|  <p>The switch lock lamp is off.</p> |  <p>The switch lock lamp will light up.</p> |  <p>The switch lock lamp will turn off after 5 seconds.</p> |

► Unlocking the power switch

| | |
|---|---|
| <p>1. Press the power switch for more than 2 seconds.</p>  | <p>2. Once the shaver starts operating, release the power switch.</p>  |
|  <p>The switch lock lamp will blink.</p> |  <p>The switch lock lamp will turn off.</p> |

► Checking the power switch is locked

| |
|--|
| <p>Press the power switch while it is locked.</p>  |
|    <p>The switch lock lamp will blink and then turn off after 5 seconds.</p> |

- You can also check this by unplugging the AC adaptor while charging.

Charging the shaver

1 Insert the appliance plug into the shaver.


- Turn the shaver off before inserting.

2 Plug in the adaptor into a household outlet.

- Wipe off any water droplets on the appliance socket.
- Check that the charge status lamp (➔) glows.
- Charging is completed after approx. 1 hour.
The charging time may differ with the charging capacity.
- Charging the appliance after each use will not affect the battery life.


3 Disconnect the adaptor after charging is completed.

- Charging the battery for more than 1 hour will not affect battery performance.

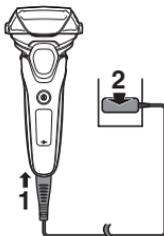

While charging

ES-LT6A



The charge status lamp (➔) glows.

The number of the battery capacity lamp will increase as charging progresses.


ES-LT2A



The charge status lamp (➔) glows.

After charging is completed

ES-LT6A

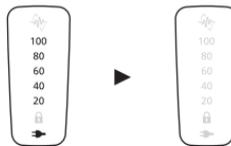

The battery capacity lamp and the charge status lamp (➔) will light up and then turn off after 5 seconds.

ES-LT2A



The charge status lamp (➔) turns off.

Abnormal charging

ES-LT6A



The charge status lamp (➔) will blink twice every second.


ES-LT2A



- Recommended ambient temperature for charging is 10 – 35 °C. It may take longer to charge or the battery may fail to charge properly in extremely high or low temperatures. Charge the shaver within the recommended ambient temperature range.
- When charging the shaver for the first time or when it has not been in use for more than 6 months, the charging time may change or the charge status lamp (➔) may not glow for a few minutes. It will eventually glow if kept connected.
- If there is noise from radio or other source while using the shaver, move to a different location to use the shaver.

Charging with the charging stand ES-LT6A

1. Insert the appliance plug into the charging stand.
2. Place the shaver on the charging stand.
3. Plug in the adaptor into a household outlet.

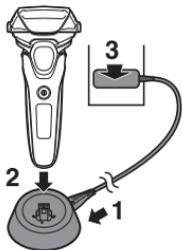


Using the shaver

1 Press the power switch.

- The power cannot be turned on when the switch lock lamp () blinks, as the power switch is locked. Press the power switch for more than 2 seconds to unlock. (See page 9.)

2 Hold the shaver as illustrated.

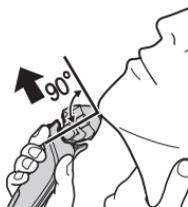

3 Shave by slowly gliding the shaver over your face against the grain of the beard.

- Start shaving by applying gentle pressure to your face. Stretch your skin with your free hand and move the shaver back and forth in the direction of your beard. You may gently increase the amount of pressure as your skin becomes accustomed to this shaver. Applying excessive pressure does not provide a closer shave.

► Notes

- If you press the power switch for more than 2 seconds, the sonic vibration cleaning mode is activated. (See page 14.) You cannot shave in this mode.
- Do not place your fingers on the power switch while using the shaver. This may cause the shaver to lock the power switch or turn off. Place your fingers on the finger rest while using the shaver.
- The appliance may not operate in an ambient temperature approximately 5 °C or lower.
- Depending on the beard thickness or the amount of beard trimmings in the shaver head, the shaving sensor may not react and the driving sound may not change. This is not abnormal.
- The shaving sensor may not respond when the remaining battery capacity is low. If this happens, recharge the shaver.
- Avoid the following situations to prevent damaging the system outer foil. Applying pressure to any part of the system outer foil or bringing the system outer foil into contact with hard object may cause damage on the system outer foil.
 - Shaving with only a part of the system outer foil.
 - Finger or nail coming into contact with the system outer foil.

► Cord shaving

If you insert the appliance plug to the shaver and plug in the adaptor into a household outlet, you can use it even if the battery capacity is low.


- If the shaver does not work, continue charging it for approx. 1 minute.
- The battery will be discharged even when using the shaver with the AC adaptor.

► Switching the shaver head

You can change the pivot action.


FREE

You can move the shaver head.



LOCK

You can lock the shaver head.




► Using the trimmer

Slide the trimmer handle up to the “mm” position so that the trimmer stands upright.



Press and hold the lock release button (a) and slide the trimmer handle down to lower the trimmer.

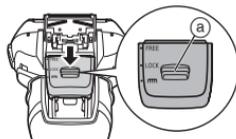


Trimming sideburns

Slide the trimmer handle up. Turn the shaver on and place at a right angle to your skin and move downwards to trim your sideburns.



Pre-shave


The trimmer can be used for a pre-shave of long beards. Shave your beard with the shaver head after the pre-shave.

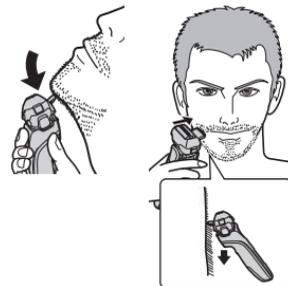

Reading lamps when using

While using

ES-LT6A



Approximate amount of battery capacity is displayed as 20 - 100.

- It will turn off approximately 5 seconds after operating the power switch.
- The shaving sensor lamp (剃毛機) glows.
- The charge status lamp (充電) glows when using cord shaving.

ES-LT2A



- The shaving sensor lamp (剃毛機) glows.
- The charge status lamp (充電) glows when using cord shaving.

When the battery capacity is low

ES-LT6A



"20" blinks when operating the shaver.

- You can shave 2 to 3 times after "20" blinks. (This will differ depending on usage.)

ES-LT2A



The battery capacity lamp (↔) blinks when operating the shaver.

- You can shave 2 to 3 times after the battery capacity lamp (↔) blinks. (This will differ depending on usage.)

- The shaver can be used for approximately 2 weeks with a full charge. (Based on one 3-minute shave use per day until the battery is exhausted)
- The number of usable days varies depending on the following conditions.
 - Beard thickness
 - Pressure applied to the skin
 - Ambient temperature
 - Usage frequency of the sonic vibration cleaning mode

Cleaning the shaver

Do not use kitchen, bathroom, or toilet detergents. Also, do not wipe with thinners, benzine, alcohol etc.

Doing so may result in malfunction.

1. Turn the power switch OFF, and disconnect the AC adaptor.
 - Unlock the switch lock.
2. Apply some hand soap and some water to the system outer foil.


3. Press the power switch for more than 2 seconds to activate the sonic vibration cleaning mode.

- The battery capacity lamps blink in order. **ES-LT6A**
- The battery capacity lamp (⇐) and the charge status lamp (⇒) blink alternately.

ES-LT2A

- After about 20 seconds, it will be automatically turned off.

4. Remove the outer foil section and press the power switch for more than 2 seconds to activate the sonic vibration cleaning mode.

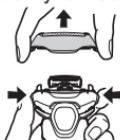


5. Clean the shaver, the outer foil section, and the trimmer with running water.

- After rinsing with water, shake the shaver up and down for a few times to remove excess moisture.

Hitting the vanity, etc., while shaking the shaver may cause malfunction.

- Splashing is reduced by rinsing the shaver in sonic vibration cleaning mode.

6. Wipe off any drops of water with a dry cloth.

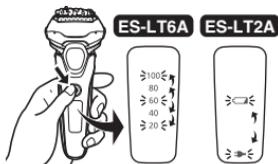

7. Dry the outer foil section, the shaver, and the trimmer completely.



8. Attach the outer foil section to the shaver.
9. Lubricate the shaver.



The mark on the left means suitable for cleaning under an open water tap.


Warning

Disconnect the cord from the shaver before cleaning it in water to prevent electric shock.

Lubrication

To maintain shaving comfort for a long time, it is recommended that the oil provided with the shaver is used.

1. Switch off the shaver.
2. Apply one drop of oil to each of the system outer foil.
3. Raise the trimmer and apply a drop of oil.
4. Switch the shaver on, and run it for approximately five seconds.
5. Switch off the shaver, and wipe off any excess oil from the system outer foil with a soft cloth.

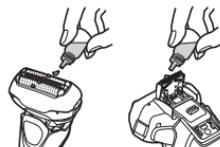

Cleaning with the brush

► Cleaning with the long brush


Clean the system outer foil (a), the shaver body (b) and the trimmer (c) using the long brush.



► Cleaning with the short brush

Clean the inner blades using the short brush by moving it in direction (A).

- Do not move the short brush in direction (B) as it will damage the inner blades and affect their sharpness.
- Do not use the short brush to clean the system outer foil.

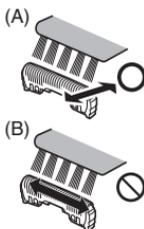


Replacing the system outer foil and the inner blades

| | |
|-------------------|----------------------|
| system outer foil | once every year |
| inner blades | once every two years |


► Removing the outer foil section

Press the foil frame release buttons and lift the outer foil section upwards.

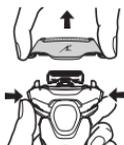

► Attaching the outer foil section


After turning the foil frame mark (⚡) to the front, securely attach the outer foil section to the shaver until it clicks.



► Replacing the system outer foil


1. Press the system outer foil release buttons and pull down the system outer foil.
2. Align the foil frame mark (⚡) and the system outer foil mark (△) and securely attach together until it clicks.

- The system outer foil cannot be reversely attached.
- Always insert the system outer foil to the foil frame when attaching to the shaver.
- Do not press the system outer foil release buttons with excessive force. Doing so may bend the system outer foil, preventing complete attachment to the foil frame.

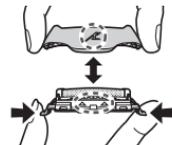

► Replacing the inner blades

1. Remove the inner blades one at a time.
2. Insert the inner blades one at a time.



► Replacement parts

Replacement parts are available at your dealer or Service Center.

| | | |
|--|-------------------|---------|
| Replacement parts for ES-LT6A/ES-LT2A | System outer foil | WES9089 |
| | Inner blades | WES9068 |

Troubleshooting

Perform the following actions.

If the problems still cannot be solved, contact the store where you purchased the unit or a service center authorized by Panasonic for repair.

| Problem | Action |
|--|---|
| The power switch does not turn ON. | ▶ Unlock the switch lock. (See page 9.) |
| Shavings fly out in all directions. | ▶ This can be improved by cleaning every time after shaving. ▶ Clean the inner blades with the brush when shavings are adhering to the inner blades. |
| System outer foil gets hot. | ▶ Apply oil. (See page 14.) ▶ Replace the system outer foil if it is damaged or deformed. (See page 15.) |
| Operating time is short even after charging. | ▶ Apply oil. ▶ When the number of operations per charge starts to decrease, the battery is nearing the end of its life. |
| The odor is getting stronger. | ▶ This can be improved by cleaning every time after shaving. |
| The driving sound changes while shaving. | ▶ While the shaving sensor lamp glows, the shaving sensor is operating. The sound changes depending on the beard thickness. |

| Problem | Action |
|---|--|
| You do not get as close a shave as before. | ▶ This can be improved by cleaning every time after shaving. ▶ Replace the system outer foil and/or inner blades. Expected life of system outer foil and inner blades: System outer foil: Approximately 1 year Inner blades: Approximately 2 years |
| | ▶ Apply oil. |
| Shaver stopped functioning even after charging. | ▶ The appliance may not operate in an ambient temperature approximately 5 °C or lower. ▶ The battery has reached the end of its life. |
| | ▶ Apply oil. |
| Makes a loud sound. | ▶ The shaver makes a high-pitched sound due to the linear motor drive. This does not indicate a problem. ▶ Confirm that the blades are properly attached. ▶ Clean the system outer foil with the brush. |

| Problem | Action |
|---|--|
| The shaving sensor does not respond. | ▶ Depending on the beard thickness or the amount of beard trimmings in the shaver head, the shaving sensor may not react and the driving sound may not change. This is not abnormal. |
| | ▶ The shaving sensor may not respond when the remaining battery capacity is low. If this happens, recharge the shaver. |
| | ▶ Apply oil. The shaving sensor may not respond when there is not enough oil on the blades. |
| The shaving sensor responds even though the shaver is not in contact with the skin. | Clean the beard trimmings from the shaver. |
| | ▶ When the shaver is extremely dirty, remove the foil frame and wash with water. (See page 14.) |
| | ▶ Replace the system outer foil and/or inner blades. Expected life of system outer foil and inner blades: System outer foil: Approximately 1 year Inner blades: Approximately 2 years |

FAQ

| Question | Answer |
|--|---|
| Will the battery deteriorate if not used for an extended period of time? | ▶ The battery will deteriorate if not used for over 6 months, so make sure to perform a full charge at least once every 6 months. |
| Can I charge the shaver after every use? | ▶ The battery used is a lithium-ion, so charging after every use will have no effect on battery life. |
| What is the constituent of the dedicated oil? | ▶ Constituent of the oil is liquid paraffin. |

Battery life

The life of the battery is 3 years. The battery in this shaver is not intended to be replaced by consumers. Have the battery replaced by an authorized service center.

Removing the built-in rechargeable battery


Remove the built-in rechargeable battery before disposing of the shaver.

Please make sure that the battery is disposed of at an officially designated location if there is one.

This figure must only be used when disposing of the shaver, and must not be used to repair it. If you dismantle the shaver yourself, it will no longer be waterproof, which may cause it to malfunction.

- Remove the shaver from the AC adaptor.
- Press the power switch to turn on the power and then keep the power on until the battery is completely discharged.

- Perform steps ① to ④ and lift the battery, and then remove it.
- Take care not to short circuit the positive and negative terminals of the removed battery, and insulate the terminals by applying tape to them.

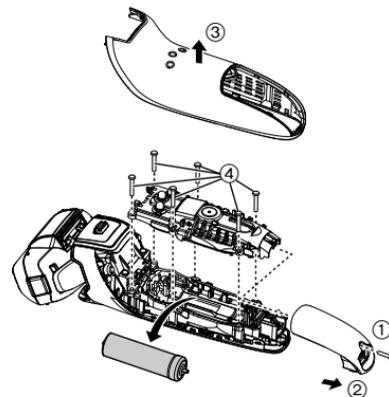

For environmental protection and recycling of materials

This shaver contains a Lithium-ion battery.

Please make sure that the battery is disposed of at an officially assigned location, if there is one in your country.

Specifications

| | |
|---------------|---|
| Power source | See the name plate on the AC adaptor. (Automatic voltage conversion) |
| Motor voltage | 3.6 V --- |
| Charging time | Approx. 1 hour |

This product is intended for household use only.

Panasonic

使用說明書
(家用)交流・充電式刮鬍刀

型號 ES-LT6A
ES-LT2A

目錄

| | | | |
|-----------------|----|---------------|----|
| 安全須知..... | 20 | 清洗..... | 28 |
| 用途..... | 22 | 疑難排解..... | 30 |
| 部件說明..... | 23 | 電池壽命..... | 31 |
| 開關鎖定的操作與顯示..... | 24 | 拆除內置充電電池..... | 31 |
| 充電..... | 25 | 規格..... | 32 |
| 使用方法..... | 26 | | |

感謝您購買本 Panasonic 產品。
使用本產品之前，請仔細閱讀本說明書，並妥善保存以供未來使用。

安全須知

為減低受傷、死亡、觸電、火災及財物損失的風險，請務必遵照以下安全預防措施。

符號說明

以下符號用於為危險、傷害及財物損失的級別分類和作出解釋。若不理會此等符號，不當使用本產品就可能導致所述的危險、人身傷害及財物損失。

 **危險** 表示潛在的危險會導致嚴重受傷或致命。

 **警告** 表示潛在的危險可能會導致嚴重受傷或致命。

 **注意** 表示危險可導致輕微受傷。

以下符號用於分類和解釋必須留意的指示類型。

 此符號用於提示用戶，不得執行某項特定的操作程序。

 此符號用於提示用戶，必須遵從某項特定的操作程序，藉以安全操作本產品。

警告

▶ 電源供應

 切勿在手濕時將轉接器插入家用電源插座或從插座中拔除。
- 否則可導致觸電或受傷。

切勿將電源供應器和充電座浸在水中或用水洗滌。
切勿將電源供應器和充電座置於裝滿水的水槽、浴缸上方或附近。

 如電源供應器損壞，或電源插頭未緊接家用電源插座上，切勿使用本產品。
切勿損壞、改裝或用力弄彎、拉扯或纏繞電源線。此外，切勿將重物放在電源線上或夾緊電源線。
- 否則可能會因短路而導致觸電或火警。

 切勿以超出家用電源插座或配線額定值的方式使用產品。
- 將太多插頭插至同一插座上，以致超出額定值，可能會因過熱而導致火警。

 切勿使用非隨附的電源供應器和充電座。此外，切勿使用隨產品附上的電源供應器和充電座為任何其他產品充電。
- 否則可能會因短路而導致灼傷或火警。

 請務必使用與電源供應器上標示之額定電壓相符的電源進行操作。
必須完全插入轉接器。
- 否則可導致火警或觸電。

警告

▶ 若發生異常現象或故障

若產品出現異常或故障情況，請立即停止使用產品及拔除轉接器。

- 否則會造成火災、觸電或受傷。

< 異常或故障情況 >



- 主機、充電座、轉接器或電源線變形或異常灼熱。
- 主機、充電座、轉接器或電源線出現燒焦氣味。
- 主機、充電座、轉接器或電源線使用期間或充電時出現異常聲響。

- 請立即將產品帶往 Panasonic 直屬服務站，以要求檢查或維修。

▶ 本產品



本刮鬚刀內建充電電池。請勿丟入火中、接觸熱源或在高溫的環境中充電、使用，或留置在高溫的環境中。

- 否則可導致過熱、燃燒或爆炸。



切勿改裝或自行維修產品。

- 否則可能導致火警、觸電或受傷。

請聯絡 Panasonic 直屬服務站進行維修（更換電池等）。



切勿拆卸本產品，棄置時除外。

- 否則可能導致火警、觸電或受傷。

▶ 清潔



使用清水清潔刮鬚刀時，請中斷連接電源供應器。

- 否則可導致觸電或受傷。



清潔產品時，必須從家用電源插座拔出轉接器。

- 否則可導致觸電或受傷。



應定期清潔電源插頭、電器插頭和充電插頭，以防止灰塵堆積。

- 否則濕氣可令絕緣失效，導致火警。
拔除轉接器並用乾布抹拭。



患有體能、感官或智力減退，或缺乏經歷和知識之人士（含小孩），在無人監護或未獲告知如何使用的情況下不得使用本產品。請勿讓小孩使用本產品。

- 否則可能導致意外或受傷。



請勿自行換電源線，電源線一但損壞應當廢棄本電源供應器，勿再使用。

- 否則可能導致意外或受傷。

▶ 避免意外



切勿將產品存放於兒童或幼童可觸摸的地方。請勿讓兒童或幼童使用。

- 將內層刀片、清潔毛刷及 / 或潤滑油容器放入口中可能導致意外和受傷。



如果不小心誤食潤滑油，不可催吐，請喝下大量的水，然後就醫。

如果潤滑油沾到眼睛，請立刻用清水沖洗，然後就醫。
- 否則可能導致身體不適。

注意

▶ 保護皮膚



請勿施加過大力量，將外層網面加壓在嘴唇或臉上及其他部位。請勿在痘疤或受傷的皮膚上，直接使用外層網面。
- 否則可能導致皮膚受傷。

⚠ 注意

- 切勿用力壓下外層網面。此外，使用時，切勿用手指或指甲觸碰外層網面。
- ⊘ 切勿將本產品運用在頭髮或身體任何其他部位的毛髮上。
- 否則可能導致皮膚受傷或縮短外層網面的壽命。
- ⊘ 切勿接觸內層刀片的刀片（金屬）部分。
- 否則可導致手部受傷。
- ⊘ 使用前，請檢查外層網面是否有破裂或變形。
- 否則可能導致皮膚受傷。
- ⊘ 攜帶或存放時，務必將刮鬍刀放在保護蓋中。
- 否則可能導致皮膚受傷或縮短外層網面的壽命。

▶ 請注意以下注意事項

- ⊘ 切勿讓別針或垃圾黏附在電源插頭、電器插頭或充電插頭上。
- 否則可能會因短路而導致觸電或火警。
- ⊘ 請勿與家人或其他人共用刮鬍刀。
- 共用刮鬍刀可能會導致感染或發炎。
- ⊘ 切勿掉落，或者與其他物體發生碰撞。
- 否則可導致受傷。
- ⊘ 存放時，切勿將電源線包覆在轉接器的周圍。
- 否則可令電源線內的纏線因受壓而斷裂，並可能因短路而導致火警。
- ⊘ 不使用時，應從家用電源插座拔出轉接器。
- 否則可因絕緣劣化造成漏電，導致觸電或火警。
- ⊘ 拔出轉接器或電器插頭時，應握著轉接器或電器插頭而非電源線。
- 否則可導致觸電或受傷。

▶ 充電電池處置

⚠ 危險

- 本充電電池僅能用於搭配此刮鬍刀使用。請勿將本電池搭配其他產品使用。
- 將電池從產品拆除後，請勿進行充電。
- 請勿丟入火中或加熱。
 - 請勿撞擊、拆解、改裝或以指甲穿刺。
 - ⊘ 請勿讓電池的正極和負極端子透過金屬物質相互接觸。
 - 請勿將電池與金屬飾品，如項鍊及髮夾等一起攜帶或存放。
 - 電池之充電、使用或置放都不可接觸高溫，如陽光直射處或靠近熱源處。
 - 請勿剝下電池直流管。
 - 否則可導致過熱、燃燒或爆炸。

⚠ 警告


- ⊘ 拆除充電電池後，切勿放在孩童或嬰兒可取得的地方。
- 若意外吞下電池，會傷害身體。
若發生此狀況，請立即就醫。
- 若電池漏液，請採取下列程序。切勿以裸露的雙手觸碰電池。
 - 電池液若接觸眼睛，可能會導致失明。
切勿搓揉眼睛。請立即以清水清洗並就醫。
 - 電池液若接觸到皮膚或衣物，可能會導致發炎或受傷。
請徹底以清水清洗並就醫。

用途

- 請勿讓外層網面與堅硬的物體接觸。
否則可能會損壞刀片，因為刀片非常薄且很容易變形。
- 切勿使用吹風機或加熱風扇為主體乾燥。
否則可能會造成故障或部件變形。

- 拆卸網層後，切勿讓刮鬍刀直接曝曬在陽光下。否則可能造成防水橡膠劣化並減損防水功能，此可能造成故障。
- 使用後將刮鬍刀收納在低濕度的地方。否則可能造成水氣凝結或鏽蝕，此可能造成故障。
- 將內層刀片保持在原有位置。如只有一塊內層刀片，刮鬍刀可能已經受損。
- 如您以水清洗刮鬍刀，請勿使用鹽水或熱水。切勿將刮鬍刀長時間浸泡於水中。

部件說明

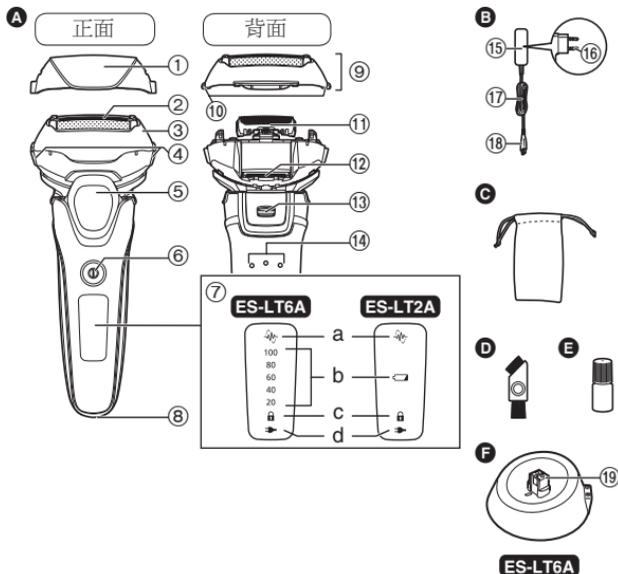

A 主體

- ① 保護蓋
- ② 外層網面
- ③ 網層
- ④ 網層拆除按鈕
- ⑤ 手握位置
- ⑥ 電源開關
可開啟與關閉刮鬍刀電源，以及鎖定與解除鎖定電源開關。
- ⑦ 顯示燈
a. 刮鬍感應器燈 ()
b. 電池電量指示燈
c. 開關鎖定燈號 ()
d. 充電狀態指示燈 ()
- ⑧ 充電插座
- ⑨ 外層網面部分
- ⑩ 拆除外層網面的按鈕
- ⑪ 內層刀片
- ⑫ 修剪器
- ⑬ 修剪器推桿
- ⑭ 主體後方端子

B 電源供應器 (RE7-87)

(電源供應器的形狀依地區而異。)

- ⑮ 轉接器
- ⑯ 電源插頭
- ⑰ 電源線
- ⑱ 電器插頭

配件

C 輕便旅行袋

D 清潔毛刷

E 潤滑油

F 充電座 ES-LT6A

- ⑲ 充電插頭

開關鎖定的操作與顯示

▶ 鎖定電源開關

| | | |
|--|--|---|
| <p>1. 按下電源開關一次然後放開。</p> <ul style="list-style-type: none">• 刮鬍刀開始運作。  | <p>2. 刮鬍刀運作時，按著電源開關超過 2 秒。</p> <ul style="list-style-type: none">• 刮鬍刀將停止運作。  | <p>3. 放開電源開關。</p>  |
|  <p>開關鎖定燈號熄滅。</p> |  <p>開關鎖定燈號將亮起。</p> |  <p>開關鎖定燈號將在 5 秒後熄滅。</p> |

▶ 解除鎖定電源開關

| | |
|---|---|
| <p>1. 按著電源開關超過 2 秒。</p>  | <p>2. 當刮鬍刀開始運作時，放開電源開關。</p>  |
|  <p>開關鎖定燈號將閃爍。</p> |  <p>開關鎖定燈號將熄滅。</p> |

▶ 請檢查電源開關是否已經鎖定


請在鎖定時按下電源開關。

| |
|---|
|  |
|    <p>開關鎖定燈號將閃爍並在 5 秒後熄滅。</p> |


- 您可以在充電時拔下電源供應器對此進行檢查。

充電

- 1 將電器插頭插入刮鬚刀。**
 - 裝上前，請關掉刮鬚刀電源。
- 2 將轉接器插入家用插座。**
 - 擦去充電插座上的水滴。
 - 檢查充電狀態指示燈 (➡) 有亮起。
 - 充電約 1 小時後完成。
 - 充電時間可能會因充電容量而異。
 - 每次使用後對刮鬚刀充電並不會影響電池壽命。
- 3 充電完成後，請拔下轉接器。**
 - 對電池充電 1 小時以上，並不會影響電池效能。

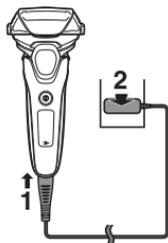


充電完成後

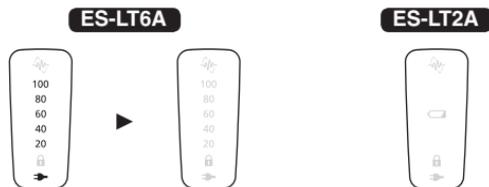

電池電量指示燈和充電狀態指示燈 (➡) 將亮起，並於 5 秒後熄滅。

充電狀態指示燈 (➡) 熄滅。

非正常充電期間

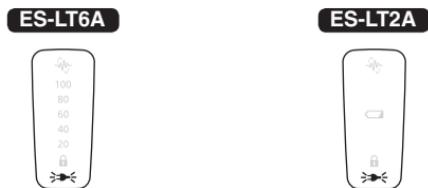

充電狀態指示燈 (➡) 每秒閃爍兩次。


充電時
充電狀態指示燈 (➡) 亮起。
電池電量指示燈的數字會在充電過程中增加。

充電狀態指示燈 (➡) 亮起。

- 建議的充電環境溫度為 10 - 35 °C。在溫度極高或極低的情況下對電池充電，可能需要較長的時間，或是電池可能無法正確充電。在建議的周遭環境溫度範圍內將刮鬚刀充電。
- 刮鬚刀第一次充電時或未使用超過 6 個月時，充電時間可能會有所改變，或者充電狀態指示燈 (➡) 可能會幾分鐘無法亮起。如繼續保持連結，最後會亮起。
- 如果收音機或其他音訊來源在使用刮鬚刀時發出噪音，請移到另一個地方使用刮鬚刀。

使用充電座充電 ES-LT6A

1. 將電器插頭插入充電座。
2. 將刮鬍刀放置在充電座上。
3. 將轉接器插入家用插座。

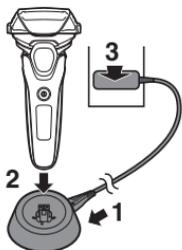


使用方法

1 按下電源開關。

- 當開關鎖定燈號 () 閃爍時將無法開啟電源，因為電源開關已經鎖定。
按著電源開關超過 2 秒以解除鎖定。(請參閱第 24 頁。)

2 如圖所示，握住刮鬍刀。

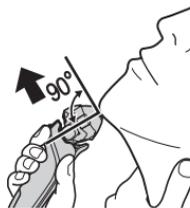

3 請將刮鬍刀輕輕朝您臉部的鬍渣處滑動以刮鬍。

- 將刮鬍刀輕輕按壓在您的臉上。以另一隻手按著皮膚，並以刮鬍刀來回刮鬍。當您習慣了這力道後，可慢慢加壓。過度加壓未必可刮得更徹底。

▶ 註

- 如果按著電源開關超過 2 秒，便會啟動音波振動清潔模式。(請參閱第 28 頁。)
您無法在這種模式中刮鬍子。
- 使用刮鬍刀時，請勿把手指放在電源開關上。這可能造成刮鬍刀鎖定電源開關或關閉。使用刮鬍刀時，請將手指放在適當的手握位置上。
- 在環境溫度約為 5 °C 或更低的地方，將無法操作刮鬍刀。
- 依鬍子濃密度或刮鬍刀頭的鬍鬚修剪量而定，刮鬍感應器可能無法做出反應，且驅動聲音可能不變。這不是異常情況。
- 剩餘電池電量很低時，刮鬍感應器可能不會回應。若發生此狀況，請重新將刮鬍刀充電。
- 請避免以下操作，以避免對外層網面造成損壞。在外層網面的任何部件施加壓力，或讓外層網面與堅硬的物體接觸都可能造成外層網面損壞。
 - 刮鬍時僅使用部份的外層網面。
 - 手指或指甲接觸到外層網面。

▶ 插電刮鬍

即使電池電量低的時候，您仍可將電器插頭接上刮鬍刀，然後插上家居插座來操作。

- 如未能操作刮鬍刀，請繼續充電約一分鐘。
- 使用刮鬍刀時，即使有插上電源供應器，電池仍會放電。

▶ 更換刮鬍刀頭

您可變換軸轉動作。

FREE

您可推動刀頭。



LOCK

您可鎖定刀頭。




► 使用修剪器

將修剪器推桿推至「mm」位置，讓修剪器垂直。



按住開鎖鈕 (a)，並將修剪器推桿向下滑至修剪器。

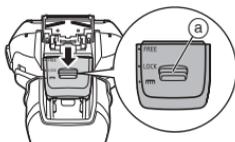

修剪鬚毛

將修剪器推桿推起。開啟刮鬚刀，並放於與皮膚成直角的位置，向下推動即可修剪鬚角。



預先刮鬚


修剪器可用於預先刮鬚長鬍子。預先刮鬚後，再使用刮鬚刀頭來刮鬚。



使用時請檢查各種指示燈

使用時

ES-LT6A



電池的概略容量將顯示為 20 - 100。

- 操作電源開關後，將關閉約 5 秒。
- 刮鬚感應器燈 () 亮起。
- 使用插電刮鬍子時，充電狀態指示燈 () 會亮起。

ES-LT2A



- 刮鬚感應器燈 () 亮起。
- 使用插電刮鬍子時，充電狀態指示燈 () 會亮起。

電池電量不足時

ES-LT6A



- 操作刮鬚刀時，「20」會閃爍。
- 當「20」開始閃爍後，還可刮 2 到 3 次。(視使用情況而異。)

ES-LT2A



- 操作刮鬚刀時，電池電量指示燈 () 會閃爍。
- 電池電量指示燈 () 開始閃爍後，您可以刮鬍 2 至 3 次。(視使用情況而異。)

- 完全充電後，刮鬍刀大約可以使用 2 週。
(此根據每天使用刮鬍刀 3 分鐘，直到電池耗盡)
- 可使用的天數會因以下條件而有所差異。
 - 鬍鬚厚度
 - 施加到皮膚的壓力
 - 周圍溫度
 - 音波振動清潔模式的使用頻率

清洗

切勿使用廚房、浴室或廁所清潔劑。另外，切勿使用稀釋劑、石油精、酒精等擦拭。

否則可能會造成故障。

1. 將電源開關關閉，並中斷連接電源供應器。
 - 解除鎖定開關鎖定。

2. 在外層網面上塗抹一些肥皂和水。

3. 按著電源開關超過 2 秒來啟動音波振動清潔模式。
 - 電池電量指示燈會依序閃爍。

ES-LT6A

- 電池電量指示燈 (◻) 和充電狀態指示燈 (➔) 交替閃爍。

ES-LT2A

- 約 20 秒後，將自動關閉。

4. 除去外層網面部分並按著電源開關超過 2 秒來啟動音波振動清潔模式。



5. 用清水清潔刮鬍刀、外層網面部分與修剪器。
 - 使用清水沖洗後，請上下甩動刮鬍刀數次，清除多餘水氣。
 - 甩動刮鬍刀時若碰撞到梳妝台等物可能會造成故障。

- 在音波振動清潔模式下沖洗刮鬍刀可以減少水潑濺。

6. 用乾布擦去水滴。
7. 讓外層網面部分、刮鬍刀和修剪器完全乾燥。



8. 把外層網面部分安裝至刮鬍刀。
9. 請使用潤滑劑潤滑刮鬍刀。



左邊的標記表示適合使用自來水清洗。


警告

清洗刮鬍刀前，請從刮鬍刀拔掉電源線以防觸電。

潤滑劑

為可長時間舒適刮鬍，我們建議在刮鬍刀上使用供應商提供的潤滑油。

1. 關掉刮鬍刀。
2. 在每層外層網面上放上一滴潤滑油。
3. 升起修剪器，並放上一滴油。
4. 啟動刮鬍刀，然後運作約五秒。

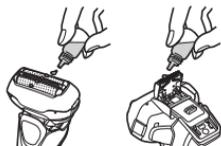

5. 關掉刮鬍刀，然後以軟布抹去外層網面多餘的潤滑油。

以毛刷清潔

▶ 用長毛刷清潔


利用長刷來清潔外層網面 (a)、刮鬍刀本體 (b) 及修剪器 (c)。



▶ 用短毛刷清潔

利用毛刷依著 (A) 方向來清潔內層刀片。

- 切勿以 (B) 方向來使用短刷，因此舉會損耗內層刀片，使刀片不鋒利。
- 切勿以短刷清潔外層網面。

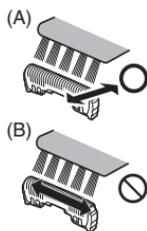


更換外層網面及內層刀片

| | |
|------|-------|
| 外層網面 | 每年一次 |
| 內層刀片 | 每兩年一次 |


▶ 取下外層網面部分

按下網層拆除按鈕，並向上提起外層網面部分。

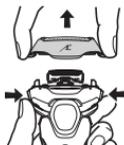


▶ 裝上外層網面部分

將網層標誌 (↖) 轉到前面之後，將外層網面部分牢固安裝到刮鬍刀聽到「卡嗒」一聲。




▶ 更換外層網面

1. 按著拆除外層網面的按鈕，拉下外層網面。
2. 對準網層標誌 (↖) 和外層網面標誌 (△)，然後牢固地安裝在一起，直到發出卡入聲。
 - 外層網面不能反方向安裝。
 - 在將外層網面安裝到刮鬍刀上時，請務必將外層網面插入網層。
 - 切勿以過大力道按下拆除外層網面的按鈕。否則可能會彎曲外層網面，並使網層無法完全連接。

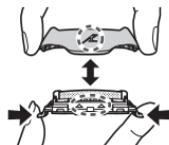

▶ 更換內層刀片

1. 拆掉內層刀片。
2. 一次插入內層刀片到定位。



▶ 更換零件

您可以在經銷商或 Panasonic 直屬服務站購買更換零件。

| | | |
|-----------------------|------|---------|
| ES-LT6A/ES-LT2A 的更換零件 | 外層網面 | WES9089 |
| | 內層刀片 | WES9068 |

疑難排解

請執行以下操作。

如果仍然無法解決問題，請與您購買本機之商店聯繫，或洽 Panasonic 直屬服務站進行維修。

| 問題 | 措施 |
|------------------|---|
| 電源開關無法切換到開啟。 | 解除鎖定開關鎖定。 (請參閱第 24 頁。) |
| 刮落的鬍子四處飛濺。 | 可以藉由在每次刮鬍後加以清潔來改善。 若鬍子沾黏到內層刀片，請使用毛刷清潔內層刀片。 |
| 外層網面變熱。 | 塗上潤滑油。 (請參閱第 28 頁。) 換掉損壞或變形的 外層網面。 (請參閱第 29 頁。) |
| 即使在充電後，操作時間仍然很短。 | 塗上潤滑油。 當每次充電後的操作次數開始減少時，表示電池已經接近使用壽命的終點。 |
| 臭味越來越濃。 | 可以藉由在每次刮鬍後加以清潔來改善。 |
| 刮鬍時，驅動聲有變化。 | 刮鬍感應器燈亮起時，表示刮鬍感應器正在運作中。聲音會視鬍子濃密度而變化。 |

| 問題 | 措施 |
|---------------------|---|
| 您無法像之前將鬍子刮得那麼乾淨。 | 可以藉由在每次刮鬍後加以清潔來改善。 更換外層網面或內層刀片。 外層網面和內層刀片的預期使用壽命： 外層網面： 約 1 年 內層刀片： 約 2 年 |
| | 塗上潤滑油。 |
| 即使已經完成充電，刮鬍刀依然停止運作。 | 在環境溫度約為 5 °C 或更低的地方，將無法操作刮鬍刀。 電池已達到使用壽命的終點。 |
| | 塗上潤滑油。 |
| 發出很大的聲響。 | 刮鬍刀可能因線性馬達的緣故發出很大的聲響。這並不表示發生問題。 確認已妥善裝上刀片。 以毛刷清潔外層網面。 |
| | 依鬍子濃密度或刮鬍刀頭的鬍鬚修剪量而定，刮鬍感應器可能無法做出反應，且驅動聲音可能不變。這不是異常情況。 |
| 刮鬍感應器沒有反應。 | 剩餘電池電量很低時，刮鬍感應器可能不會回應。若發生此狀況，請重新將刮鬍刀充電。 塗上潤滑油。刀片上的潤滑油不足時，刮鬍感應器可能會沒有反應。 |

| 問題 | 措施 |
|-------------------------|---|
| 即使刮鬍刀未與皮膚接觸，刮鬍感應器仍會有反應。 | ▶ 清潔刮鬍刀中刮落的鬍子。刮鬍刀很髒時，請除去網層並用水清洗。(請參閱第 28 頁。) |
| | ▶ 更換外層網面或內層刀片。 外層網面和內層刀片的預期使用壽命： 外層網面： 約 1 年 內層刀片： 約 2 年 |

常見問答集

| 問題 | 答案 |
|-------------------------|--|
| 在經過一段很長的時間不使用後，電池是否會劣化？ | ▶ 如果超過 6 個月不使用，電池將劣化，因此請確保至少每 6 個月進行一次完整的充電。 |
| 我可以在每次使用後都對刮鬍刀充電嗎？ | ▶ 刮鬍刀所使用的是鋰離子電池，因此每次使用後對電池充電並不會對電池壽命造成影響。 |
| 專用潤滑油的成分為何？ | ▶ 潤滑油的成分為液體石蠟。 |

電池壽命

電池使用壽命為 3 年。使用者不應自行更換本刮鬍刀中的電池。請交由 Panasonic 直屬服務站來更換電池。


拆除內置充電電池

此刮鬍刀內的電池請勿由消費者自行替換。

如您的國家/地區有指定認可棄置電池的地方，請確保將電池棄置於這些地方。

下圖只能用於棄置刮鬍刀時。切勿使用下圖作維修之用。若您自行拆解刮鬍刀，產品就不再具有防水功效，並可能會導致產品損壞。

- 將刮鬍刀從電源供應器上拆除。
- 按電源開關接通電源，保持電源的開啟狀態直至電池完全放電。
- 執行步驟 ① 至 ④ 以拉出並拆除電池。
- 請小心，不要讓已移除電池的正負極端子發生短路，且必須在端子上使用膠帶使其絕緣。

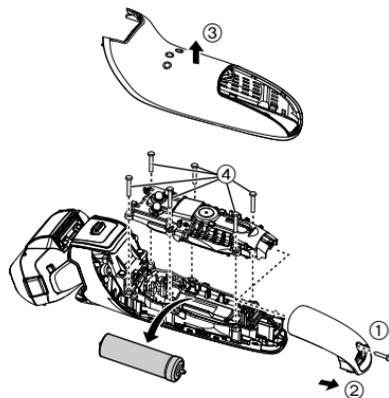

環保及資源回收

此刮鬍刀內藏鋰電池。

如您的國家有指定認可棄置電池的地方，請確保將電池棄置於這些地方。

規格

| | |
|-------|------------------------|
| 電源 | 請參閱電源供應器上標籤。 (自動變壓) |
| 發動機電壓 | 3.6 V \equiv |
| 充電時間 | 約一小時 |

此產品只適於家居內使用。

Panasonic

사용 설명서
(가정용) AC 충전식 면도기

모델 번호 ES-LT6A
ES-LT2A

목차

| | | | |
|---------------------|----|---------------------|----|
| 안전 주의 사항..... | 34 | 면도기 청소..... | 44 |
| 용도..... | 37 | 문제 해결..... | 46 |
| 부품 명칭..... | 38 | 배터리 수명..... | 48 |
| 스위치 잠금의 작동과 표시..... | 39 | 내장된 충전식 배터리 분리..... | 48 |
| 면도기 충전..... | 40 | 사양..... | 48 |
| 면도기 사용..... | 41 | | |

본 Panasonic 제품을 구입해 주셔서 감사합니다.
이 기기를 사용하기 전에, 이 사용 설명서를 잘 읽고 다음을 위해 보관하십시오.

안전 주의 사항

부상, 사망, 감전, 화재 및 재산상의 피해 위험을 줄이려면 항상 다음의 안전 주의 사항을 준수하십시오.

기호 설명

다음의 기호는 지시를 무시하고 부적절하게 사용할 경우 발생하는 위험, 부상 및 재산 피해 수준을 분류하고 설명하는 데 사용됩니다.

위험

심각한 부상이나 사망을 초래하는 잠재적인 위험을 나타냅니다.

경고

심각한 부상이나 사망을 초래할 수 있는 잠재적인 위험을 나타냅니다.

주의

경미한 부상을 초래할 수 있는 위험을 나타냅니다.

다음의 기호는 준수할 지침 유형을 분류하고 설명하는 데 사용됩니다.



이 기호는 수행해서는 안 되는 특정 작동 절차를 사용자에게 알리는 데 사용됩니다.



이 기호는 기기를 안전하게 작동하기 위해서 반드시 준수해야 하는 특정 작동 절차를 사용자에게 알리는 데 사용됩니다.

경고

▶ 전원 공급



작은 손으로 어댑터를 가정용 콘센트에 연결하거나 분리하지 마십시오.

- 이렇게 하면 감전이나 부상을 초래할 수 있습니다.

AC 어댑터와 충전 스탠드를 물에 담그거나 물로 세척하지 마십시오.

물이 가득한 싱크대나 욕조 위 또는 주변에 AC 어댑터와 충전 스탠드를 놓지 마십시오.

AC 어댑터가 손상되었거나 전원 플러그가 가정용 콘센트에 헐거워진 경우 절대 기기를 사용하지 마십시오.



코드를 손상하거나 개조하거나 세계 구부리거나 당기거나 꼬지 마십시오.

또한 코드 위에 무거운 물체를 올려두거나 꼭 조이지 마십시오.

- 이렇게 하면 감전 또는 단락으로 인한 화재를 초래할 수 있습니다.

가정용 콘센트 또는 배선의 정격을 초과하는 방식으로 사용하지 마십시오.



- 가정용 콘센트 하나에 너무 많은 플러그를 연결하여 정격을 초과하면 과열로 인해 화재가 발생할 수 있습니다.

제공된 AC 어댑터와 충전 스탠드 이외의 다른 제품을 사용하지 마십시오. 또한 제공된 AC 어댑터와 충전



스탠드로 다른 제품을 충전하지 마십시오.

- 이렇게 하면 단락으로 인해 화상을 입거나 화재가 발생할 수 있습니다.

⚠ 경고

항상 AC 어댑터에 명시된 정격 전압과 일치하는 전기 전원을 사용하여 기기를 작동하도록 하십시오.



어댑터를 끝까지 삽입합니다.

- 이렇게 하지 않으면 화재 또는 감전을 초래할 수 있습니다.

▶ 이상이나 오작동이 발생한 경우

이상이나 장애가 발생한 경우에는 즉시 사용을 중단하고 어댑터를 분리하십시오.

- 이렇게 하지 않으면 화재, 감전이나 부상을 초래할 수 있습니다.

< 이상 또는 장애가 발생한 경우 >



• 본체, 충전 스탠드, 어댑터 또는 코드가 변형되었거나 비정상적으로 뜨겁습니다.

• 본체, 충전 스탠드, 어댑터 또는 코드에서 타는 냄새가 납니다.

• 본체, 충전 스탠드, 어댑터 또는 코드 사용 중이나 충전 중 이상한 소리가 납니다.

- 공인 서비스 센터에 즉시 검사나 수리를 요청하십시오.

▶ 본 제품

본 면도기에는 충전식 배터리가 내장되어 있습니다.



면도기를 불 속에 폐기하거나, 열을 가하거나, 고온 환경에서 충전, 사용 또는 방치하지 마십시오.

- 이렇게 하면 과열, 정화 또는 폭발을 초래할 수 있습니다.



개조 또는 수리하지 마십시오.

- 이렇게 하면 화재, 감전 또는 부상을 초래할 수 있습니다. 수리는 공인 서비스 센터에 문의하십시오(배터리 교체 등).



제품을 폐기할 때를 제외하고는 절대 분해하지 마십시오.

- 이렇게 하면 화재, 감전 또는 부상을 초래할 수 있습니다.

▶ 청소



면도기를 물로 청소할 때는 AC 어댑터를 분리하십시오.

- 이렇게 하지 않으면 감전이나 부상을 초래할 수 있습니다.



청소할 때는 항상 가정용 콘센트에서 어댑터의 플러그를 뽑아 두십시오.

- 이렇게 하지 않으면 감전이나 부상을 초래할 수 있습니다.



전원 플러그, 기기 플러그와 충전 플러그를 정기적으로 청소하여 먼지가 축적되지 않게 하십시오.

- 이렇게 하지 않으면 습도로 인해 절연 장애가 발생하여 화재를 초래할 수 있습니다.

어댑터를 분리하고 마른 천으로 닦아내십시오.



안전 책임자가 기기의 사용지침을 지도해준 경우가 아니라면 (어린이를 포함하여) 신체, 감각, 정신 장애가 있거나 경험과 지식이 부족한 사람들 또는 어린이가 이 기기를 가지고 놀지 않도록 지도해야 합니다.

- 이렇게 하지 않으면 사고나 부상을 초래할 수 있습니다.



전원 코드는 새 것으로 교체가 불가능합니다. 따라서 코드가 손상된 경우 AC 어댑터를 폐기해야 합니다.

- 이렇게 하지 않으면 사고나 부상을 초래할 수 있습니다.

▶ 사고 예방



어린이나 유아의 손이 닿을 수 있는 곳에 보관하지 마십시오. 어린이나 유아가 기기를 사용하지 못하게 하십시오.

- 내부 면도날, 청소용 솔 및 / 또는 윤활유 용기를 입에 넣으면 사고가 나거나 다칠 수 있습니다.

⚠ 경고

실수로 오일을 삼킨 경우, 구토를 유발하지 말고 다량의 물을 마신 후 의사의 진찰을 받으십시오.

❗ 오일이 눈에 닿은 경우, 즉시 흐르는 물로 철저히 씻어내고 의사의 진찰을 받으십시오.

- 이 지시사항을 따르지 않으면 신체적인 문제가 발생할 수 있습니다.

⚠ 주의

▶ 피부 보호

❗ 면도망을 입술이나 기타 안면 부위에 닿 때는 너무 세게 누르지 마십시오. 면도망을 여드름이나 상처가 있는 피부에 대지 마십시오.

- 이렇게 하면 피부에 상처를 입을 수 있습니다.

❗ 면도망을 세게 누르지 마십시오. 또한 사용 중 손가락이나 손톱으로 면도망을 만지지 마십시오. 머리카락이나 그 밖의 신체 부분에 이 제품을 사용하지 마십시오.

- 이렇게 하면 피부에 상처를 입거나 면도망 수명이 줄어들 수 있습니다.

❗ 내부 면도날의 칼날 부분 (금속 부분) 을 만지지 마십시오.

- 이렇게 하면 손에 상처를 입을 수 있습니다.

❗ 사용 전 면도망에 균열이나 변형이 없는지 확인하십시오.

- 이렇게 하지 않으면 피부에 상처를 입을 수 있습니다.

휴대하거나 보관할 때는 면도기에 보호 마개를 끼워 놓으십시오.

❗ - 이렇게 하지 않으면 피부에 상처를 입거나 면도망 수명이 줄어들 수 있습니다.

▶ 다음과 같은 주의사항을 유의하십시오

❗ 핀이나 쓰레기가 전원 플러그, 기기 플러그 또는 충전 플러그에 들러붙지 않도록 하십시오.

- 이렇게 하면 감전 또는 단락으로 인한 화재를 초래할 수 있습니다.

❗ 가족 또는 다른 사람과 면도기를 공유해서 사용하지 마십시오.

- 지키지 않으면 감염 또는 염증을 유발할 수 있습니다.

❗ 제품을 떨어뜨리거나 다른 물체와 충돌시키지 마십시오.

- 이렇게 하면 부상을 입을 수 있습니다.

❗ 보관할 때 코드를 어댑터에 감지 마십시오.

- 이렇게 하면 코드의 전선에 힘이 가해져 끊어지고 누전 때문에 화재가 발생할 수 있습니다.

❗ 사용하지 않을 때는 어댑터를 가정용 콘센트에서 분리해 두십시오.

- 이렇게 하지 않으면 절연 손상으로 인해 전기 누출이 발생하여 감전 또는 화재를 초래할 수 있습니다.

❗ 코드가 아닌 어댑터나 기기 플러그를 잡고 어댑터 또는 기기 플러그를 뽑으십시오.

- 이렇게 하지 않으면 감전이나 부상을 초래할 수 있습니다.

▶ 충전식 배터리 폐기

⚠ 위험

충전식 배터리는 오직 이 면도기에만 사용해야 합니다. 이 배터리를 다른 제품에 사용하지 마십시오. 배터리를 제품에서 분리한 상태에서 충전하지 마십시오.

- 화염 속에 던지거나 열을 가하지 마십시오.
- 충격을 가하거나 분해하거나 개조하거나 못으로 구멍을 뚫지 마십시오.



- 금속성 물체를 통해 배터리의 양극과 음극이 서로 접촉되게 하지 마십시오.
 - 욕길이나 머리핀과 같은 금속성 보석과 함께 배터리를 운반하거나 보관하지 마십시오.
 - 직사광선 아래나 기타 열원 근처와 같이 고온에 노출되는 장소에서 배터리를 충전하거나 사용하거나 방치하지 마십시오.
 - 절대로 튜브를 벗기지 마십시오.
- 이렇게 하면 과열, 점화 또는 폭발을 초래할 수 있습니다.

⚠ 경고

충전식 배터리를 분리한 후에는 어린이와 유아의 손에 닿지 않도록 보관하십시오.



- 배터리를 우발적으로 삼키게 되면 몸에 해로울 수 있습니다.
- 이런 일이 발생한 경우 즉시 의사의 진찰을 받으십시오.

배터리액이 누출된 경우 다음 절차를 따르십시오. 맨 손으로 배터리를 잡지 마십시오.


- 배터리액이 눈에 닿으면 실명할 수 있습니다. 눈을 비비지 마십시오. 깨끗한 물로 즉시 씻어내고 의사의 진찰을 받으십시오.
- 배터리액이 피부나 옷에 닿으면 염증이나 부상을 초래할 수 있습니다. 깨끗한 물로 철저히 씻어내고 의사의 진찰을 받으십시오.



용도

- 면도망이 딱딱한 물체에 부딪히지 않도록 하십시오. 면도날은 매우 얇기 때문에 손상되거나 쉽게 변형될 수 있습니다.
- 본체를 드라이어나 팬 히터로 건조시키지 마십시오. 오작동이 발생하거나 부품 변형을 초래할 수 있습니다.
- 면도망 프레임에서 분리된 면도기를 직사광선에 노출시키지 마십시오. 방수 고무가 변형되면 방수 기능이 저하되어 오작동을 초래할 수 있습니다.
- 사용한 후에는 습기가 적은 곳에 면도기를 보관하십시오. 이렇게 하지 않으면 응결이나 녹이 발생하여 오작동을 초래할 수 있습니다.
- 이때 내부 면도날이 모두 장착된 상태여야 합니다. 내부 면도날이 하나만 장착된 경우 면도기가 고장날 수 있습니다.
- 물로 면도기를 세척할 때 소금물이나 뜨거운 물은 사용하지 마십시오. 면도기를 오랫동안 물에 담가두지 마십시오.

부품 명칭

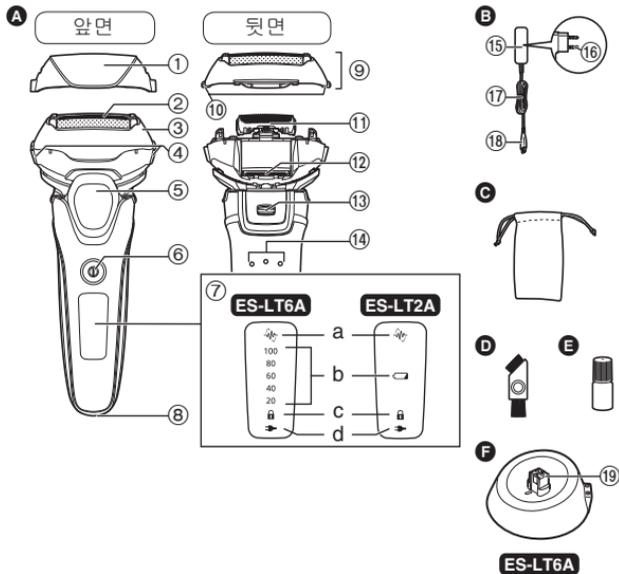

A 본체

- ① 보호 마개
- ② 면도망
- ③ 면도망 프레임
- ④ 면도망 프레임 분리 단추
- ⑤ 손잡이
- ⑥ 전원 스위치
면도기를 켜거나 끄고 전원 스위치를 잠그거나 해제할 수 있습니다.

⑦ 램프 표시

- a. 면도 센서 램프 (☁)
- b. 배터리 용량 램프
- c. 스위치 잠금 램프 (🔒)
- d. 충전 표시 램프 (➔)
- ⑧ 면도기 소켓
- ⑨ 면도망 부위
- ⑩ 면도망 분리 단추
- ⑪ 내부 면도날
- ⑫ 트리머


- ⑬ 트리머 핸들
- ⑭ 본체 후면 단자
- B AC 어댑터 (RE7-87)
(AC 어댑터의 모양은 지역에 따라 다릅니다.)
- ⑮ 어댑터
- ⑯ 전원 플러그
- ⑰ 코드
- ⑱ 기기 플러그

부속품

- C 여행용 주머니
- D 청소용 솔
- E 윤활유
- F 충전 스탠드 **ES-LT6A**
- ⑲ 충전 플러그

스위치 잠금의 작동과 표시

▶ 전원 스위치 잠그기
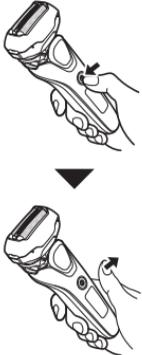
| | | |
|--|---|---|
| <p>1. 일단 전원 스위치를 누른 후 손을 땁니다 .</p> <ul style="list-style-type: none"> • 면도기가 작동을 시작합니다 . | <p>2. 면도기가 작동 중인 상태에서 전원 스위치를 2 초 이상 누릅니다 .</p> <ul style="list-style-type: none"> • 면도기가 작동을 멈춥니다 . | <p>3. 전원 스위치에서 손을 땁니다 .</p> |
|  |  |  |
| <p> 스위치 잠금 램프가 꺼진 상태입니다 .</p> | <p> 스위치 잠금 램프가 켜집니다 .</p> | <p> 스위치 잠금 램프가 5 초 후에 꺼집니다 .</p> |

▶ 전원 스위치 해제하기

| | |
|---|---|
| <p>1. 전원 스위치를 2 초 이상 누릅니다 .</p>  | <p>2. 면도기가 작동을 시작하면 전원 스위치에서 손을 땁니다 .</p>  |
| <p> 스위치 잠금 램프가 깜박거립니다 .</p> | <p> 스위치 잠금 램프가 꺼집니다 .</p> |

▶ 전원 스위치가 잠긴 것을 확인하기

| |
|---|
| <p>전원 스위치가 잠겨 있는 상태에서 전원 스위치를 누릅니다 .</p>  |
| <p> 스위치 잠금 램프가 깜박거리다가 5 초 후에  후 꺼집니다 .</p> |

• 또한 , 충전 중에 AC 어댑터를 분리하여 잠금 상태를 확인할 수도 있습니다 .

면도기 충전

1 면도기에 전원 플러그를 연결합니다.


- 면도기를 끼워넣기 전에 전원을 끕니다.

2 가정용 콘센트에 어댑터를 꽂습니다.

- 면도기 소켓에 있는 물기를 닦아 주십시오.
- 충전 표시 램프 (➡) 가 켜지는지 확인합니다.
- 충전은 약 1 시간 후에 완료됩니다.
- 충전 시간은 충전 용량에 따라 다를 수 있습니다.
- 매번 사용한 후에 기기를 충전하는 것은 배터리 수명에 영향을 주지 않습니다.


3 충전이 완료된 후에는 어댑터를 뽑으십시오.

- 배터리를 1 시간 이상 충전하더라도 배터리 성능에 영향을 주지 않습니다.

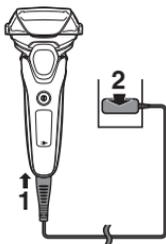

충전 중

ES-LT6A



충전 표시 램프 (➡) 가 켜집니다.

충전이 진행될수록 배터리 용량 램프의 수가 늘어납니다.


ES-LT2A



충전 표시 램프 (➡) 가 켜집니다.

충전 완료

ES-LT6A

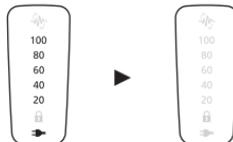

배터리 용량 램프와 충전 표시 램프 (➡) 가 점등된 다음 5 초 후에 꺼집니다.

ES-LT2A



충전 표시 램프 (➡) 가 꺼집니다.

비정상적 충전

ES-LT6A



충전 표시 램프 (➡) 가 1 초에 두 번씩 깜박입니다.


ES-LT2A



- 충전을 위한 권장 실내 온도 범위는 10 ~ 35 ℃입니다. 너무 높거나 낮은 온도에서는 충전 시간이 길어지거나 배터리가 적절하게 충전되지 않을 수 있습니다. 권장 실내 온도 범위 내에서 면도기를 충전하십시오.
- 면도기를 처음으로 충전하거나 6 개월 이상 사용하지 않은 경우에는 충전 시간이 변경되거나 충전 표시 램프 (➡) 가 몇 분 동안 켜지지 않을 수 있습니다. 연결한 상태로 두면 결국에는 램프가 켜집니다.
- 면도기를 사용하는 동안 라디오나 기타 음원에서 잡음이 발생하면 다른 위치로 이동하여 면도기를 사용하십시오.

충전 스탠드를 사용하여 충전 **ES-LT6A**

1. 충전 스탠드에 전원 플러그를 연결합니다.
2. 충전 스탠드에 면도기를 올려 놓습니다.
3. 가정용 콘센트에 어댑터를 꽂습니다.

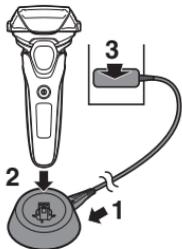


면도기 사용

1 전원 스위치를 누릅니다.

- 스위치 잠금 램프 (🔒)가 깜박거릴 때는 전원 스위치가 잠겨 있기 때문에 전원을 켤 수 없습니다. 전원 스위치를 2 초 이상 눌러 해제합니다. (39 페이지를 참조하십시오.)

2 면도기를 그림과 같이 잡습니다.

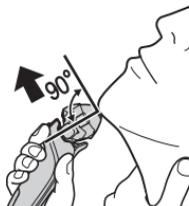

3 면도기를 수염이 난 방향으로 얼굴에 대고 천천히 미끄러지듯 면도를 합니다.

- 얼굴에 면도기를 가볍게 대고 면도를 시작합니다. 다른 손으로 피부를 팽팽히 당기면서 수염이 난 방향으로 면도기를 앞뒤로 밀며 움직입니다. 어느 정도 피부에 면도기가 익숙해지면 조금씩 면도기를 누르는 힘을 늘립니다. 너무 세게 누르면 깨끗하게 면도가 되지 않습니다.

▶ 메모

- 전원 스위치를 2 초 이상 누르고 있으면 음파 진동 세정 모드가 시작됩니다. (44 페이지를 참조하십시오.) 이 모드에서는 면도를 할 수 없습니다.
- 면도기를 사용하는 동안에는 전원 스위치에 손가락을 올려놓지 마십시오. 이로 인해 전원 스위치가 잠기거나 면도기가 꺼질 수 있습니다. 면도기를 사용하는 동안에는 손가락을 손잡이에 올려놓으십시오.
- 주위 온도가 약 5 °C 이하인 경우, 면도기가 작동하지 않을 수 있습니다.
- 면도기 헤드 안에 있는 턱수염의 두께나 면도하는 양에 따라 면도 센서가 반응하지 않고 작동 사운드가 바뀌지 않을 수 있습니다. 이는 이상 문제가 아닙니다.
- 남은 배터리 용량이 적은 경우 면도 센서가 반응하지 않을 수도 있습니다. 이 경우 면도기를 다시 충전합니다.
- 면도망 손상 방지를 위해 다음과 같은 상황은 피하십시오. 면도망 부위에 압력을 가하거나 면도망이 손상될 만한 딱딱한 물체를 면도망 안으로 넣는 경우.
 - 면도망 부위로만 면도할 경우.
 - 손가락이나 손톱을 면도망 부위에 접촉시키는 경우.

▶ 코드 연결 상태로 면도

배터리 잔량이 적은 경우에도 면도기에 전원 플러그를 연결한 후 어댑터를 가정용 콘센트에 꽂으면 면도기를 사용할 수 있습니다 .


- 면도기가 작동하지 않으면 약 1 분간 계속 충전합니다 .
- AC 어댑터로 면도기를 사용하더라도 배터리는 방전됩니다 .

▶ 면도기 헤드 전환하기

선회 작용을 변경할 수 있습니다 .


FREE

면도기 헤드를 이동시킬 수 있습니다 .



LOCK

면도기 헤드를 잠글 수 있습니다 .




▶ 트리머 사용

트리머 핸들을 “mm” 위치로 밀어 올리면 트리머가 수직으로 세워집니다 .



잠금 해제 단추 (a) 를 누른 상태에서 트리머 핸들을 밀어서 내리면 트리머가 내려갑니다 .

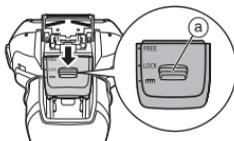

귀밀털 정리하기

트리머 핸들을 위로 밀니다 . 면도기를 켜고 피부와 각도를 맞춘 후 면도기를 아래로 이동하면서 귀밀털을 정리합니다 .



사전 면도


긴 수염을 사전 면도하기 위해 트리머를 사용할 수 있습니다 . 사전 면도 후 면도기 헤드로 수염을 깎습니다 .



사용 중 램프 표시의 의미

사용 중

ES-LT6A



배터리 용량의 대략적인 양이 20 ~ 100 로 표시됩니다 .

- 전원 스위치를 조작하고 약 5 초 후에 전원이 꺼집니다 .
- 연도 센서 램프 () 가 켜집니다 .
- 코드를 연결한 상태로 연도하는 경우에는 충전 표시 램프 () 가 켜집니다 .


ES-LT2A



- 연도 센서 램프 () 가 켜집니다 .
- 코드를 연결한 상태로 연도하는 경우에는 충전 표시 램프 () 가 켜집니다 .

배터리가 부족할 때

ES-LT6A



연도기를 조작할 때에는 “20” 가 깜박입니다 .

- “20” 으로 깜박인 후 2 ~ 3 회 정도 연도가 가능합니다 . (이 수치는 사용 정도에 따라 다를 수 있습니다 .)

ES-LT2A



연도기를 작동시키면 배터리 용량 램프 () 가 깜박입니다 .

- 배터리 용량 램프 () 가 깜박인 이후에도 2 ~ 3 회 연도할 수 있습니다 . (이 수치는 사용 정도에 따라 다를 수 있습니다 .)

- 연도기는 완전 충전 상태에서 약 2 주 동안 사용할 수 있습니다 . (배터리가 방전될 때까지 하루에 3 분 연도를 할 경우)
- 사용 가능한 일수는 아래의 조건에 따라 다릅니다 .
 - 탁수염의 두께
 - 피부에 가하는 압력
 - 주위 온도
 - 음파 진동 세정 모드 사용 빈도

면도기 청소

주방, 욕실 또는 화장실 세제는 사용하지 마십시오. 또한, 시너, 벤진, 알코올 등으로 닦지 마십시오.

지키지 않으면 오작동을 초래할 수 있습니다.

1. 전원 스위치를 끄고 AC 어댑터를 분리합니다.

- 스위치 잠금을 해제합니다.

2. 면도망에 비누와 물을 약간 묻힙니다.

3. 2 초 이상 전원 스위치를 누르면

음파 진동 세정 모드가

시작됩니다.

- 배터리 용량 램프가 차례로

깜박입니다. **ES-LT6A**

- 배터리 용량 램프 () 및 충전

표시 램프 ()가 번갈아

깜박입니다. **ES-LT2A**

- 약 20 초 후에 자동으로 전원이 꺼집니다.

4. 면도망 부위를 분리한 후 2 초 이상 전원

스위치를 누르고 있으면 음파 진동 세정

모드가 시작됩니다.

5. 면도기, 면도망 부위 및 트리머를 흐르는

- 물에 청소해 주십시오.

- 물로 헹군 후 면도기를 아래 위로 몇 번

흔들어서 남아 있는 물기를

제거합니다.


면도기를 흔들면서 세면대 등을 치면

오작동을 초래할 수 있습니다.

- 음파 진동 세정 모드에서 면도기를 행구면 물이 튀는 것을

줄일 수 있습니다.

6. 마른 천으로 물기를 제거합니다.

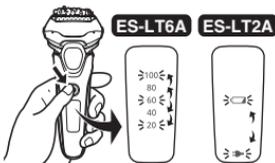

7. 면도망 부위, 면도기 및 트리머를 완전히 건조시켜야 합니다.



8. 면도기에 면도망 부위를 장착하십시오.

9. 면도기에 윤활유를 바릅니다.



왼쪽의 마크는 흐르는 수도물로 세척할 수 있음을 의미합니다.

경고

감전 사고를 예방하기 위해 물로 세척하기 전에 면도기에서 코드를 분리합니다.

윤활

면도할 때 부드러운 감각을 오랫동안 유지하려면 면도기에 전용 윤활유를 칠해주는 것이 좋습니다.

1. 면도기 전원을 끕니다.

2. 각 면도망에 윤활유를 한 방울씩

떨어뜨립니다.

3. 트리머를 올린 후 윤활유를 한 방울


떨어뜨립니다.

4. 면도기 전원을 켜 후 약 5 초 간

작동합니다.

5. 면도기 전원을 끈 후 부드러운 천으로 면도망에 남아 있는

윤활유를 닦아 냅니다.

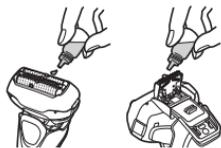

솔을 사용하여 청소

▶ 긴 솔을 사용하여 청소


면도망 (a), 면도기 본체 (b) 및 트리머 (c) 는 긴 솔을 사용하여 청소합니다 .



▶ 짧은 솔을 사용하여 청소

내부 면도날은 짧은 솔을 (A) 방향으로 움직이면서 청소합니다 .

- 짧은 솔을 (B) 방향으로 움직이지 마십시오 . 그러면 내부 면도날이 손상되거나 무뎠을 수 있습니다 .
- 면도망을 청소할 때 짧은 솔을 사용하지 마십시오 .

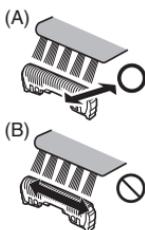


면도망과 내부 면도날 교환

| | |
|--------|---------|
| 면도망 | 년 1 회 |
| 내부 면도날 | 2 년 1 회 |


▶ 면도망 부위 분리

면도망 프레임 분리 단추를 누르고 면도망 부위를 위쪽 방향으로 빼냅니다 .

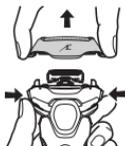

▶ 면도망 부위 장착


프레임 마크 (A) 를 앞으로 돌린 후 단단히 찰칵 소리가 날 때까지 면도망 부위를 면도기에 접합시킵니다 .



▶ 면도망 교환


1. 면도망 분리 단추를 누르고 면도망을 아래쪽으로 누릅니다 .
2. 면도망 프레임 (A) 마크와 면도망 (B) 마크를 일직선이 되도록 정렬한 후 찰칵 소리가 날 때까지 단단히 접합시킵니다 .

- 면도망은 반대 방향으로서는 접합되지 않습니다 .
- 면도기에 장착할 때는 항상 프레임에 면도망을 삽입합니다 .
- 면도망 분리 단추를 과도한 힘으로 누르지 마십시오 . 지키지 않으면 면도망이 구부러져 면도망 프레임에 완전하게 접합되지 않습니다 .

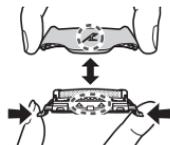

▶ 내부 면도날 교환

1. 한 번에 하나씩 내부 면도날을 분리합니다 .
2. 한 번에 하나씩 내부 면도날을 장착합니다 .



▶ 교환 부품

교환 부품은 공식 서비스 센터에서 구입할 수 있습니다 .

| | | |
|----------------------------|--------|---------|
| ES-LT6A/ES-LT2A 용 교환 부품 | 면도망 | WES9089 |
| | 내부 면도날 | WES9068 |

문제 해결

다음과 같은 조치를 취하십시오.
 그래도 문제가 해결되지 않으면 제품을 구입한 매장이나
 Panasonic 공인 서비스 센터에 연락하여 수리를 받으십시오.

| 문제 | 조치 |
|---------------------|--|
| 전원 스위치가 켜지지 않습니다. | ▶ 스위치 잠금을 해제합니다. (39 페이지를 참조하십시오.) |
| 면도한 털이 사방으로 날립니다. | ▶ 이 문제는 면도 후마다 면도기를 청소하면 개선될 수 있습니다. ▶ 내부 면도날에 털이 끼어 있으면 솔로 내부 면도날을 청소하십시오. |
| 면도망이 뜨거워집니다. | ▶ 오일을 바르십시오. (44 페이지를 참조하십시오.) ▶ 면도망이 손상되었거나 변형된 경우 교체하십시오. (45 페이지를 참조하십시오.) |
| 충전 후에도 작동 시간이 짧습니다. | ▶ 오일을 바르십시오. ▶ 충전할 때마다 작동 횟수가 줄어드는 경우, 배터리의 수명이 거의 다 한 것입니다. |
| 악취가 점점 강해집니다. | ▶ 이 문제는 면도 후마다 면도기를 청소하면 개선될 수 있습니다. |
| 면도 중 작동 사운드가 바뀝니다. | ▶ 면도 센서 램프가 켜져 있는 동안에는 면도 센서가 작동 중입니다. 사운드는 턱수염 두께에 따라 바뀝니다. |

| 문제 | 조치 |
|------------------------|---|
| 전처럼 짧게 면도를 할 수 없습니다. | ▶ 이 문제는 면도 후마다 면도기를 청소하면 개선될 수 있습니다. ▶ 면도망 및 / 또는 내부 면도날을 교체하십시오. ▶ 면도망과 내부 면도날의 예상 수명 : 면도망 : 약 1년 내부 면도날 : 약 2년 ▶ 오일을 바르십시오. |
| 충전 후에도 면도기가 작동하지 않습니다. | ▶ 주위 온도가 약 5 °C 이하인 경우, 면도기가 작동하지 않을 수 있습니다. ▶ 배터리가 수명이 다했습니다. |
| 큰 소리가 납니다. | ▶ 오일을 바르십시오. ▶ 선형 모터 구동으로 인해 면도기에서 고음의 소리가 납니다. 이는 문제를 나타내지 않습니다. ▶ 면도날이 제대로 부착되었는지 확인하십시오. ▶ 솔로 면도망을 청소하십시오. |

| 문제 | 조치 |
|------------------------------------|--|
| 면도 센서가 반응하지 않습니다 . | ▶ 면도기 헤드 안에 있는 턱수염의 두께나 면도하는 양에 따라 면도 센서가 반응하지 않고 작동 사운드가 바뀌지 않을 수 있습니다 . 이는 이상 문제가 아닙니다 . |
| | ▶ 남은 배터리 용량이 적은 경우 면도 센서가 반응하지 않을 수도 있습니다 . 이 경우 면도기를 다시 충전합니다 . |
| | ▶ 오일을 바르십시오 . 면도날에 오일이 충분하지 않을 경우 면도 센서가 반응하지 않을 수 있습니다 . |
| 면도기가 피부에 닿지 않은 경우에도 면도 센서가 반응합니다 . | ▶ 면도기에서 잘린 수염을 청소하십시오 . 면도기가 매우 더러워진 경우 , 면도망 프레임을 분리하여 물로 세척하십시오 . (44 페이지를 참조하십시오 .) |
| | ▶ 면도망 및 / 또는 내부 면도날을 교체하십시오 . 면도망과 내부 면도날의 예상 수명 : 면도망 : 약 1 년 내부 면도날 : 약 2 년 |

자주 묻는 질문

| 질문 | 대답 |
|-----------------------------------|---|
| ▶ 얼마 동안 사용하지 않으면 배터리의 성능이 떨어지나요 ? | 6 개월 이상 사용하지 않으면 배터리의 성능이 떨어지므로 적어도 6 개월마다 한 번씩 완전히 충전시키십시오 . |
| ▶ 매번 면도기를 사용한 후에 충전을 해야 하나요 ? | 리튬 이온 배터리이기 때문에 매번 사용한 후에 충전을 해도 배터리의 수명에는 영향을 주지 않습니다 . |
| ▶ 전용 윤활유는 무슨 성분으로 되어 있나요 ? | 윤활유의 성분은 액체 파라핀입니다 . |

배터리 수명

배터리 수명은 3 년입니다 . 이 면도기의 배터리는 소비자가 교체할 수 없습니다 . 공인 서비스 센터에서 배터리 교체를 의뢰하십시오 .


내장된 충전식 배터리 분리

면도기를 폐기하기 전에 내장된 충전식 배터리를 분리합니다 .

현지에 지정 폐기 장소가 있는 경우 이 폐기 장소에 배터리를 폐기해야 합니다 .

이 그림은 면도기를 폐기할 때만 사용해야 하며 , 수리 시에 사용해서는 안 됩니다 . 면도기를 사용자 본인이 분해할 경우 , 더 이상 방수가 되지 않아 고장을 일으킬 수 있습니다 .

- AC 어댑터에서 면도기를 분리합니다 .
- 전원 스위치를 눌러 전원을 켜 다음 , 배터리가 완전히 방전될 때까지 전원을 켜 두십시오 .
- 면도기를 분해하는 ① ~ ④ 단계를 따르고 배터리를 들어 올린 후 분리합니다 .
- 분리된 배터리의 양극과 음극 단자에서 단락이 일어나지 않도록 유의하고 양쪽 단자에 테이프를 붙여서 절연시키십시오 .

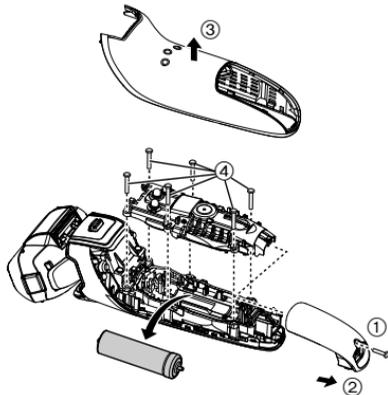

환경 보호 및 자원 재활용 정보

이 면도기에는 리튬 이온 배터리가 들어 있습니다 .
현지에 지정 폐기 장소가 있는 경우 이 폐기 장소에 배터리를 폐기해야 합니다 .

사양

| | |
|-------|---|
| 전원 | AC 어댑터의 제품 레이블을 참조하십시오 . (자동 변압 방식 채택) |
| 모터 전압 | 3.6 V --- |
| 충전 시간 | 약 1 시간 |

본 제품은 가정에서만 사용할 수 있습니다 .

품명 : Rechargeable Shaver

모델명 : ES-LT2A/RE7-87

상호명 : Panasonic Corporation

제조사 : Panasonic Corporation

(Panasonic Corporation Hikone Factory)

Made in Japan

제조일자 : 제품내 별도각인표시



MSIP-REM-Pa3-ES-LT2A

이 인증 정보는 ES-LT2A/RE7-87 만 해당됩니다 .

Panasonic Corporation
<http://www.panasonic.com>
© Panasonic Corporation 2015