

LUMIX LAB APP


Instruction Manual



1. Bluetooth Connection

Switch to the [Camera] screen and select [Pair The Camera].

01

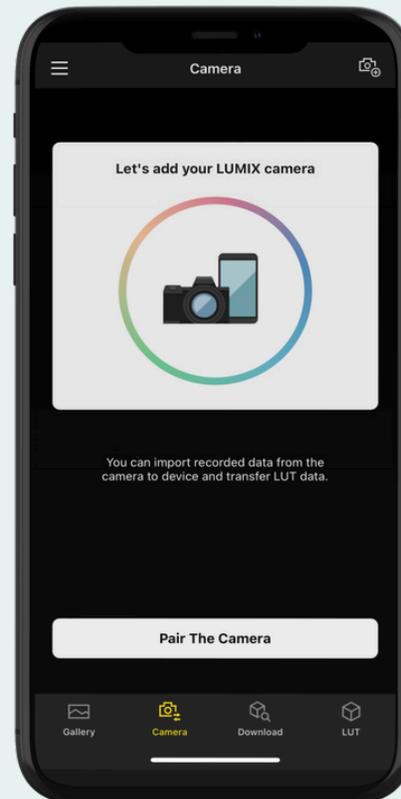


02

Set the camera to Bluetooth pairing standby state.




03

Select the camera to be connected in LUMIX Lab

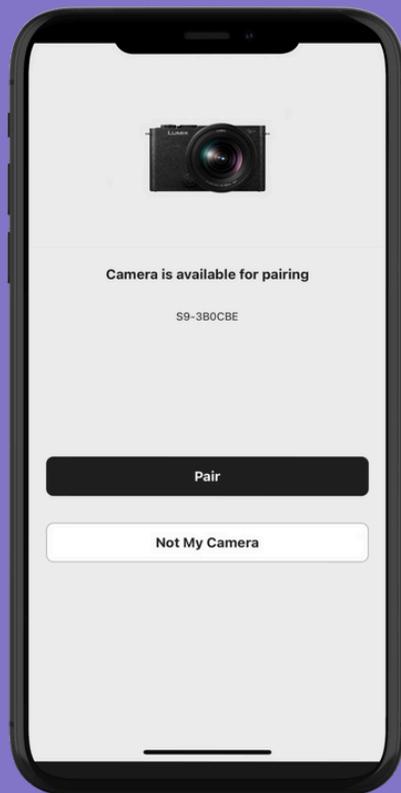

2. Import Images

01 Select [Transfer Photo / Video] in LUMIX Lab

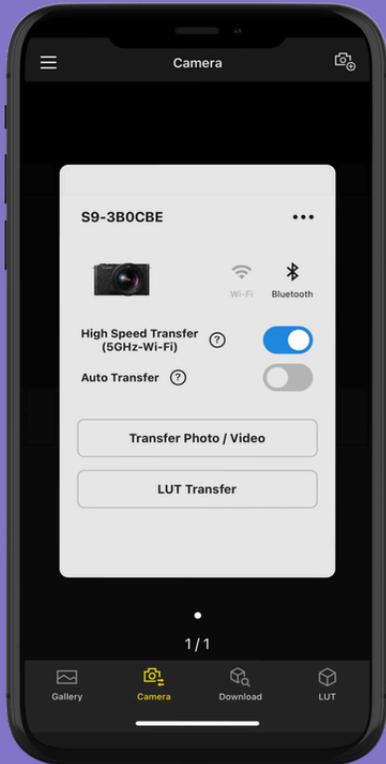


02 Connect to the camera with WIFI. Select [Join] to start the connection.

"LUMIX Lab" Wants to Join
Wi-Fi Network "
S9-3B0CBCE"?

Cancel

Join


03 Select the image to transfer. Select .

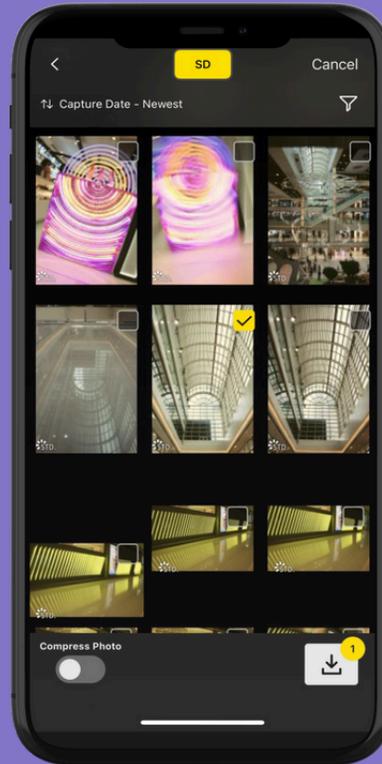

04 After transferring, select [End remote control] on the camera to continue shooting.

3. Auto Transfer

01 Enable [Auto Transfer] in Lumix Lab. Select [Join] to start the connection.

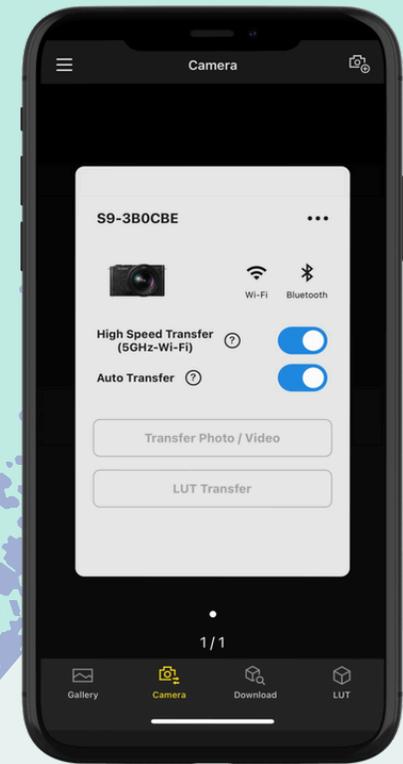

02 Images are transferred to your smartphone as they are taken.


Auto Transfer
Transferring
51% complete

Auto Transfer OFF

4. Download and Transfer LUT


01

Switch to the [Download] screen in LUMIX Lab.

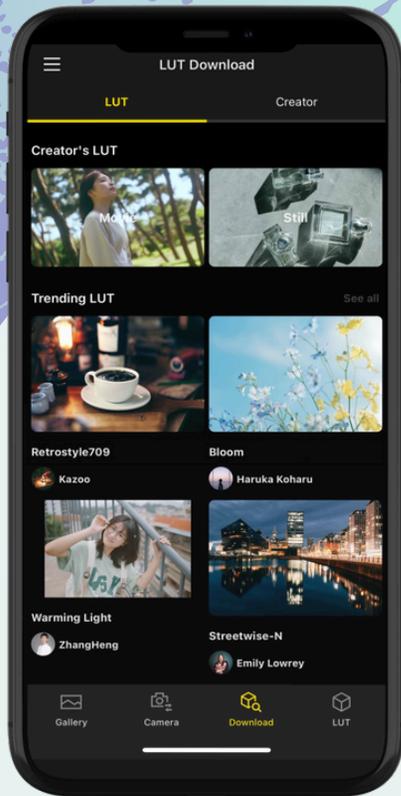


02

Touch the LUT to be downloaded and select [Download].

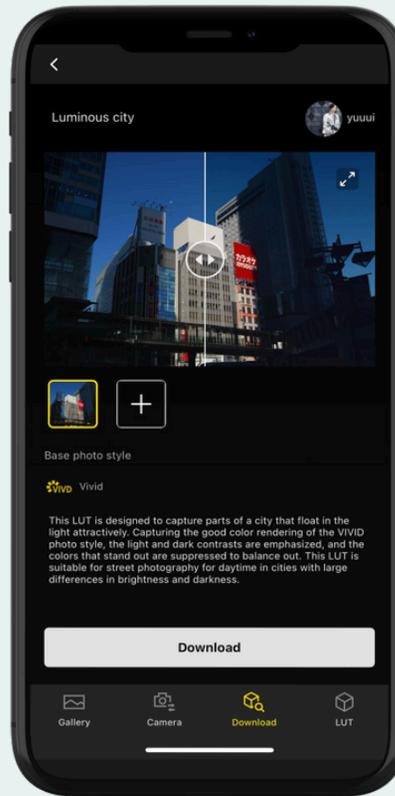


03

Switch to [LUT] screen. Select the LUT to be transferred and select [Transfer to Camera].

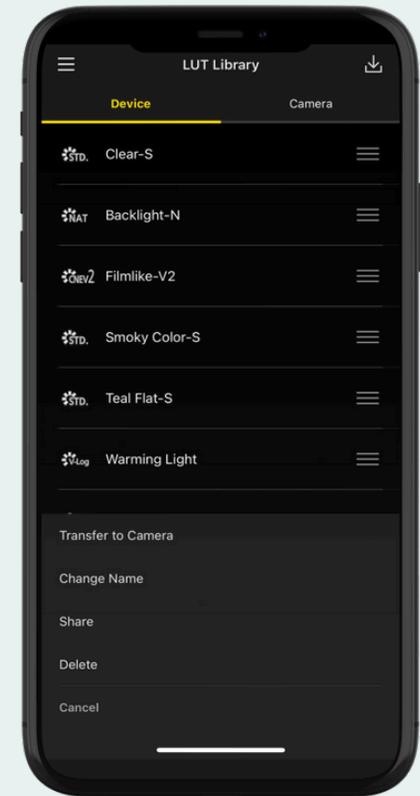


4. Download and Transfer LUT

04 Select where to place the LUT in the camera's LUT library. Select [LUT Transfer].

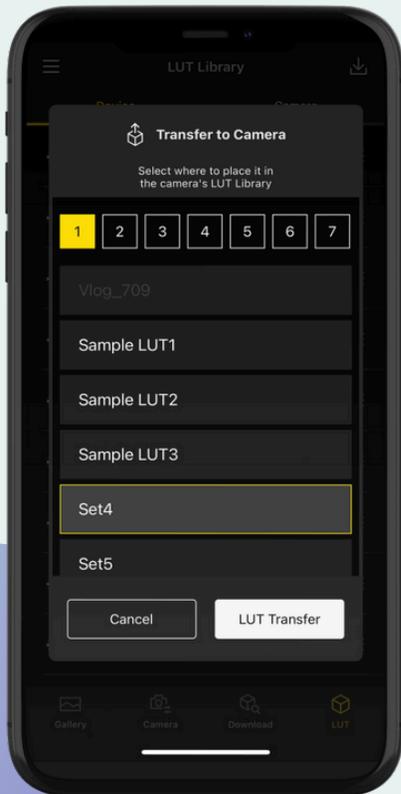

05 After transferring, select [End remote control] on the camera to continue shooting.

06 Press [LUT].

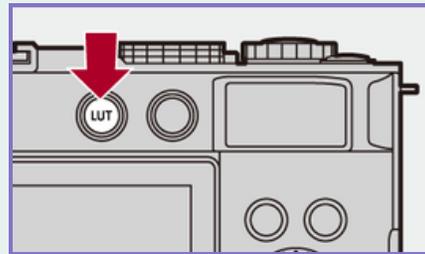

07 Rotate  or  to preview LUT. Press  to start shooting.



5. Apply LUT

01 Switch to [Gallery] screen in LUMIX Lab. Select the image to apply LUT.

